


17", 19" Auto scan Color Monitor

Service
Service
Service



17A580BQ/74C
19A580BQ/74C

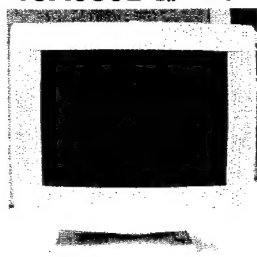

MANUAL 6604
PCEC Model: 17A580 BQ11
19A580 BQ11
Chassis: CM5800
File: 1997: 6604

DDC/Audio/Power saving/Tilt correction

Service Manual

Horizontal frequencies
30 - 95 kHz

TABLE OF CONTENTS

Description	Page	Description	Page
PART-I : Technical data		U-CTRL (B3) Schematic Diagram-----	22
Important Safety Notice -----	2	Power Supply (C) Schematic Diagram-----	23
Hex Data of DDC1/2B-----	3~6	Main Panel (B1, B2, B3, C & D) C.B.A.-----	24
Warning and Notes -----	7	Audio (D) and USB (E) Schematic Diagram-----	25
Electrical Adjustments -----	8,9	Earphone (F), Rotary and Power Switch (G)-----	26
USB Connections-----	10	Rotary Panel (G) & USB Panel C.B.A. (E)-----	27
Quick Reference for OSD Adjustment-----	11~14	Repair Tips and Exploded View -----	28
Mechanical Adjustments and Wiring diagram ----	15	Spare parts list-----	29~33
Block Diagram -----	16	Quick Reference for 17" & 19" Monitors -----	34,35
Video (A), Power Switch (G), Earphone (F) &		CM5800 BRIEF -----	36~39
Terminal Panel (A1) C.B.A.-----	17	PART-II : Service Information 4822 7272 1995	
Terminal Panel (A1) Schematic Diagram -----	18	(for using the Service DDC Kit)	
Video Panel (A2) Schematic Diagram -----	19	PART-III: The control software for monitors	
Main Panel (B1) Schematic Diagram-----	20	through USB (Installation Manual)	
Main Panel (B2) Schematic Diagram-----	21	PART-IV: Directions For Use	

REFER TO BACK COVER FOR IMPORTANT SAFETY GUIDELINES

SAFETY NOTICE

ANY PERSON ATTEMPTING TO SERVICE THIS CHASSIS MUST FAMILIARIZE HIMSELF WITH THE CHASSIS AND BE AWARE OF THE NECESSARY SAFETY PRECAUTIONS TO BE USED WHEN SERVICING ELECTRONIC EQUIPMENT CONTAINING HIGH VOLTAGES.

CAUTION: USE A SEPARATE ISOLATION TRANSFORMER FOR THIS UNIT WHEN SERVICING.



PHILIPS

IMPORTANT SAFETY NOTICE

Proper service and repair is important to the safe, reliable operation of all Philips Consumer Electronics Company** Equipment. The service procedures recommended by Philips and described in this service manual are effective methods of performing service operations. Some of these service operations require the use of tools specially designed for the purpose. The special tools should be used when and as recommended.

It is important to note that this manual contains various **CAUTIONS** and **NOTICES** which should be carefully read in order to minimize the risk of personal injury to service personnel. The possibility exists that improper service methods may damage the equipment. It also is important to understand that these **CAUTIONS** and **NOTICES ARE NOT EXHAUSTIVE**. Philips could not possibly know, evaluate and advise the service trade of all conceivable ways in which service might be done or of the possible hazardous consequences of each way. Consequently, Philips has not undertaken any such broad evaluation. Accordingly, a servicer who uses a service procedure or tool which is not recommended by Philips must first satisfy himself thoroughly that neither his safety nor the safe operation of the equipment will be jeopardized by the service method selected.

**** Hereafter throughout this manual, Philips Consumer Electronics Company will be referred to as Philips.**

WARNING

Critical components having special safety characteristics are identified with a **▲** by the Ref. No. in the parts list and enclosed within a broken line* (where several critical components are grouped in one area) along with the safety symbol **▲** on the schematics or exploded views.

Use of substitute replacement parts which do not have the same specified safety characteristics may create shock, fire, or other hazards.

Under no circumstances should the original design be modified or altered without written permission from Philips. Philips assumes no liability, express or implied, arising out of any unauthorized modification of design. Servicer assumes all liability.

*** Broken Line** 

FOR PRODUCTS CONTAINING LASER :

DANGER- Invisible laser radiation when open. AVOID DIRECT EXPOSURE TO BEAM.

CAUTION- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

CAUTION- The use of optical instruments with this product will increase eye hazard.

TO ENSURE THE CONTINUED RELIABILITY OF THIS PRODUCT, USE ONLY ORIGINAL MANUFACTURER'S REPLACEMENT PARTS, WHICH ARE LISTED WITH THEIR PART NUMBERS IN THE PARTS LIST SECTION OF THIS SERVICE MANUAL.

Hex Data of DDC1/2B (17A580BQ/74C)

17A CM5800

3

```
*****
ddc_v17.chk
*****

Vendor/Product Identification
  ID Manufacturer Name      : PHL
  ID Product Code          : 1107
  ID Serial Number         : 12345678
  Week of Manufacture      : 38
  Year of Manufacture      : 1997

EDID Version, Revision
  Version                  : 1
  Revision                 : 1

Basic Display Parameters/Features
  Video Input Definition   : Analog Video Input
                           : 0.700V/0.300V (1.00Vpp)
                           : without Blank-to-Black Setup
                           : Separate Sync
                           : Composite Sync
                           : Sync on Green
                           : no Serration required

  Maximum H Image Size    : 30 cm
  Maximum V Image Size    : 23 cm

  Display Transfer Characteristic: 2.850
                           (gamma)

  Feature Support (DPMS)  : Standby
                           : Suspend
                           : Active Off
                           : RGB color display

Color Characteristics
  Red X coordinate        : 0.625
  Red Y coordinate        : 0.340
  Green X coordinate      : 0.285
  Green Y coordinate      : 0.605
  Blue X coordinate       : 0.150
  Blue Y coordinate       : 0.065
  White X coordinate      : 0.283
  White Y coordinate      : 0.298

Established Timings
  Established Timings I   : 640 x 480 @60Hz (VGA,IBM)
                           : 640 x 480 @75Hz (VESA)

  Established timings II  : 800 x 600 @75Hz (VESA)
                           : 1024 x 768 @75Hz (VESA)
                           : 1280 x 1024 @75Hz (VESA)

  Manufacturer's timings : 1152 x 870 @75Hz
                           (MacII,Apple)

Standard Timing Identification #1
  Horizontal active pixels : 640
  Aspect Ratio             : 4:3
  Refresh Rate             : 70

Standard Timing Identification #2
  Horizontal active pixels : 800
  Aspect Ratio             : 4:3
  Refresh Rate             : 85

Standard Timing Identification #3
  Horizontal active pixels : 1024
  Aspect Ratio             : 4:3
  Refresh Rate             : 85

Standard Timing Identification #4
  Horizontal active pixels : 1280
```

```
Aspect Ratio      : 5:4
Refresh Rate      : 85

Standard Timing Identification #5
  Horizontal active pixels : 1600
  Aspect Ratio            : 4:3
  Refresh Rate            : 75

Detailed Timing #1
  Pixel Clock (MHz)       : 108.000
  H Active (pixels)       : 1152
  H Blanking (pixels)     : 352
  V Active (lines)        : 900
  V Blanking (lines)      : 43
  H Sync Offset (F Porch) (pixels): 16
  H Sync Pulse Width (pixels) : 64
  V Sync Offset (F Porch) (lines): 2
  V Sync Pulse Width (lines) : 8
  H Image Size (mm)       : 300
  V Image Size (mm)       : 225
  H Border (pixels)       : 0
  V Border (lines)        : 0
  Flags                   : Non-interlaced
                           Normal Display, No stereo
                           Digital Separate Sync
                           Positive V Sync
                           Positive H Sync

Monitor Descriptor #2
  Serial Number           : CM58C12345678

Monitor Descriptor #3
  Monitor Name            : TYPHOON17A

Monitor Descriptor #4
  Min. Vt rate Hz         : 50
  Max. Vt rate Hz         : 160
  Min. Horiz. rate kHz    : 30
  Min. Horiz. rate kHz    : 95
  Max. Supported Pixel not specified

Extension Flag           : 0

Check sum                : 5e(hex)
```

Hex Data of DDC1/2B (17A580BQ/74C)

0: 0	1: ff	2: ff	3: ff	4: ff	5: ff	6: ff	7: 0
8: 41	9: c	10: 7	11: 11	12: 4e	13: 61	14: bc	15: 0
16: 26	17: 7	18: 1	19: 1	20: e	21: 1e	22: 17	23: b9
24: e8	25: 0	26: b9	27: a0	28: 57	29: 49	30: 9b	31: 26
32: 10	33: 48	34: 4c	35: 24	36: 43	37: 80	38: 31	39: 4a
40: 45	41: 59	42: 61	43: 59	44: 81	45: 99	46: a9	47: 4f
48: 1	49: 1	50: 1	51: 1	52: 1	53: 1	54: 30	55: 2a
56: 80	57: 60	58: 41	59: 84	60: 2b	61: 30	62: 10	63: 40
64: 28	65: 0	66: 2c	67: e1	68: 10	69: 0	70: 0	71: 1e
72: 0	73: 0	74: 0	75: ff	76: 0	77: 43	78: 4d	79: 35
80: 38	81: 43	82: 31	83: 32	84: 33	85: 34	86: 35	87: 36
88: 37	89: 38	90: 0	91: 0	92: 0	93: fc	94: 0	95: 54
96: 59	97: 50	98: 48	99: 4f	100: 4f	101: 4e	102: 20	103: 31
104: 37	105: 41	106: a	107: 20	108: 0	109: 0	110: 0	111: fd
112: 0	113: 32	114: a0	115: 1e	116: 5f	117: ff	118: 0	119: a
120: 20	121: 20	122: 20	123: 20	124: 20	125: 20	126: 0	127: 5e

Hex Data of DDC1/2B (19A580BQ/74C)

19A CM5800

5

Display data channel :DDC1/2B

Vendor/Product Identification

ID Manufacturer Name : PHL
ID Product Code : 1109
ID Serial Number : 12345678
Week of Manufacture : 36
Year of Manufacture : 1997

EDID Version, Revision

Version : 1
Revision : 1

Basic Display Parameters/Features

Video Input Definition : Analog Video Input
0.700V/0.300V (1.00Vpp)
without Blank-to-Black Setup
Separate Sync
Composite Sync
without Sync on Green
no Serration required

Maximum H Image Size : 34 cm
Maximum V Image Size : 25 cm

Display Transfer Characteristic (gamma) : 2.760

Feature Support (DPMS) : Standby
Suspend
Active Off
RGB color display

Color Characteristics

Red X coordinate : 0.625
Red Y coordinate : 0.340
Green X coordinate : 0.285
Green Y coordinate : 0.605
Blue X coordinate : 0.150
Blue Y coordinate : 0.065
White X coordinate : 0.283
White Y coordinate : 0.298

Established Timings

Established Timings I : 640 x 480 @60Hz (VGA,IBM)
640 x 480 @75Hz (VESA)

Established Timings II : 800 x 600 @75Hz (VESA)
1024 x 768 @75Hz (VESA)
1280 x 1024 @75Hz (VESA)

Manufacturer's Timings : 1152 x 870 @75Hz
(MacII, Apple)

Standard Timing Identification #1

Horizontal active pixels : 800
Aspect Ratio : 4:3
Refresh Rate : 85

Standard Timing Identification #2

Horizontal active pixels : 1024
Aspect Ratio : 4:3
Refresh Rate : 85

Standard Timing Identification #3

Horizontal active pixels : 1280
Aspect Ratio : 5:4
Refresh Rate : 85

Standard Timing Identification #4

Horizontal active pixels : 1600
Aspect Ratio : 4:3
Refresh Rate : 75

Detailed Timing #1

Pixel Clock (MHz) : 202.500
H Active (pixels) : 1600
H Blanking (pixels) : 560
V Active (lines) : 1200
V Blanking (lines) : 50
H Sync Offset (F Porch) (pixels) : 304
H Sync Pulse Width (pixels) : 192
V Sync Offset (F Porch) (lines) : 46
V Sync Pulse Width (lines) : 3
H Image Size (mm) : 340
V Image Size (mm) : 255
H Border (pixels) : 0
V Border (lines) : 0
Flags : Non-interlaced
Normal Display, No stereo
Digital Separate Sync
Positive V Sync
Positive H Sync

Monitor Descriptor #2

Serial Number : 5800C12345678

Monitor Descriptor #3

Monitor Name : TYPHOON19A

Monitor Descriptor #4

Min. Vt rate Hz : 50
Max. Vt rate Hz : 160
Min. Horiz. rate kHz : 30
Min. Horiz. rate kHz : 95
Max. Supported Pixel not specified

Extension Flag : 0

Check sum : 5e(hex)

Hex Data of DDC1/2B (19A580BQ/74C)

For Hitachi CRT

0: 0	1: ff	2: ff	3: ff	4: ff	5: ff	6: ff	7: 0
8: 41	9: c	10: 9	11: 11	12: 4e	13: 61	14: bc	15: 0
16: 24	17: 7	18: 1	19: 1	20: c	21: 22	22: 19	23: b0
24: e8	25: 0	26: b9	27: a0	28: 57	29: 49	30: 9b	31: 26
32: 10	33: 48	34: 4c	35: 24	36: 43	37: 80	38: 45	39: 59
40: 61	41: 59	42: 81	43: 99	44: a9	45: 4f	46: 1	47: 1
48: 1	49: 1	50: 1	51: 1	52: 1	53: 1	54: 1a	55: 4f
56: 40	57: 30	58: 62	59: b0	60: 32	61: 40	62: 30	63: c0
64: e3	65: 48	66: 54	67: ff	68: 10	69: 0	70: 0	71: 1e
72: 0	73: 0	74: 0	75: ff	76: 0	77: 35	78: 38	79: 30
80: 30	81: 43	82: 31	83: 32	84: 33	85: 34	86: 35	87: 36
88: 37	89: 38	90: 0	91: 0	92: 0	93: fc	94: 0	95: 54
96: 59	97: 50	98: 48	99: 4f	100: 4f	101: 4e	102: 20	103: 31
104: 39	105: 41	106: a	107: 20	108: 0	109: 0	110: 0	111: fd
112: 0	113: 32	114: a0	115: 1e	116: 5f	117: ff	118: 0	119: a
120: 20	121: 20	122: 20	123: 20	124: 20	125: 20	126: 0	127: 8e

a: Service DDC Kit

DDC Module (DDC cable), Part number = 4822 320 12004

DDCV2N.EXE software (3.5" disk), Part number = 4822 711 00024

b: Please refer to Service Information 4822 727 21995 for using the Service DDC Kit.

Warnings

1. Safety regulations require that the unit should be returned in its original condition and that components identical to the original components are used. The safety components are indicated by the symbol **▲**.
2. In order to prevent damage to ICs and transistors, all high-voltage flash-overs must be avoided. In order to prevent damage to the picture tube, the method shown in Fig. 1 should be used to discharge the picture tube. Use a high-voltage probe and a multimeter (position DC-V). Discharge until the meter reading is **0 V** (after approximately 30 seconds).
3. **ESD ▲**
All ICs and many other semiconductors are sensitive to electrostatic discharges (ESD). Careless handling during repair can drastically shorten their life. Make sure that during repair you are connected by a pulse band with resistance to the same potential as the ground of the unit. Keep components and tools also at this same potential.
4. When repairing a unit, always connect it to the AC Power voltage via an isolating transformer.
5. Be careful when taking measurements in the high-voltage section and on the picture tube panel.
6. It is recommended that safety goggles be worn when replacing the picture tube.
7. When making adjustments, use plastic rather than metal tools. This will prevent any short-circuit or the danger of a circuit becoming unstable.
8. Never replace modules or other components while the unit is switched on.
9. Together with the deflection unit, the picture tube is used as an integrated unit. Adjustment of this unit during repair is not recommended.
10. After repair, the wiring should be fastened in place with the cable clamps.

Notes

1. The direct voltages and waveforms are average voltages. They have been measured using the Service test software and under the following conditions :
 - Mode : 1024 * 768 (56.5kHz / 70Hz)
 - Signal pattern : grey scale
 - Adjust brightness and contrast control for the mechanical mid-position (click position)
2. The picture tube panel has printed spark gaps. Each spark gap is connected between an electrode of the picture tube and the Aquadag coating.
3. The semiconductors indicated in the circuit diagram(s) and in the parts lists are completely interchangeable per position with the semiconductors in the unit, irrespective of the type indication on these semiconductors.

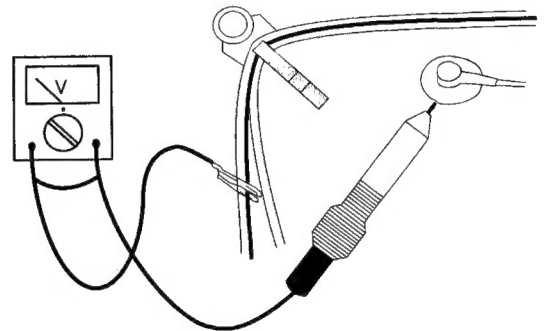


Fig.1

Electrical Adjustments

0. General

When carry-out the electrical settings in many cases a video signal must be applied to the monitor. A computer with :

- ATI GPT-1600 (4822 397 10065), Mach 64 (up to 107kHz)

are used as the video signal source. The signal patterns are selected from the "service test software" package, see user guide 4822 727 21046 (GPT-1600).

0.1 This monitor has 12 factory-preset modes as below.

640 x 400 31.5 kHz/70 Hz	1152 x 870 68.7 kHz/75 Hz
640 x 480 31.5 kHz/60 Hz	1152 x 900 71.8kHz/76Hz
640 x 480 37.5 kHz/75 Hz	1280 x 1024 80.0 kHz/75 Hz
800 x 600 46.9 KHz/75Hz	1280 x 1024 91.1 kHz/85Hz
800 x 600 53.7 kHz/85Hz	1600 x 1200 93.7 kHz/75 Hz
1024 x 768 60.0 kHz/75 Hz	
1024 x 768 68.7 kHz/85 Hz	

0.2 With normal VGA card:

If not using the ATI card during repair or alignment, The service engineer also can use this service test software adapting with normal standard VGA adaptor and using standard VGA mode 640 x 480, 31.5 kHz/60 Hz (only) as signal source.

0.3 AC/DC Measurement:

The measurements for AC waveform and DC figure is based on 640 x 480 31.5 kHz/60 Hz resolution mode with test pattern "gray scale".
Power input: 110V AC

1. B+ supply voltage (3194) 185Vdc

- Apply a video signal in the 1024 x 768 with 69 kHz/85Hz mode.
- Select the "cross-hatch" pattern.
- Set the brightness control and the contrast control to the minimum position.
- Pre-set trimming potentiometer 3194(+) and 3644(EHT) in mid-position.
- Set Vg2 (screen) to fully Counter-clockwise (zero beamcurrent).
- Connect a dc voltmeter between the joint of capacitor 2181 and ground (common ground).
- Set the B+ trimming potentiometer 3194 so that the reading on the dc voltmeter is 185 V +/- 0.5 Vdc.

2. High-voltage EHT (3644)

- Apply a video signal in the 1024 * 768 with 69 kHz/85Hz mode.
- Select the "cross-hatch" pattern.
- Set the brightness control and the contrast control to the minimum position.
- Turn off the power.
- Connect a "high-voltage voltmeter" between the high-voltage connection of the picture tube and earth.
- Turn on the power.
- Set the EHT trimming potentiometer 3644 so that the "high-voltage voltmeter" reads 26.0 kV +/- 0.2 kV (for 19").
25.0 kV +/- 0.2 kV (for 17").
- Turn off the power.
- Remove the "high-voltage voltmeter" from the picture tube.
- Turn on the power again.
- Remove the "high-voltage voltmeter" from the picture tube.
- Turn on the power again.

3. Monitor the following auxiliary voltages.

- + 12.0V SOURCE ACROSS C2192 + 12.0V +/- 0.5VDC.
- + 15.0V SOURCE ACROSS C2187 + 15.0V +/- 1.0VDC.
- 15.0V SOURCE ACROSS C2189 - 15.0 V +/- 1.0VDC.
- + 6.3 V SOURCE ACROSS D6195 "-" 6.3V +/- 0.5VDC.
- +125.0V SOURCE ACROSS C2182 +125.0V +/- 2.0VDC.
- +185.0V SOURCE ACROSS C2181 + 185.0V +/- 1.5VDC.
- + 81.0V SOURCE ACROSS C2185 + 81.0 V +/- 2.0VDC.

4. General conditions for alignment

- 4.1 During all alignments, supply a distortion free AC mains voltage to set via an isolating transformer with low internal impedance.
- 4.2 Align in pre-warmed condition, at least 30 minutes warm-up with nominal picture brightness.
- 4.3 Purity, geometry and subsequent alignments should be carried out in magnetic cage with correct magnetic field.

Northern hemisphere : H=0, V=430 mG, Z=0

Southern hemisphere : H=0, V=-520 mG, Z=0

Equatorial Support : H=0, V=0 mG, Z=0

- 4.4 All voltages are to be measured or applied with respect to ground.

Note: Do not use heatsink as ground.

- 4.5 Adjust function controls " " to center position except for contrast control which should be set to MAX.
- 4.6 Apply a video signal in the 1280 x 1024 with 64kHz/60Hz mode, select cross hatch pattern, set the Brightness for visible raster, adjust H-size for 340mm (19" monitor)/300mm (17" monitor) "raster width", adjust R3551 for Horizontal raster center.

5. To access factory mode:


- Turn off monitor (don't turn off PC)
 - Press " " and " " simultaneously on the front control panel, untill the OSD menu with characters " factory mode (below OSD menu)" come on the screen of monitor.
 - If OSD menu disappears on the screen of monitor, press " " again (anytime), then the OSD menu comes on the screen again.
 - using " " : to select OSD menu.
: to increase or decrease the setting.
- (Please also refer to page 4,5,6 and 7 for OSD adjustment)
- Using " " to confirm the selection.


5.1. To leave factory mode


- * After alignment of factory mode, turn off monitor (if you do not turn off monitor, the OSD menu is always at the factory mode), then turn on monitor again (at this moment, the OSD menu goes back to user mode).


6. OSD CONTROLS (During alignment)

During alignment, please use the "OSD controls" to keep OSD menu, or to shift OSD menu as below.



-  **TIMER** Set OSD display time, select "OFF", then the OSD menu will stay on the screen (won't disappear).

-  **VERTICAL POSITION** Move the OSD windows up or down.

-  **HORIZONTAL POSITION** Move the OSD window left or right.

USB Connections

If you have Windows '95...

follow these steps to complete setting up your monitor.

1. Start Windows '95 and install CD ROM supplied with this monitor.
2. Click on the "START" icon. Next, click on the "SETTINGS" icon. Then click on "CONTROL PANEL."
3. Double-click on "DISPLAY" icon. Next, click on "SETTINGS" tab. Then click on "ADVANCED PROPERTIES" dialog box.
4. Click on "MONITOR" tab.
- 5.(a) If you have an old computer, click on "CHANGE" dialog box. Next, "SELECT DEVICE" screen appears. Now click on "HAVE DISK" dialog box. and select CD-ROM drive
Or
- 5.(b) If you have a new computer, "SELECT DEVICE" screen automatically appears. Click on "HAVE DISK" dialog box and select CD-ROM drive.
6. Select "OK" in the "INSTALL FROM DISK" dialog box. If model name of the Philips monitor is correct, click "OK" tab in the "SELECT DEVICE" dialog box.
7. Click "CLOSE" tab in the "ADVANCED PROPERTIES" dialog box. If your Windows'95 version is different or you need more detailed installation information, please refer to the windows '95 user's manual. **For additional information on the monitor, please refer to the owner's manual.**




USB CONNECTIONS

USB (Universal Serial Bus) is an innovation in connecting your IBM- compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. While the software is still being developed, Philips has included the hardware so you will be ready to take advantage of this next generation in computer development.

For an IBM-compatible Computer:

1. Turn off the computer.
 2. Connect the (optional) USB Hub and cable to the computer and to the monitor. (Computer must have USB port.)
 3. Connect the power cable.
 4. Turn on the monitor. Then turn on the computer.
 5. With the installation of the correct software, you will be able to connect specially-made peripherals to the monitor.
- Note : USB Hub and cables sold separately. USB Bay exists in back of monitor.

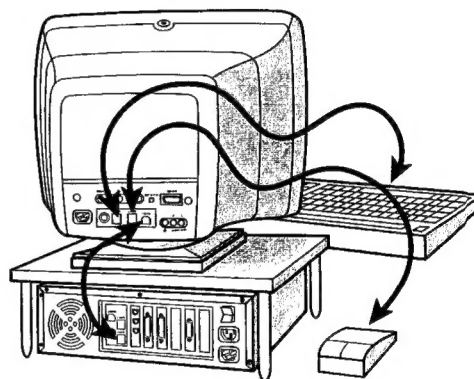

Use the information file (philips.inf) for Windows'95 (Philips Monitors-Driver Disk)

Philips' monitors build in VESA DDC1/2B feature to support Plug & Play requirement for Windows'95. You can install this information file (philips.inf) in order to select your Philips monitor from "Monitor" dialog box in Windows 95 to activate Plug & Play application. The installation procedure based on Windows '95 OEM Release 2 is specified as follows,

1. Start Windows'95
2. Click the 'Start' button, point to 'Settings', and then click 'Control Panel'
3. Double-click the 'Display' icon, select the 'Settings' tab, then select "Advanced Properties" tab.
4. Select "Ok" in the "Install From Disk" dialog box.
5. Now, you can see the Philips monitor is appeared.
6. If the model name of Philips monitor is correct, click "Ok" tab in "Select Device" dialog box.
7. Then, click "Close" tab in "Advanced Properties" dialog box.
8. Now, you can select "Refresh Rate" to change monitor resolution

If your Windows'95 version is different or you need more detail installation information, please refer to Windows 95 user's manual.

7. Alignment of Vg2 cut-off point, white tracking (OSD control)

Equipment : 1. Video Test Generator-801GC (Quantum Data)
2. Color-analyzer (Minolta CA-100)

VG2 [(screen), at the bottom of the L.O.T.].

- * Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode, select the "full white pattern".
- * Use color-analyzer (Minolta CA-100) to adjust cutoff and white uniformity.

OSD R/G/B cut-off and R/G/B gain can be accessed, with initial data:

R cutoff = 50%, R gain = 70%

G cutoff = 50%, G gain = 70%

B cutoff = 50%, B gain = 70%

Step 1: To select the character "FACTORY MODE" as shown in Fig. 2.1, press " " to access the OSD menu for R/G/B gain & cutoff as shown in Fig. 2.2.

Step 2: Use " " to increase or decrease the value as shown in Fig. 2.3.

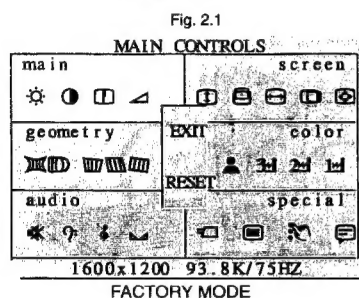


Fig. 2.1

	GAIN	CUTOFF
9300K	R G B	R G B
6500K	R G B	R G B
5500K	R G B	R G B
FULL-SIZE	HOR	VER
H-LIN		

Fig. 2.2

	GAIN	CUTOFF
9300K	R G B	R G B
6500K	R G B	R G B
5500K	R G B	R G B
FULL-SIZE	HOR	VER
H-LIN		63%

Fig. 2.3

7.1 Connect the video input, set brightness control at 50% and contrast at minimum position, Vg2 at Minimum (counter clockwise, and ABL (3647, potentiometer) at center position. Slowly increase Vg2 voltage until light output is at 0.17Ft-L +/- 0.05Ft-L (Y=0.17Ft-L, on the screen of CA-100).

7.2 (The screen of monitor is dark now)

- : Press " " to show the OSD menu as shown in Fig. 2.1.
- : Select the character "FACTORY MODE" to access the R/G/B adjustment as shown in Fig. 2.2 and Fig. 2.3.
- : Adjust the cutoff of R/G/B to get 9300K (x=0.281 +/- 0.015, y=0.311 +/- 0.015), and brightness output at 0.17 +/- 0.05 Ft-L (Y=0.17Ft-L).

7.3 : Press " " to set contrast at maximum (100%).

- : Adjust gain of R/G/B to get 9300K (x=0.281 +/- 0.015, y=0.311 +/- 0.015, don't care about the Y value)

7.4 Apply a small white square 60 x 60 mm pattern, or 8% fill of full screen, brightness set to center (50%), and contrast at maximum (100%), adjust gain control (OSD) to reach 34 +/- 2 Ft-L.

7.5 : Select the 6500K colour temperature as shown in Fig. 2.2.

- : Adjust the R/G/B cutoff and R/G/B gain as shown in procedure 7.2~7.4 to get R/G/B cutoff x= 0.313 +/- 0.015 y= 0.329 +/- 0.015 Y= 0.17 +/- 0.05 Ft-L
- R/G/B gain x= 0.313 +/- 0.015 y= 0.329 +/- 0.015 Y= 30 +/- 2 Ft-L

7.6 : Select the 5500K colour temperature as shown in Fig. 2.2.
: Adjust the R/G/B cutoff & R/G/B gain as procedure 7.2~7.4

to get R/G/B cutoff x= 0.332 +/- 0.015 y= 0.347 +/- 0.015 Y= 0.17 +/- 0.05 Ft-L

R/G/B gain x= 0.332 +/- 0.015 y= 0.347 +/- 0.015 Y= 25 +/- 2 Ft-L

7.7 Apply full white pattern at 9300K, adjust ABL R3647 to reach 31 +/- 2 Ft-L (19") (contrast at maximum, brightness at center). 30 +/- 2 Ft-L (for 17" monitor).

8. Picture geometry setting (factory pre-set modes)

- Apply a video signal with cross-hatch pattern.
- Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode.
- Set brightness and contrast controls to their center positions (OSD control).

8.1 Horizontal geometry (OSD control)

- Adjust the H-width to 340 mm (for 19" monitor). 300 mm (for 17" monitor).
- Adjust the H-phase to center position.

8.2 Vertical geometry (OSD control)

- Adjust vertical size to 255 mm (for 19" monitor). 225 mm (for 17" monitor).
- Adjust V-phase to center position.

8.3 Trapezoid distortion (OSD control)

- Adjust the trapezoid to get optimal vertical lines.

8.4 Pincushion (OSD control)

- Adjust the pincushion to get optimal vertical line.

8.5 Parallelogram (OSD control)

- Adjust parallelogram so that vertical lines are vertical or symmetrically about the center vertical axis.

8.6 Unbalance-pin (OSD control)

- Adjust the unbalance-pin so that that vertical border lines are aligned symmetrically.

8.7 Rotation (OSD control)

- Adjust picture so that vertical tilt is less than +/- 0.5mm.

8.8 Store the preset results by selecting the "exit" (OSD control).

8.9 Repeat the procedure 8.1 to 8.8 until all the preset timings have been adjusted completely

9. Focus adjustment

- : Apply a video signal in the 1024 x 768 with 69 kHz/85 Hz mode.
- : Select "ME" pattern.
- : Set the brightness at center (50%) and the contrast at maximum (100%).
- : Adjust focus potentiometers (top of L.O.T.) Focus 1 for horizontal focus and Focus 2 for vertical focus so that the picture at 2/3 of the diagonal lines (from center to four corners) of the displayed screen is as sharp as possible.

10. Loading DDC code

The DDC HEX data should be written into the DDC IC (7331) by EEPROM writer or equivalent method.


a: Service DDC Kit



DDC Module (DDC cable), Part number = 4822 320 12004

DDCV2N.EXE software (3.5" disk), Part number = 4822 711 00024


b: Please refer to Service information 4822 727 21995 for using the Service DDC Kit.

Quick Reference for OSD Adjustment


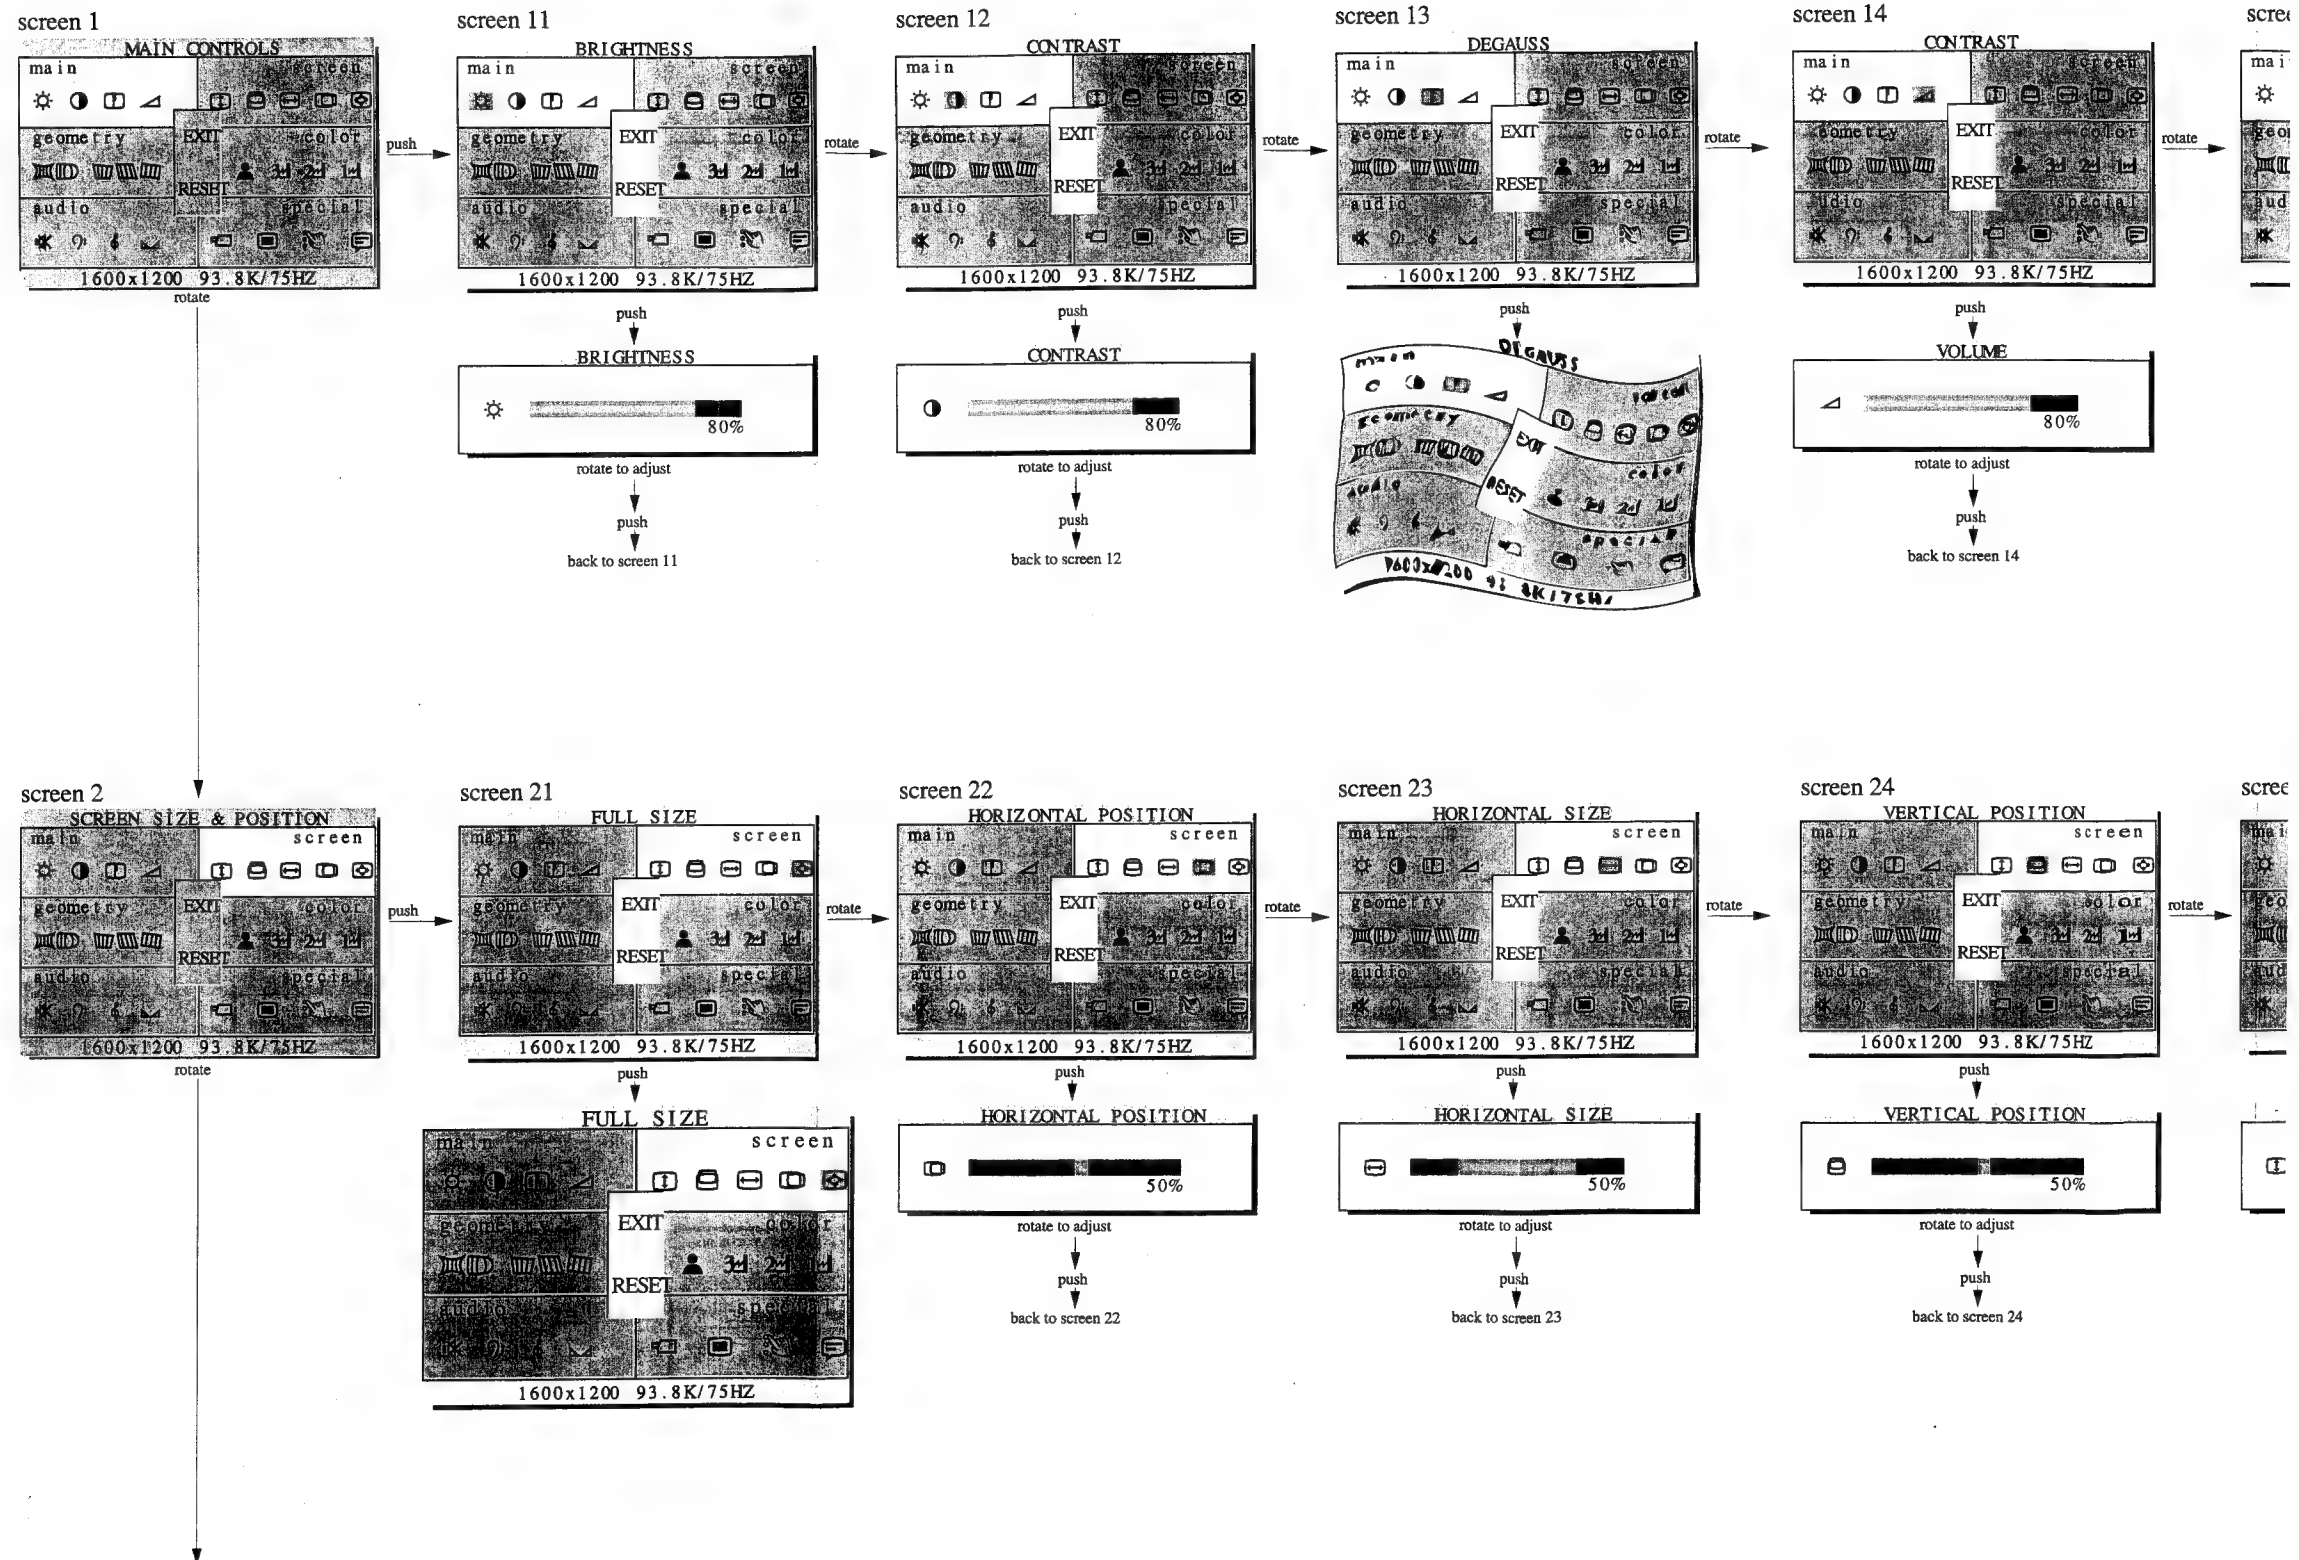


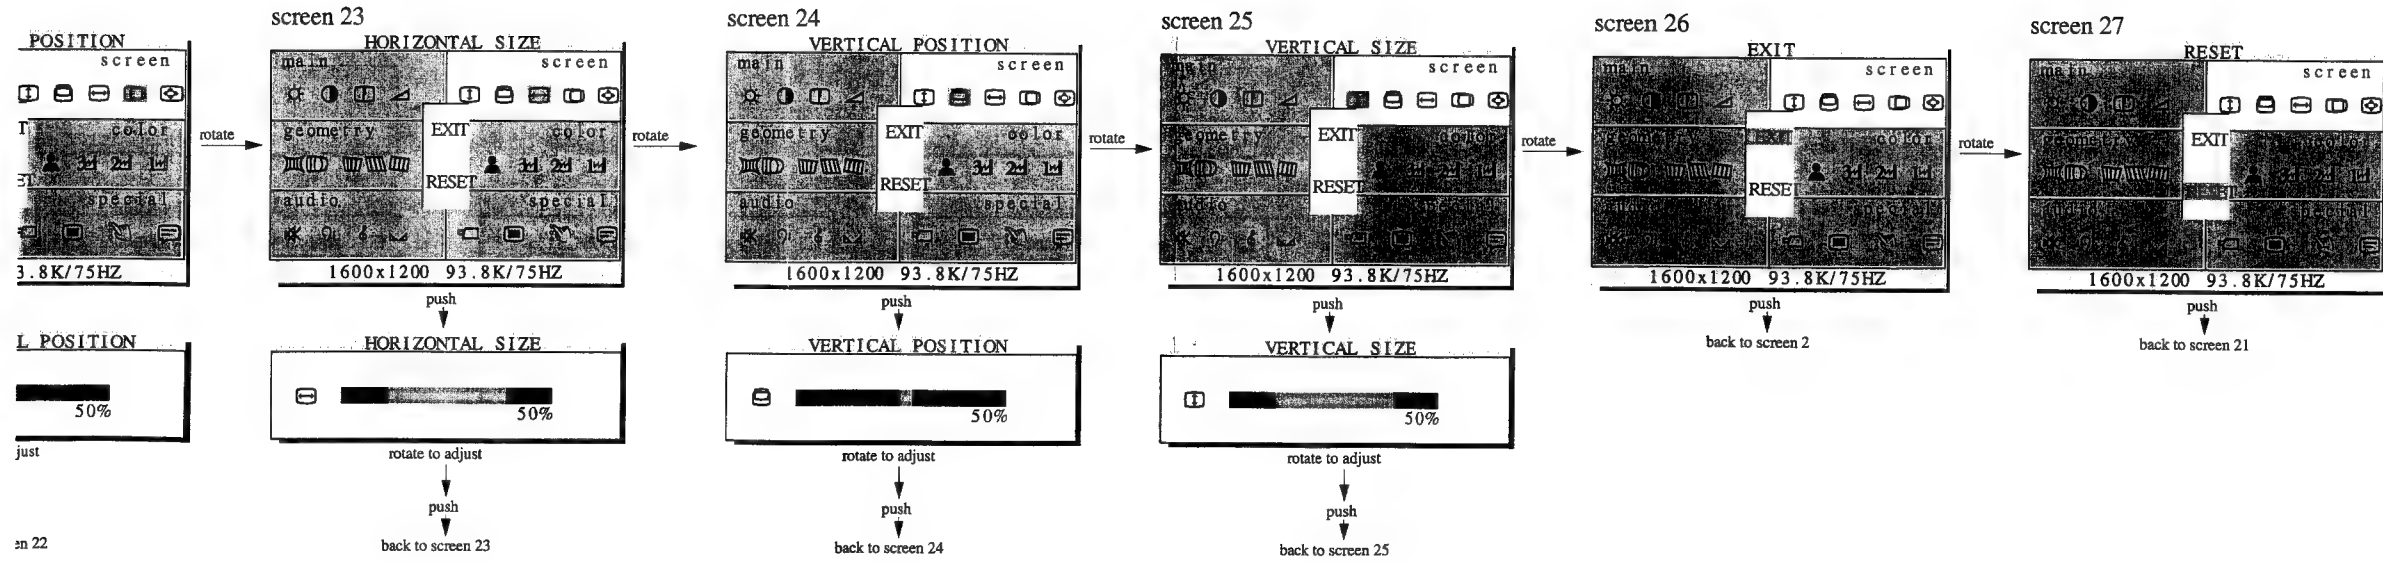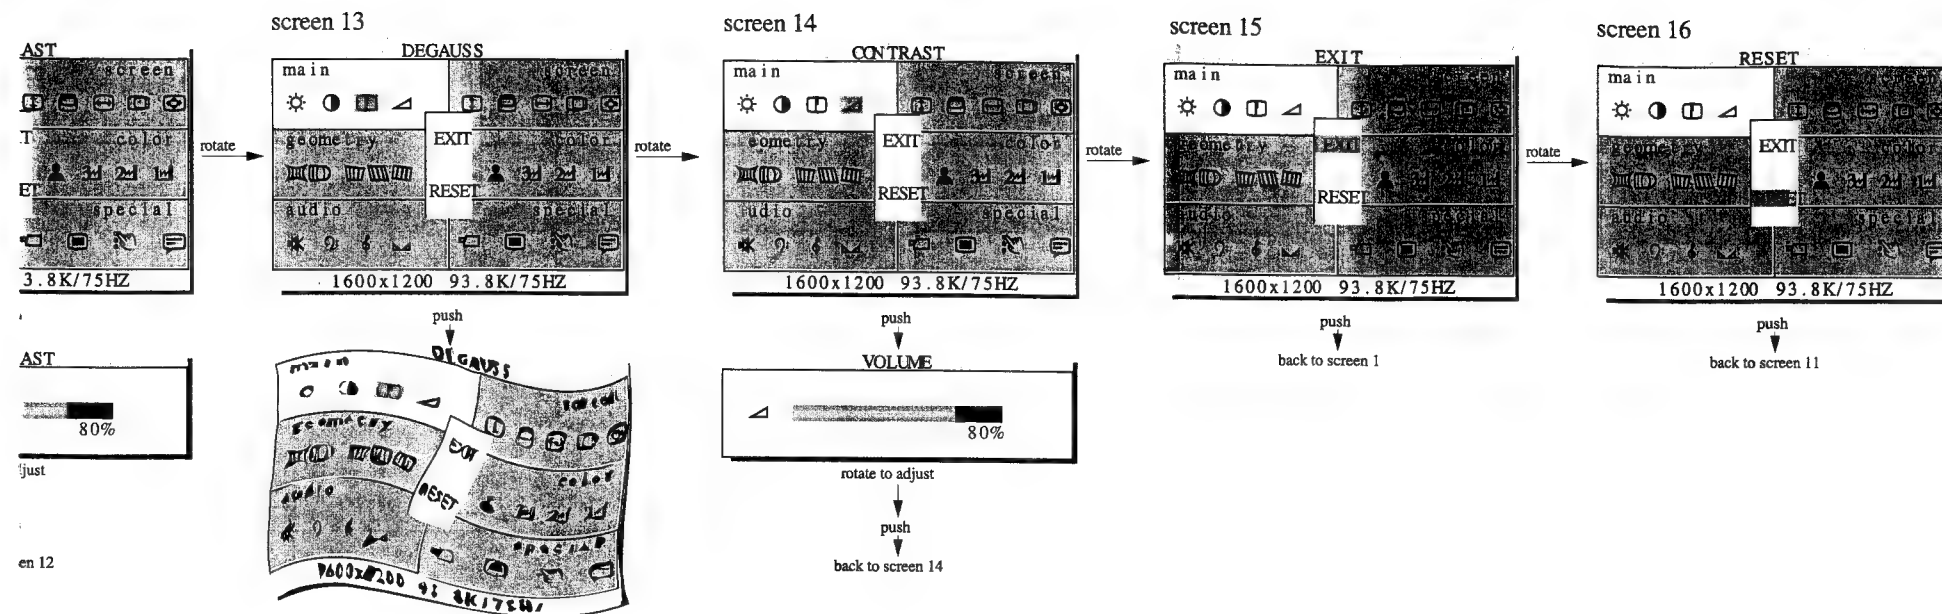

Quick Reference for OSD Adjustment (Continued)


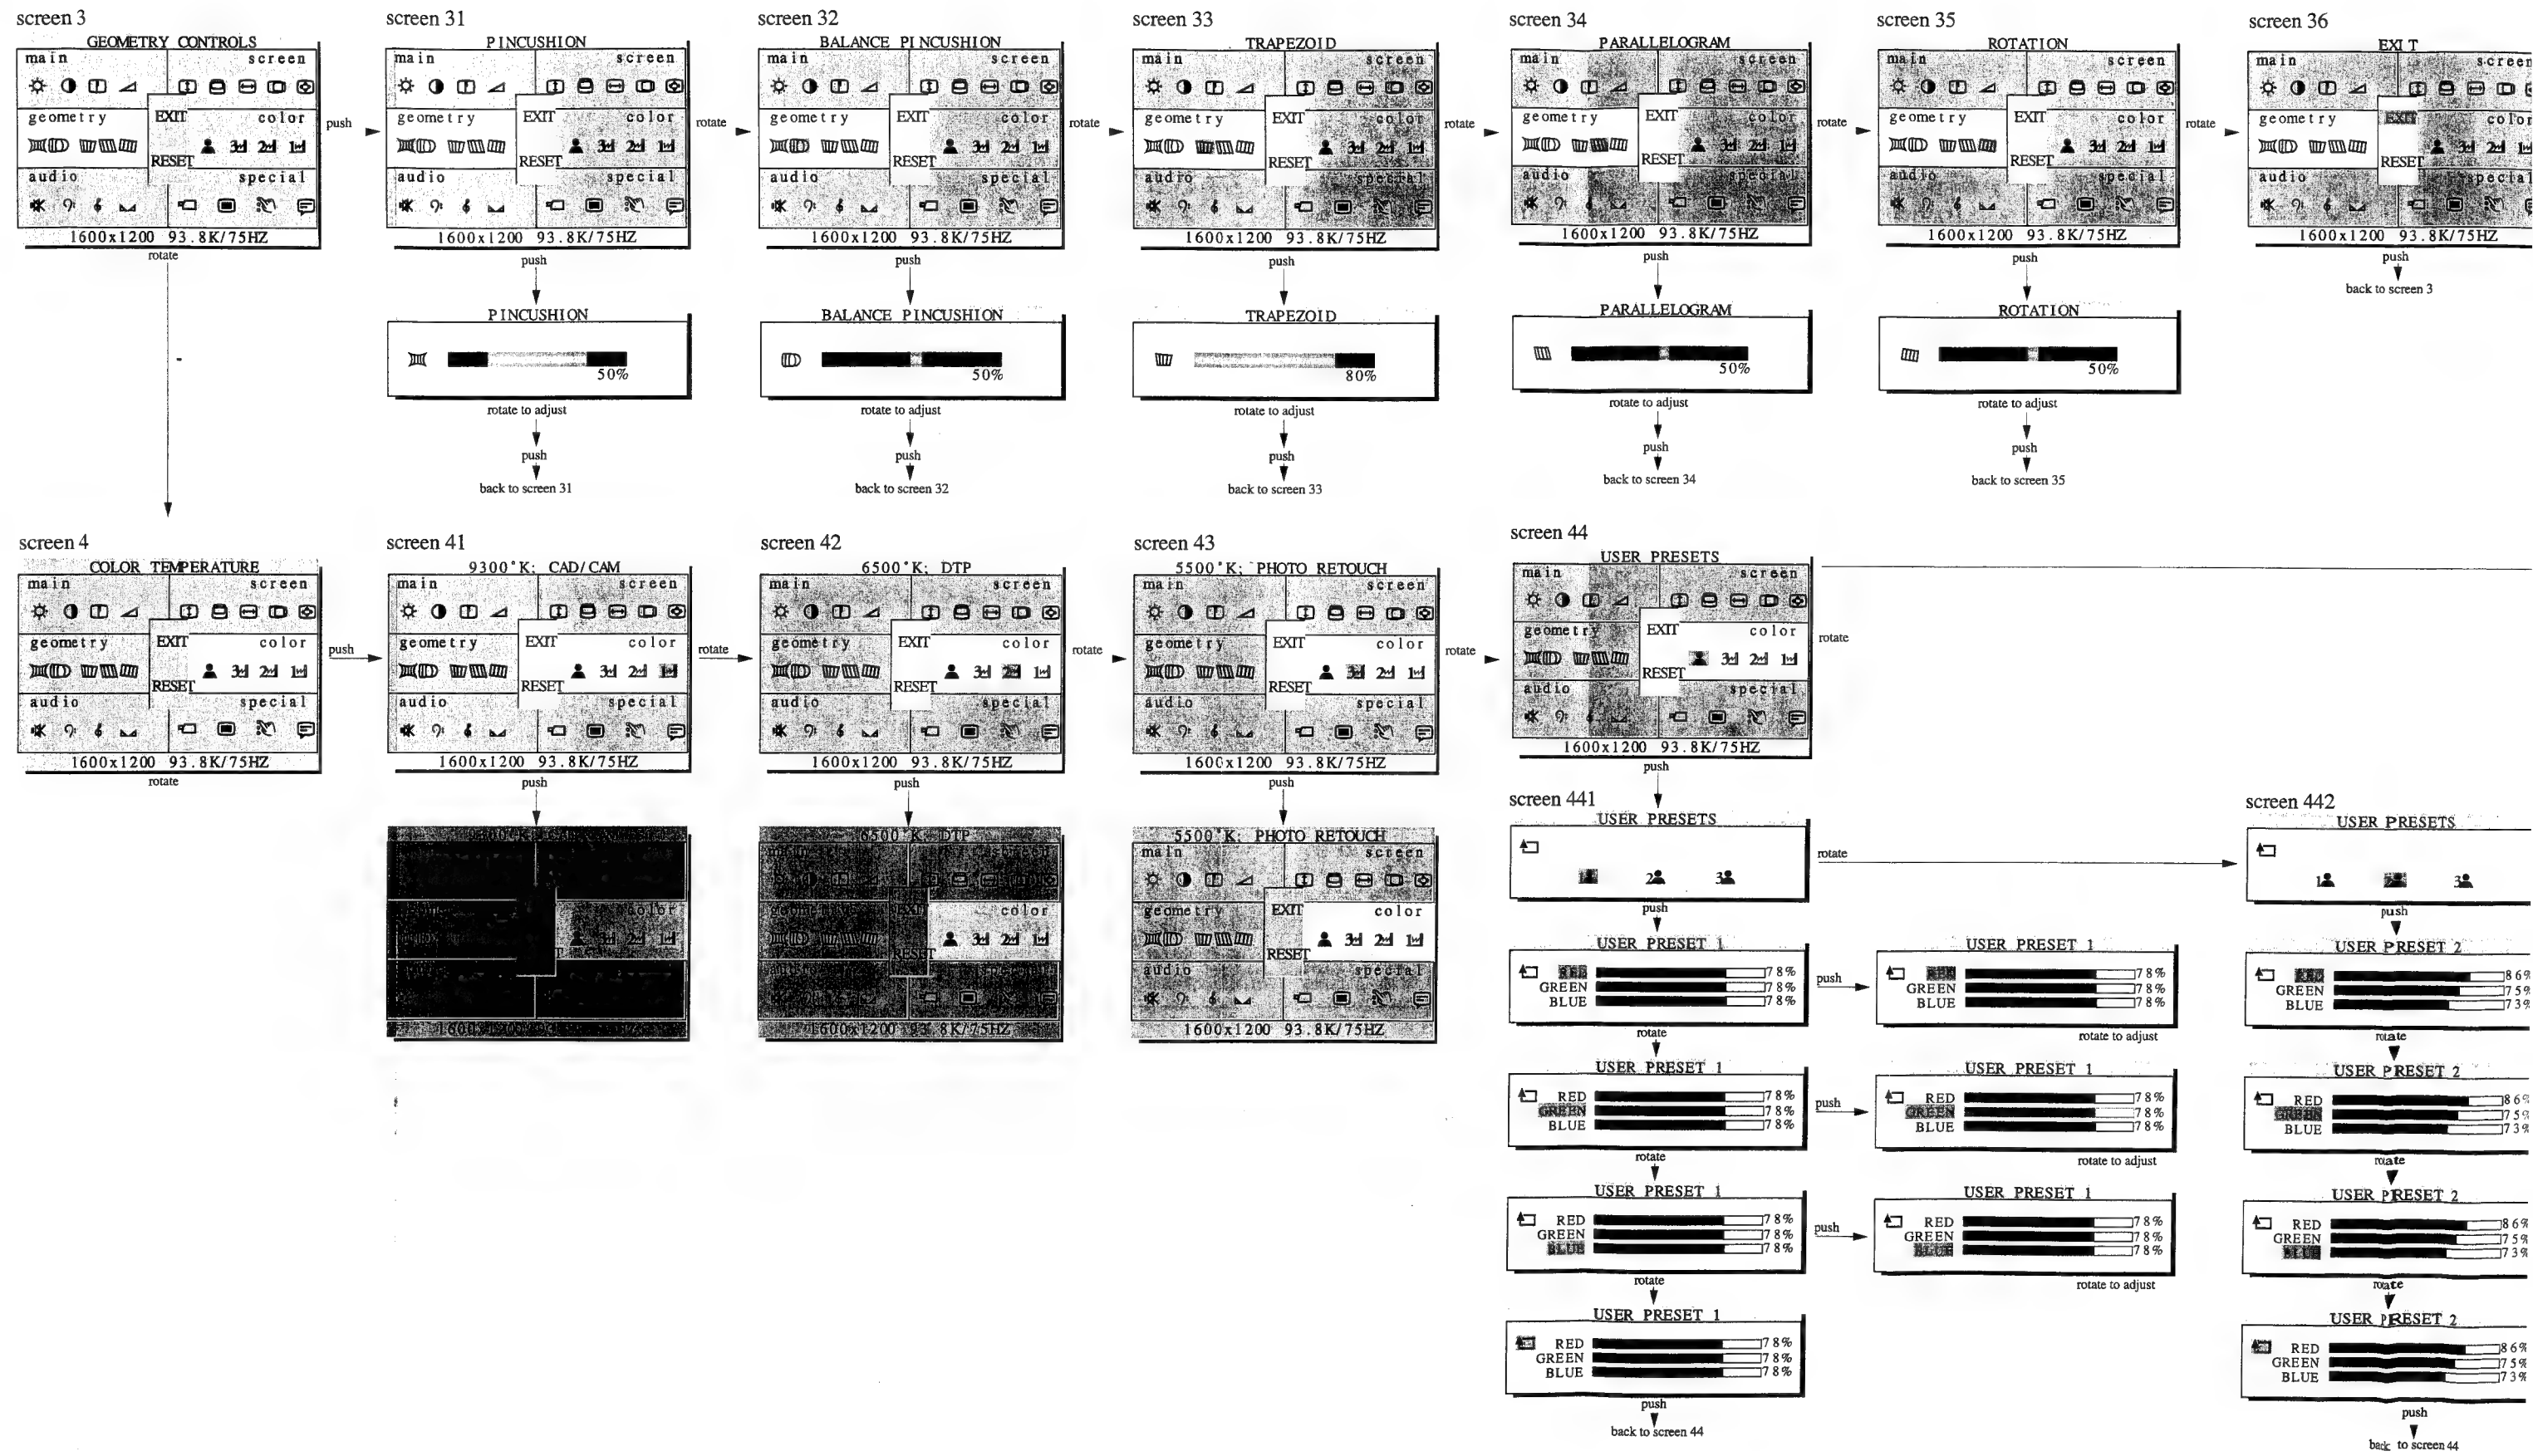


screen 34

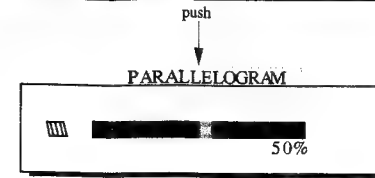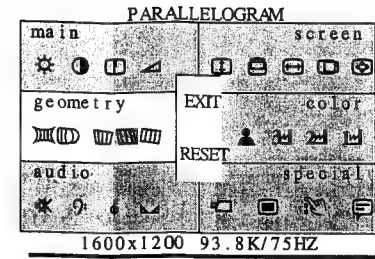


rotate to adjust
push
back to screen 34

screen 35

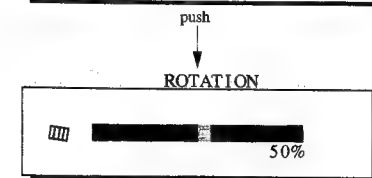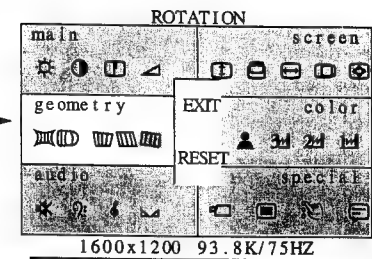


rotate to adjust
push
back to screen 35

screen 36

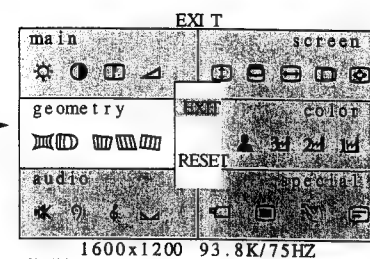







push
back to screen 3

screen 37

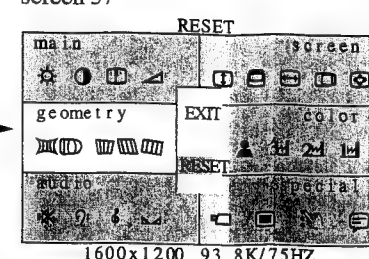





push
back to screen 31

screen 44

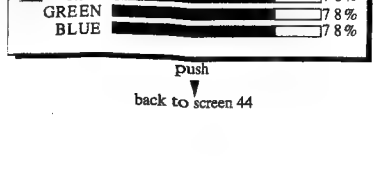
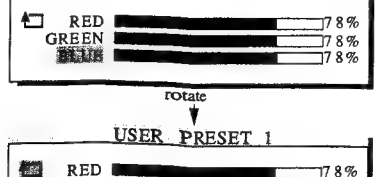
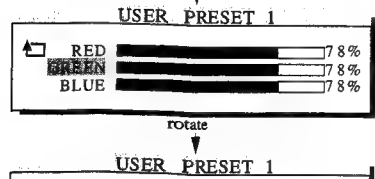
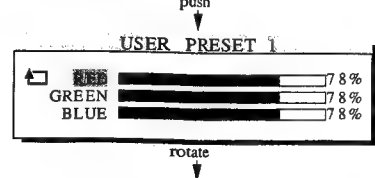
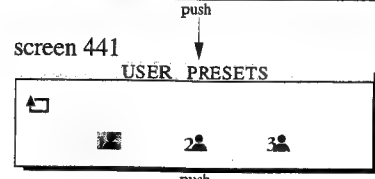
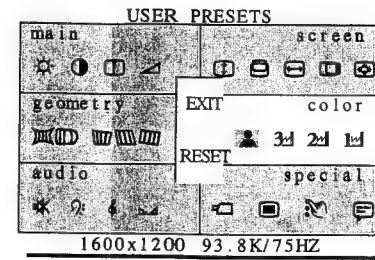


push
back to screen 44

screen 441

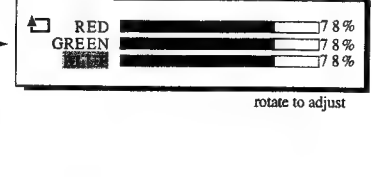
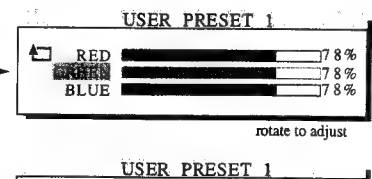
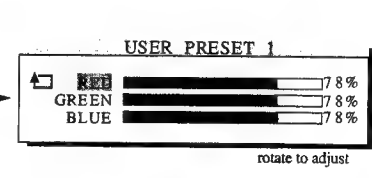
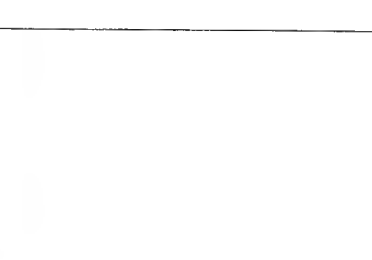


screen 442

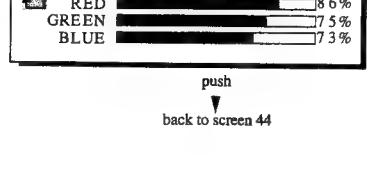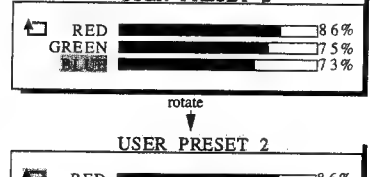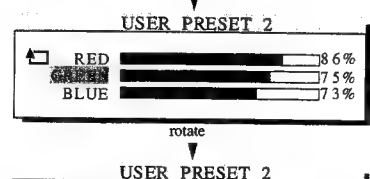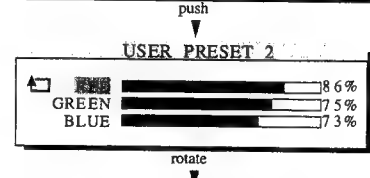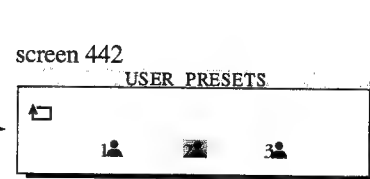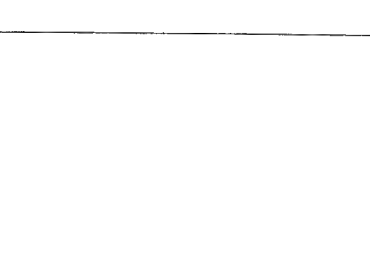







push
back to screen 44

screen 443

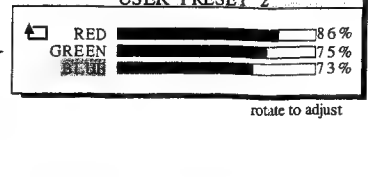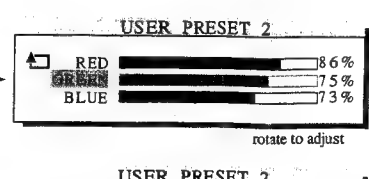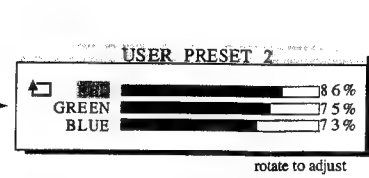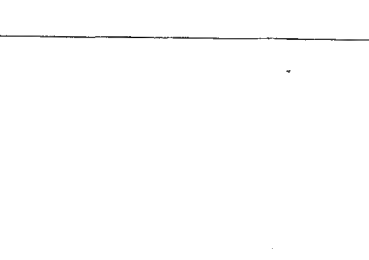


push
back to screen 44

screen 444

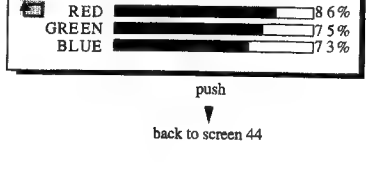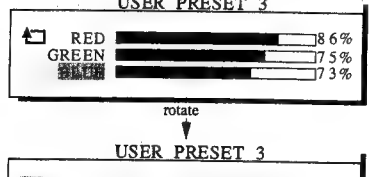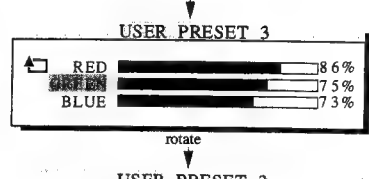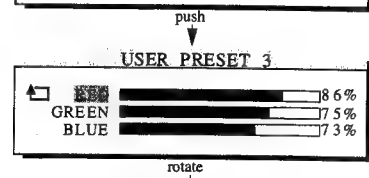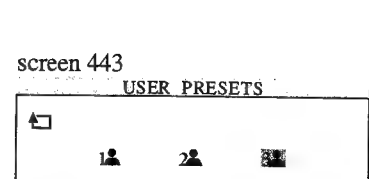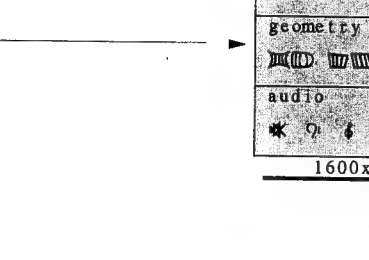


push
back to screen 44

screen 45

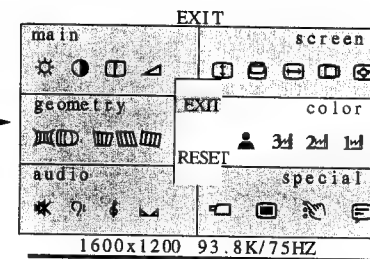


push
back to screen 4

screen 46

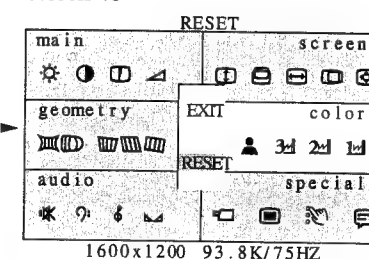


push
back to screen 41



screen 444

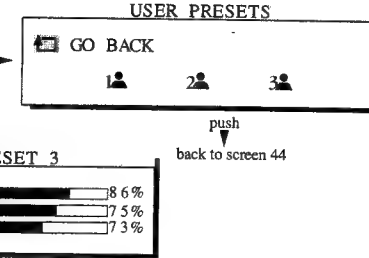


push
back to screen 44

Quick Reference for OSD Adjustment (Continued)

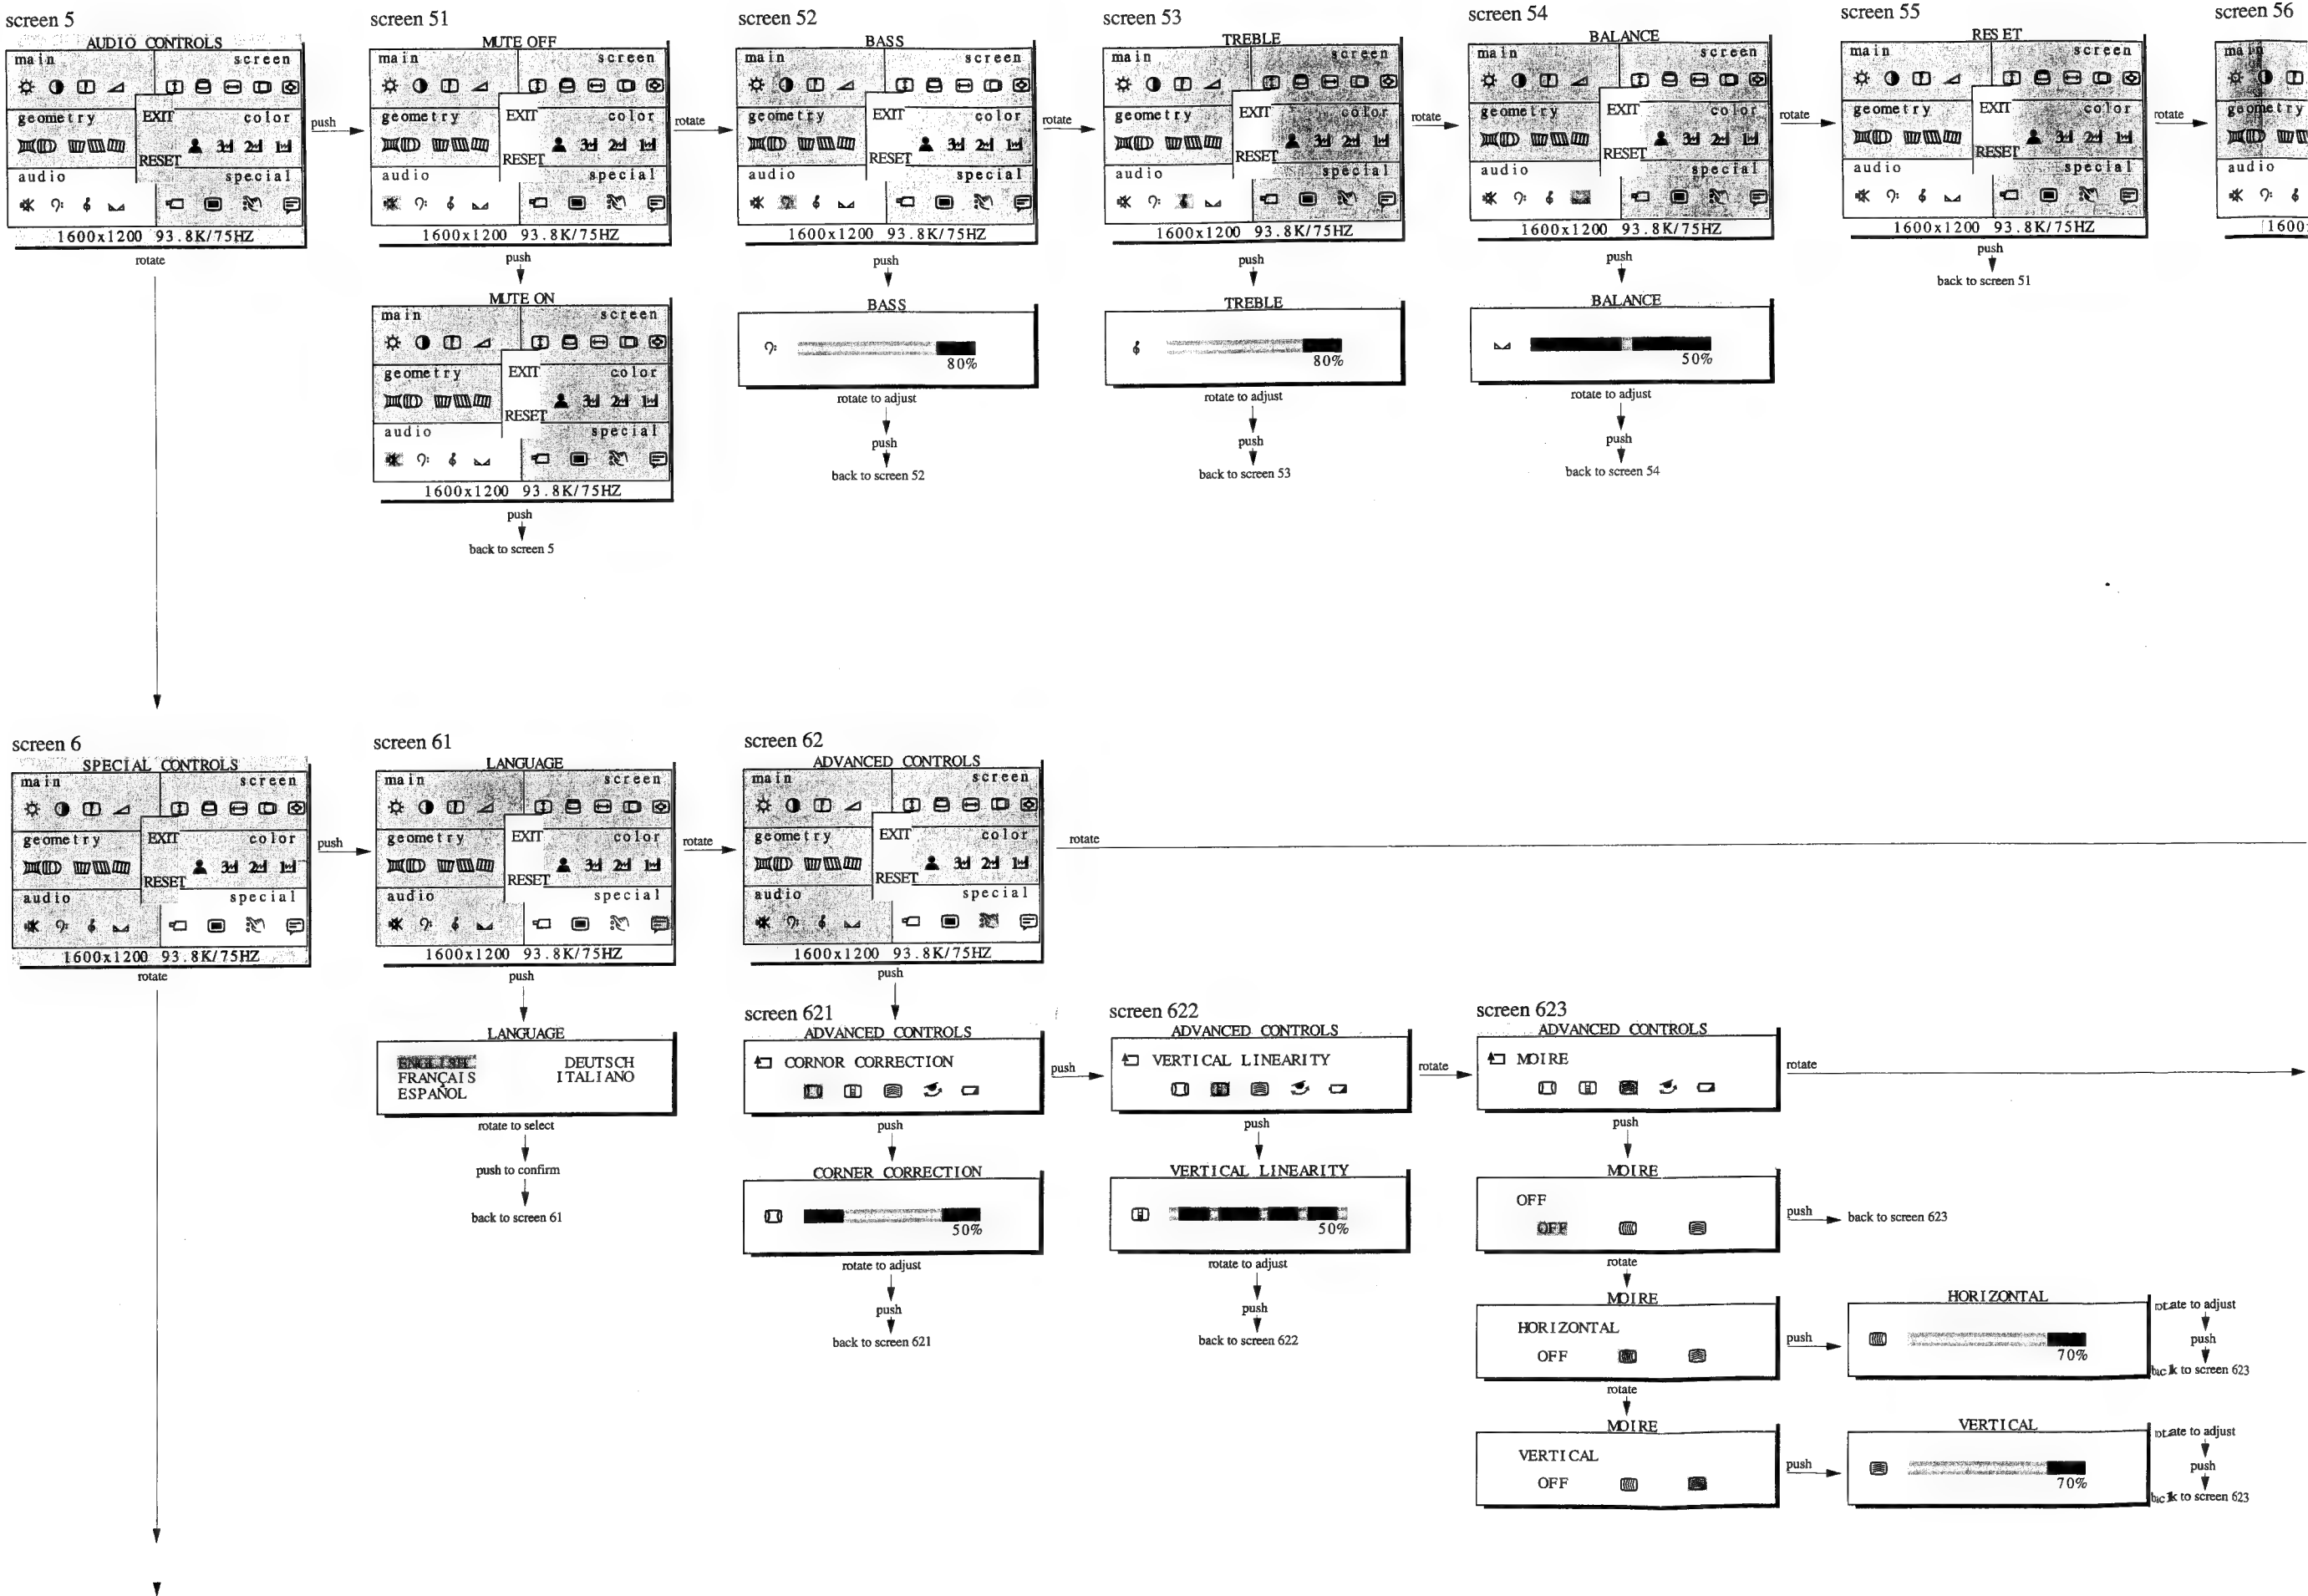


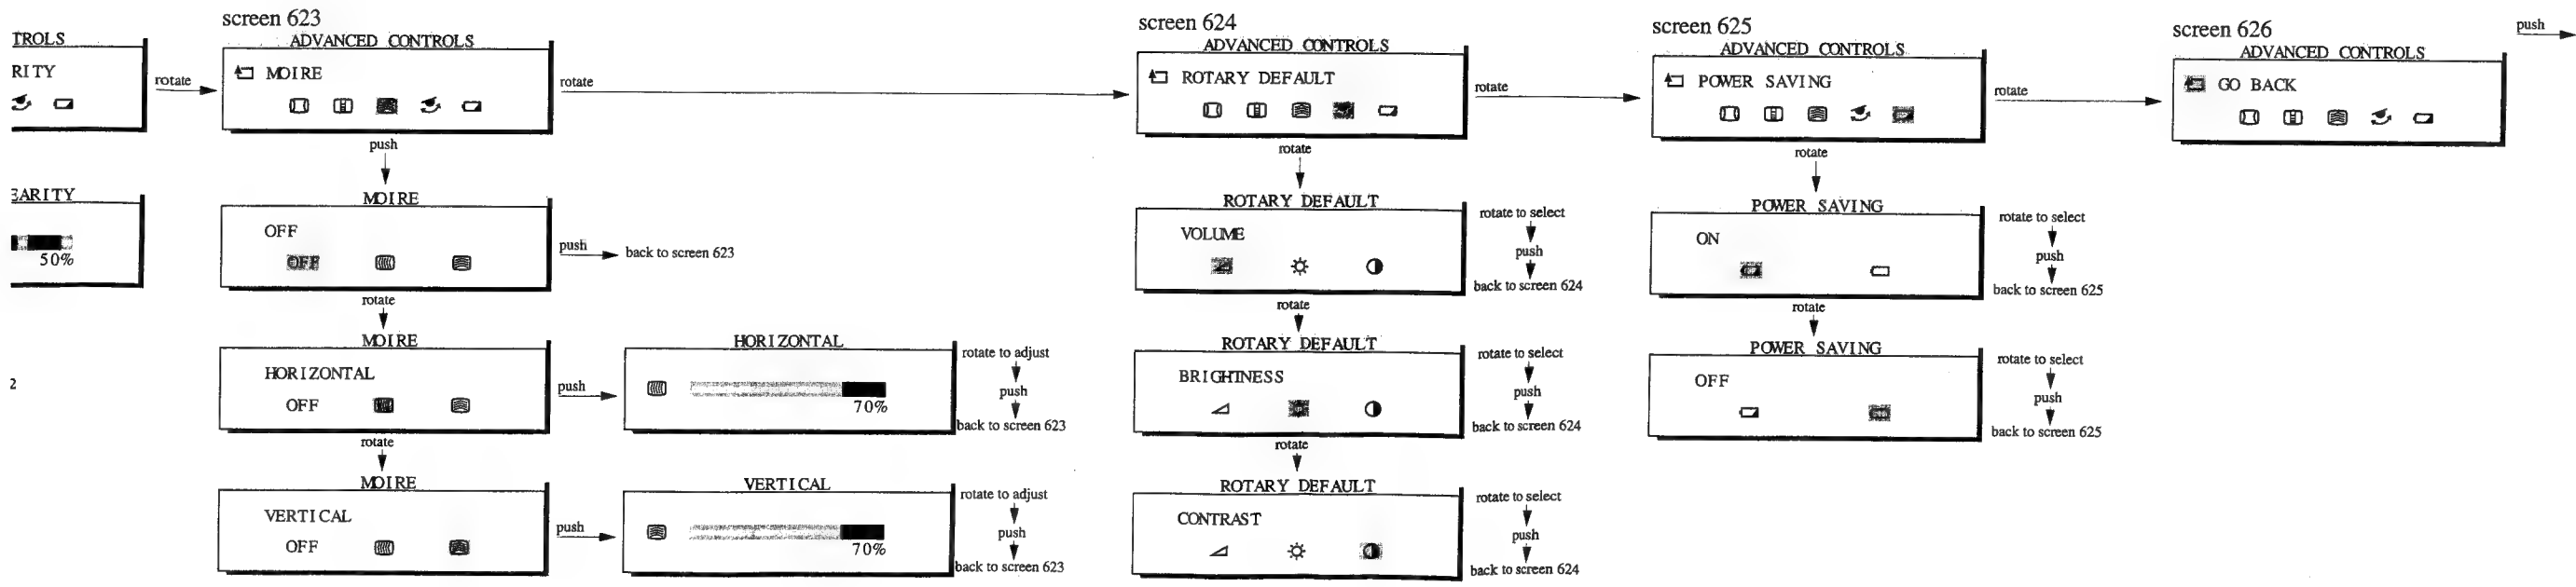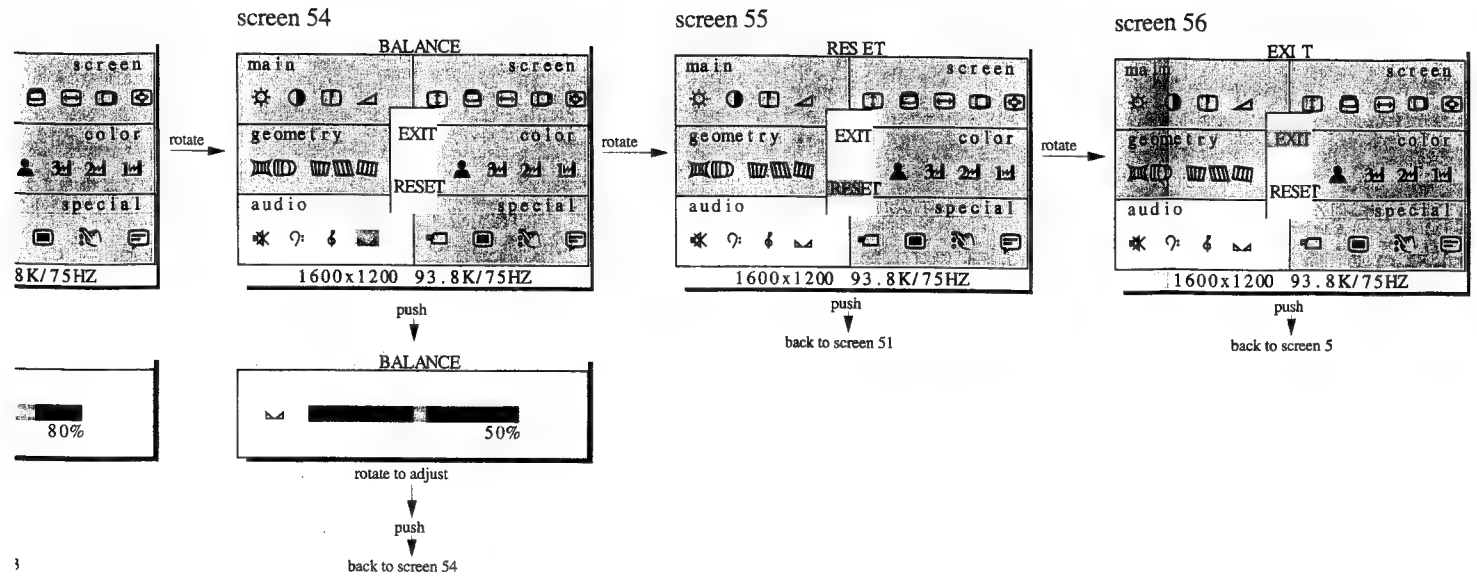

Quick Reference for OSD Adjustment (Continued)

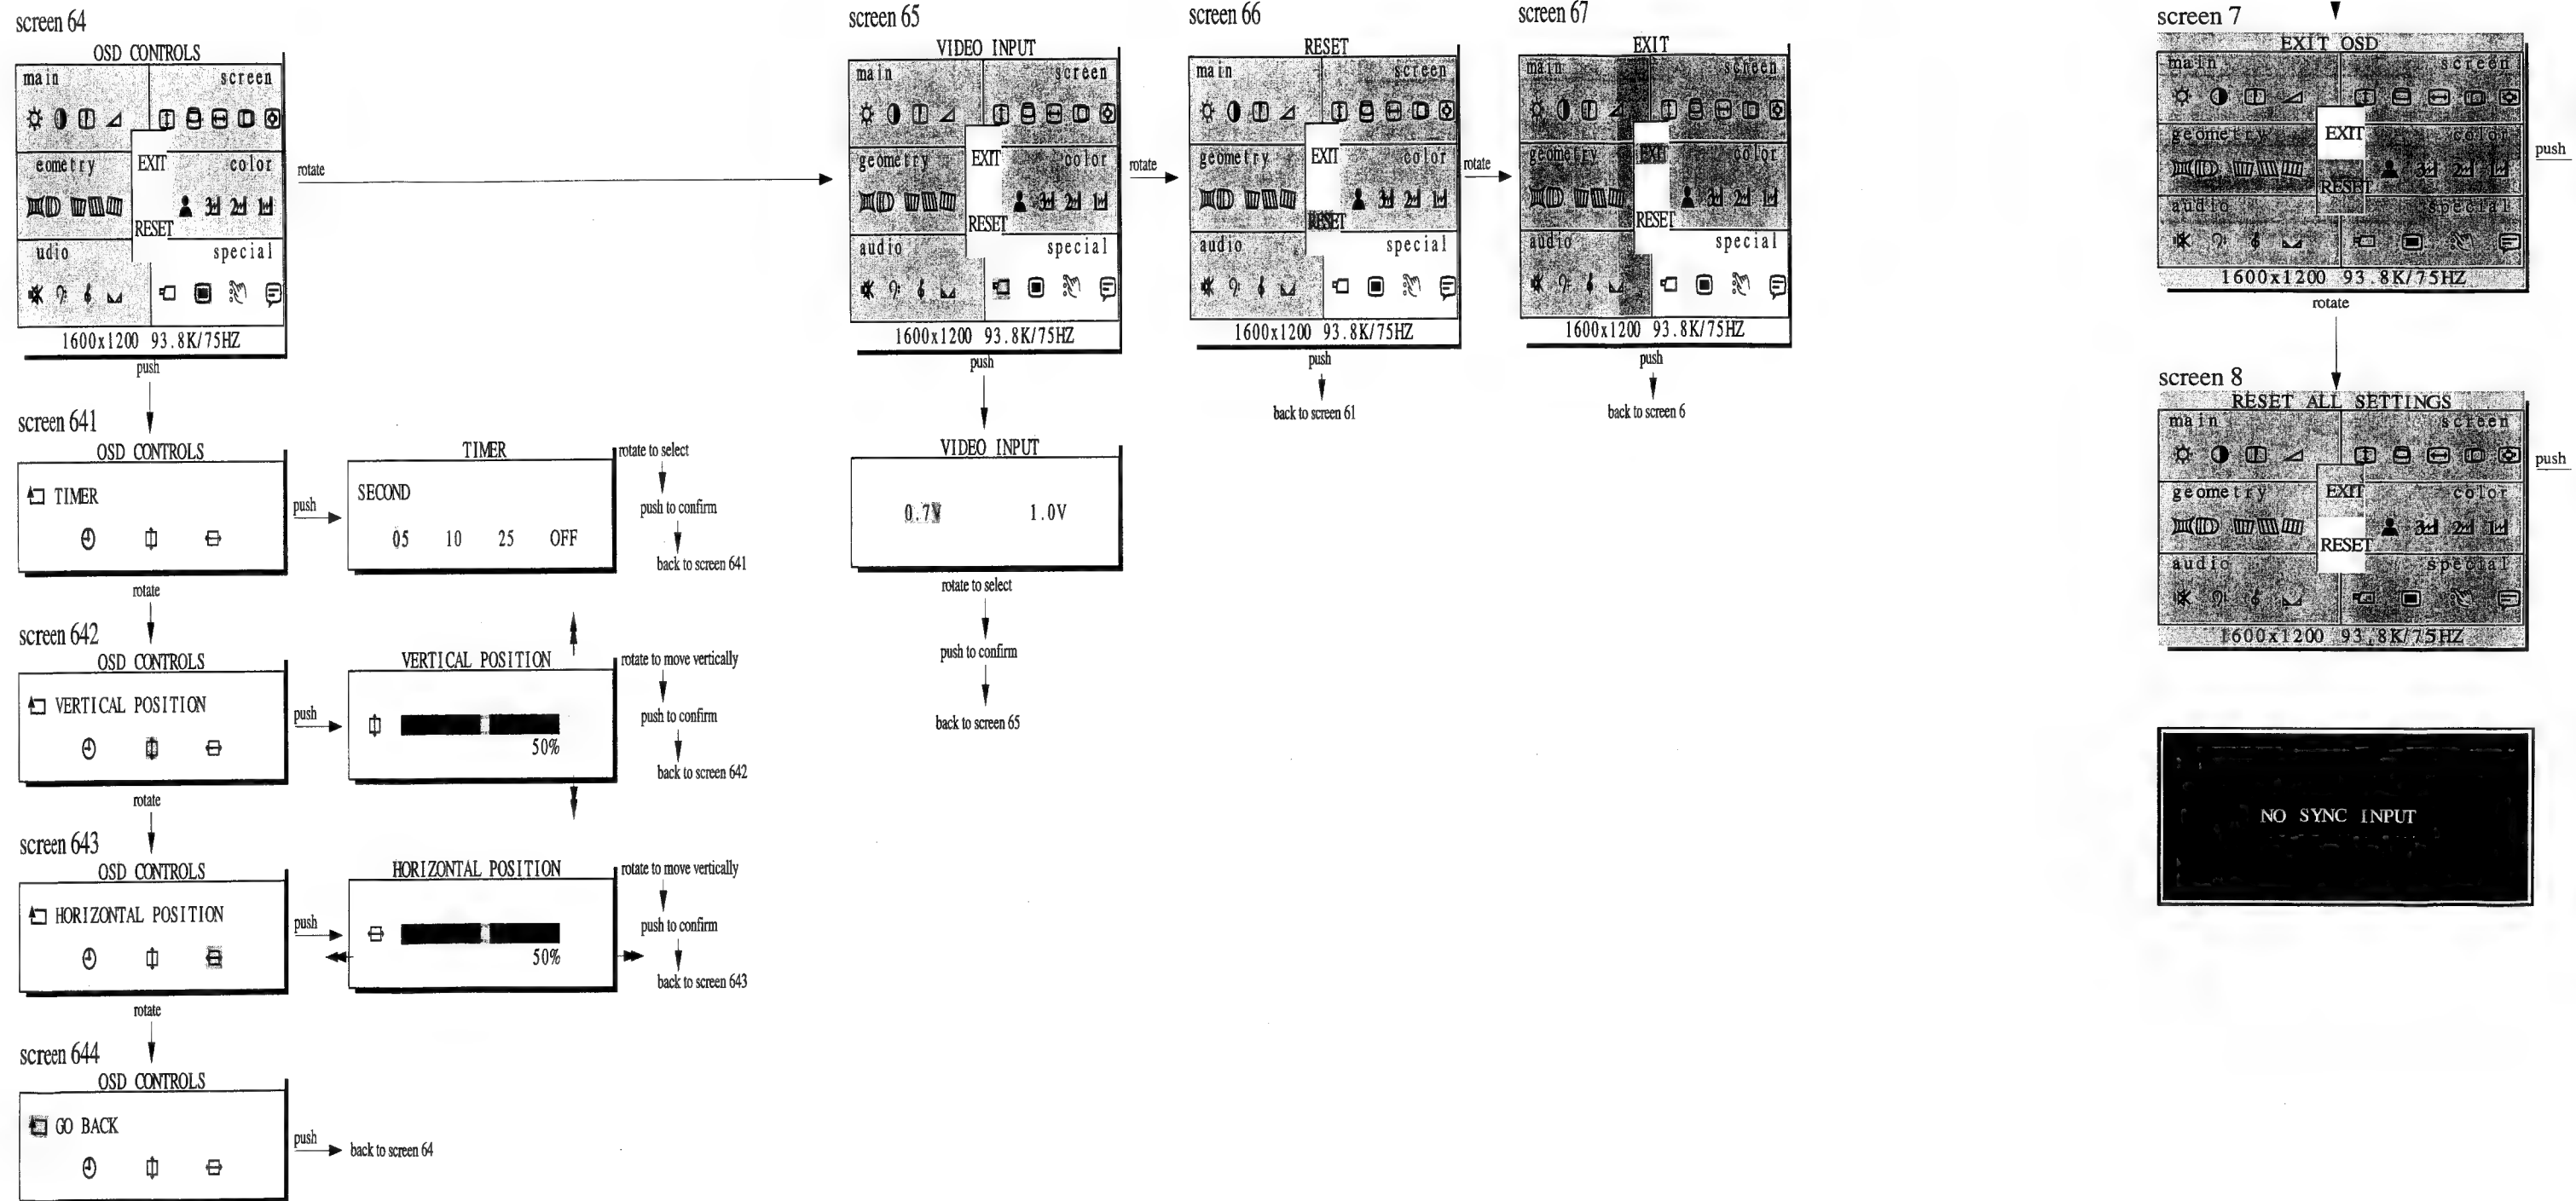


screen 6

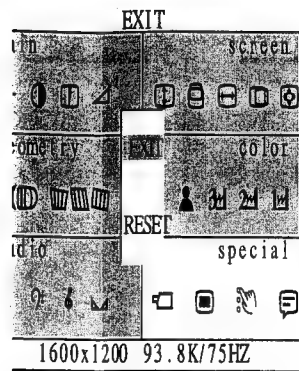

push
back to screen 6


screen 7

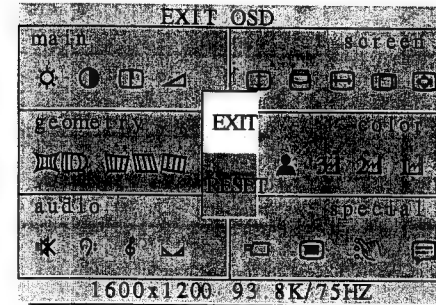


rotate

push
exit OSD


screen 8

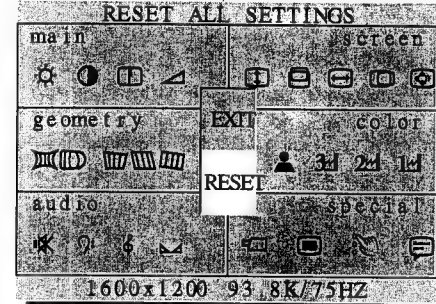




push

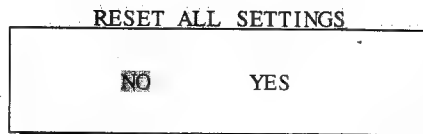

push
back to screen 1

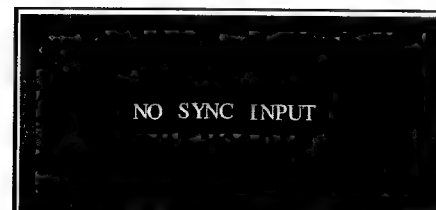

"When rotary default setting selected"

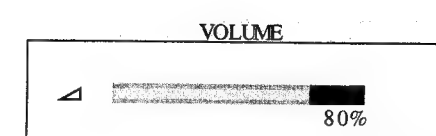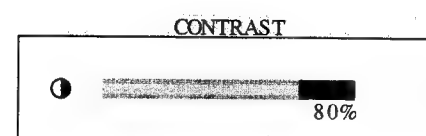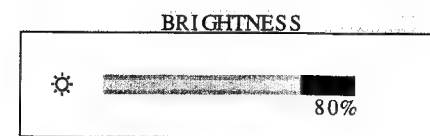

Mechanical Adjustments

0. Location of the panel

- 0.1 Main panel (1156)
- 0.2 Video panel (1157)
- 0.3 Earphone panel (1158)
- 0.4 Terminal panel (1159)
- 0.5 USB panel (1160) - optional
- 0.6 Encoder panel (1162)
- 0.7 Power switch panel (1163)

1. General

To be able to perform measurements and repairs on the circuit boards, the monitor should be placed in **Service Position (Fig. 3.1)** first:

How to remove the back cover of monitor :

There are 4 screws [2 screws are at the rear of the monitor, the other two screws are on the bottom of the monitor] to fix the front cabinet and back cover of the monitor.

Step 1: Remove the "cable cover" as shown in Fig. 3.2.

Step 2: Remove 2 screws (rear view) as shown in Fig. 3.3.

Step 3: Turn the set to remove the other 2 screws, as shown in Fig. 3.4 .

Step 4: Turn the set to its original position.

Step 5: Remove back cover (* There are two "plastic clips" on the "front cabinet" to hold the "rear cover" as shown in Fig. 3.5).

Chassis :

After removing the back cover, you can see the inside the monitor with metal frame and metal shield.

- Remove 26 screws for service position as Fig. 3.6 to Fig. 3.15.

Video panel :

- After removing the metal frames, remove the metal shielding on rear side of Video panel for measurement.

Main panel :

After removing the metal frames,

- Disconnect "Video panel"
- Disconnect EHT cable (EHT cap)
- Disconnect 4 pin connector "M1501" (wire of YOKE, on Main panel)
- Disconnect 2 pin connector "M1114" (degaussing coil, on Main panel)
- Disconnect 1 pin connector "M1701" (on Video panel)
- Disconnect 2 pin connector "M1219" (on Main panel)
- Disconnect 9 pin connector "M1217" (on Main panel)
- Disconnect 3 pin connector "M1213" (on Main panel)
- Disconnect 3 pin connector "M1504" (on Main panel)
- Disconnect 2 pin connector "M1218" (on Main panel)
- Disconnect 2 pin connector "M1220" (on Main panel)
- Disconnect 7 pin connector "M1212" (on Main panel)

- To slide out Main panel.

- Remove 2 screws as shown in Fig. 3.14, then push the clips to the right as shown in Fig. 3.13, to separate the bottom plate.

- Remove the plastic frame as shown in Fig. 3.15.

- Remove the "Rotary panel" "Earphone panel" from Front cabinet and place it on the table as shown in Fig. 3.1.

















- Connect all the connectors and panels for service position.





Service position :

Place monitor in service position as shown in Fig. 3.1 through Fig. 3.15.


2. Repair instructions

After the service position is obtained, all the panel's copper trace sides may be accessed.

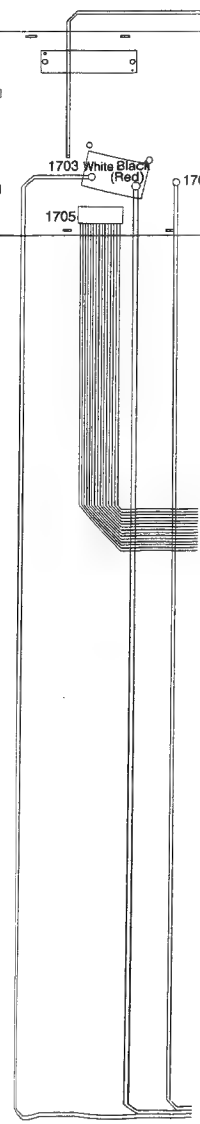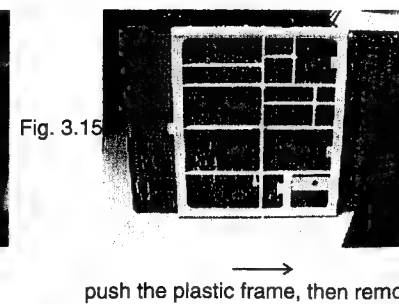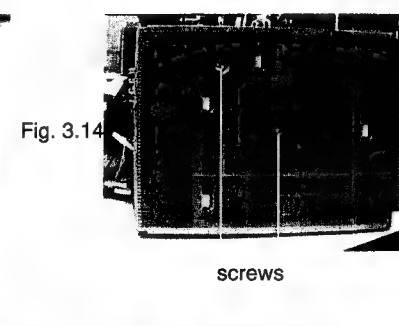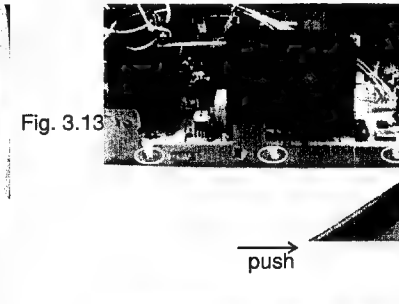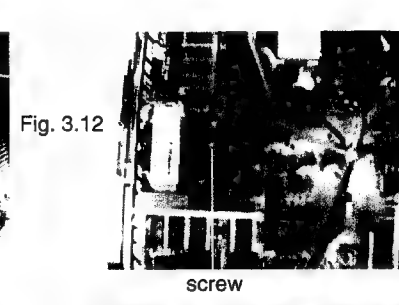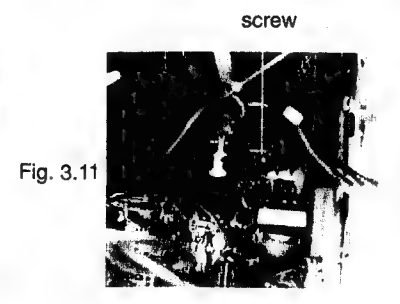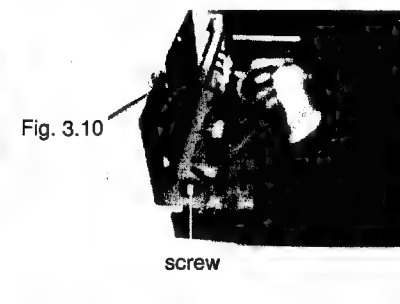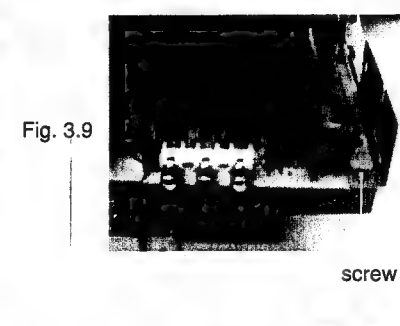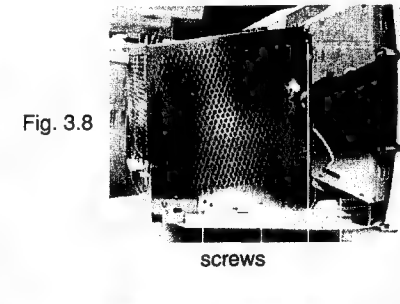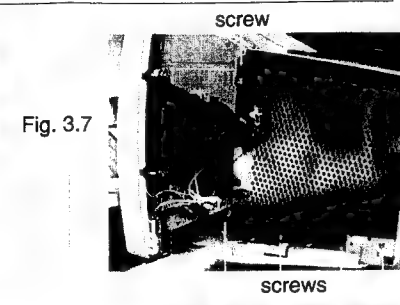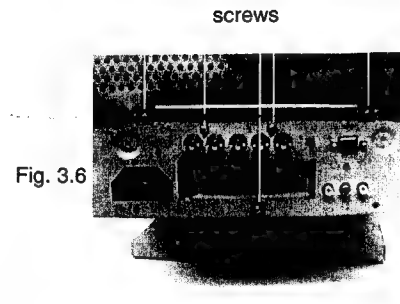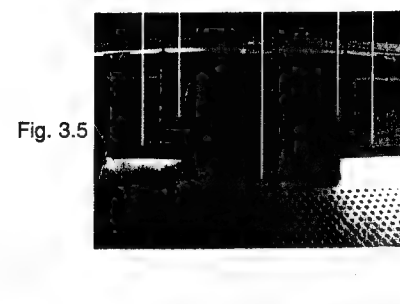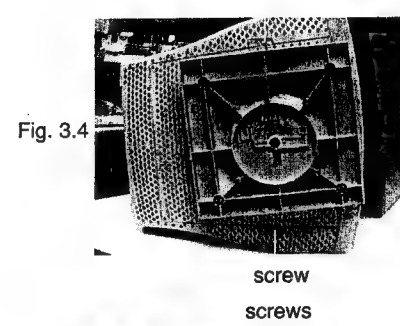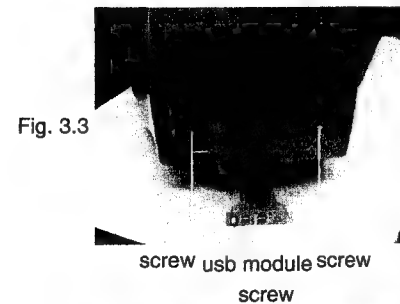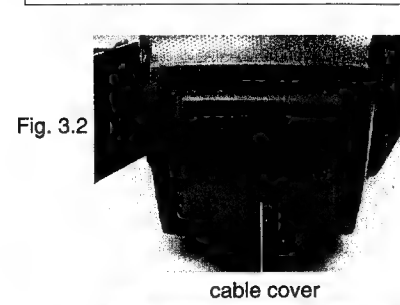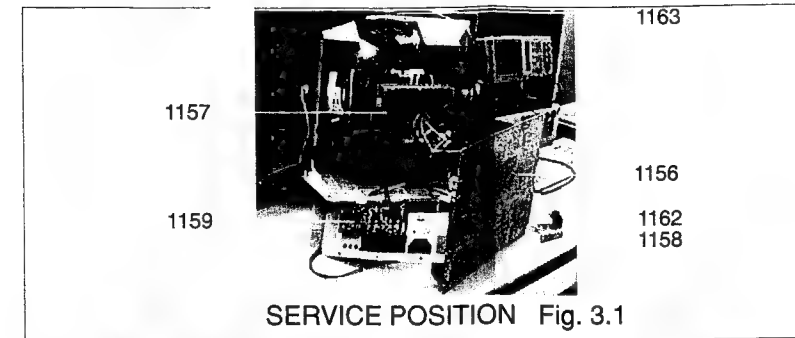

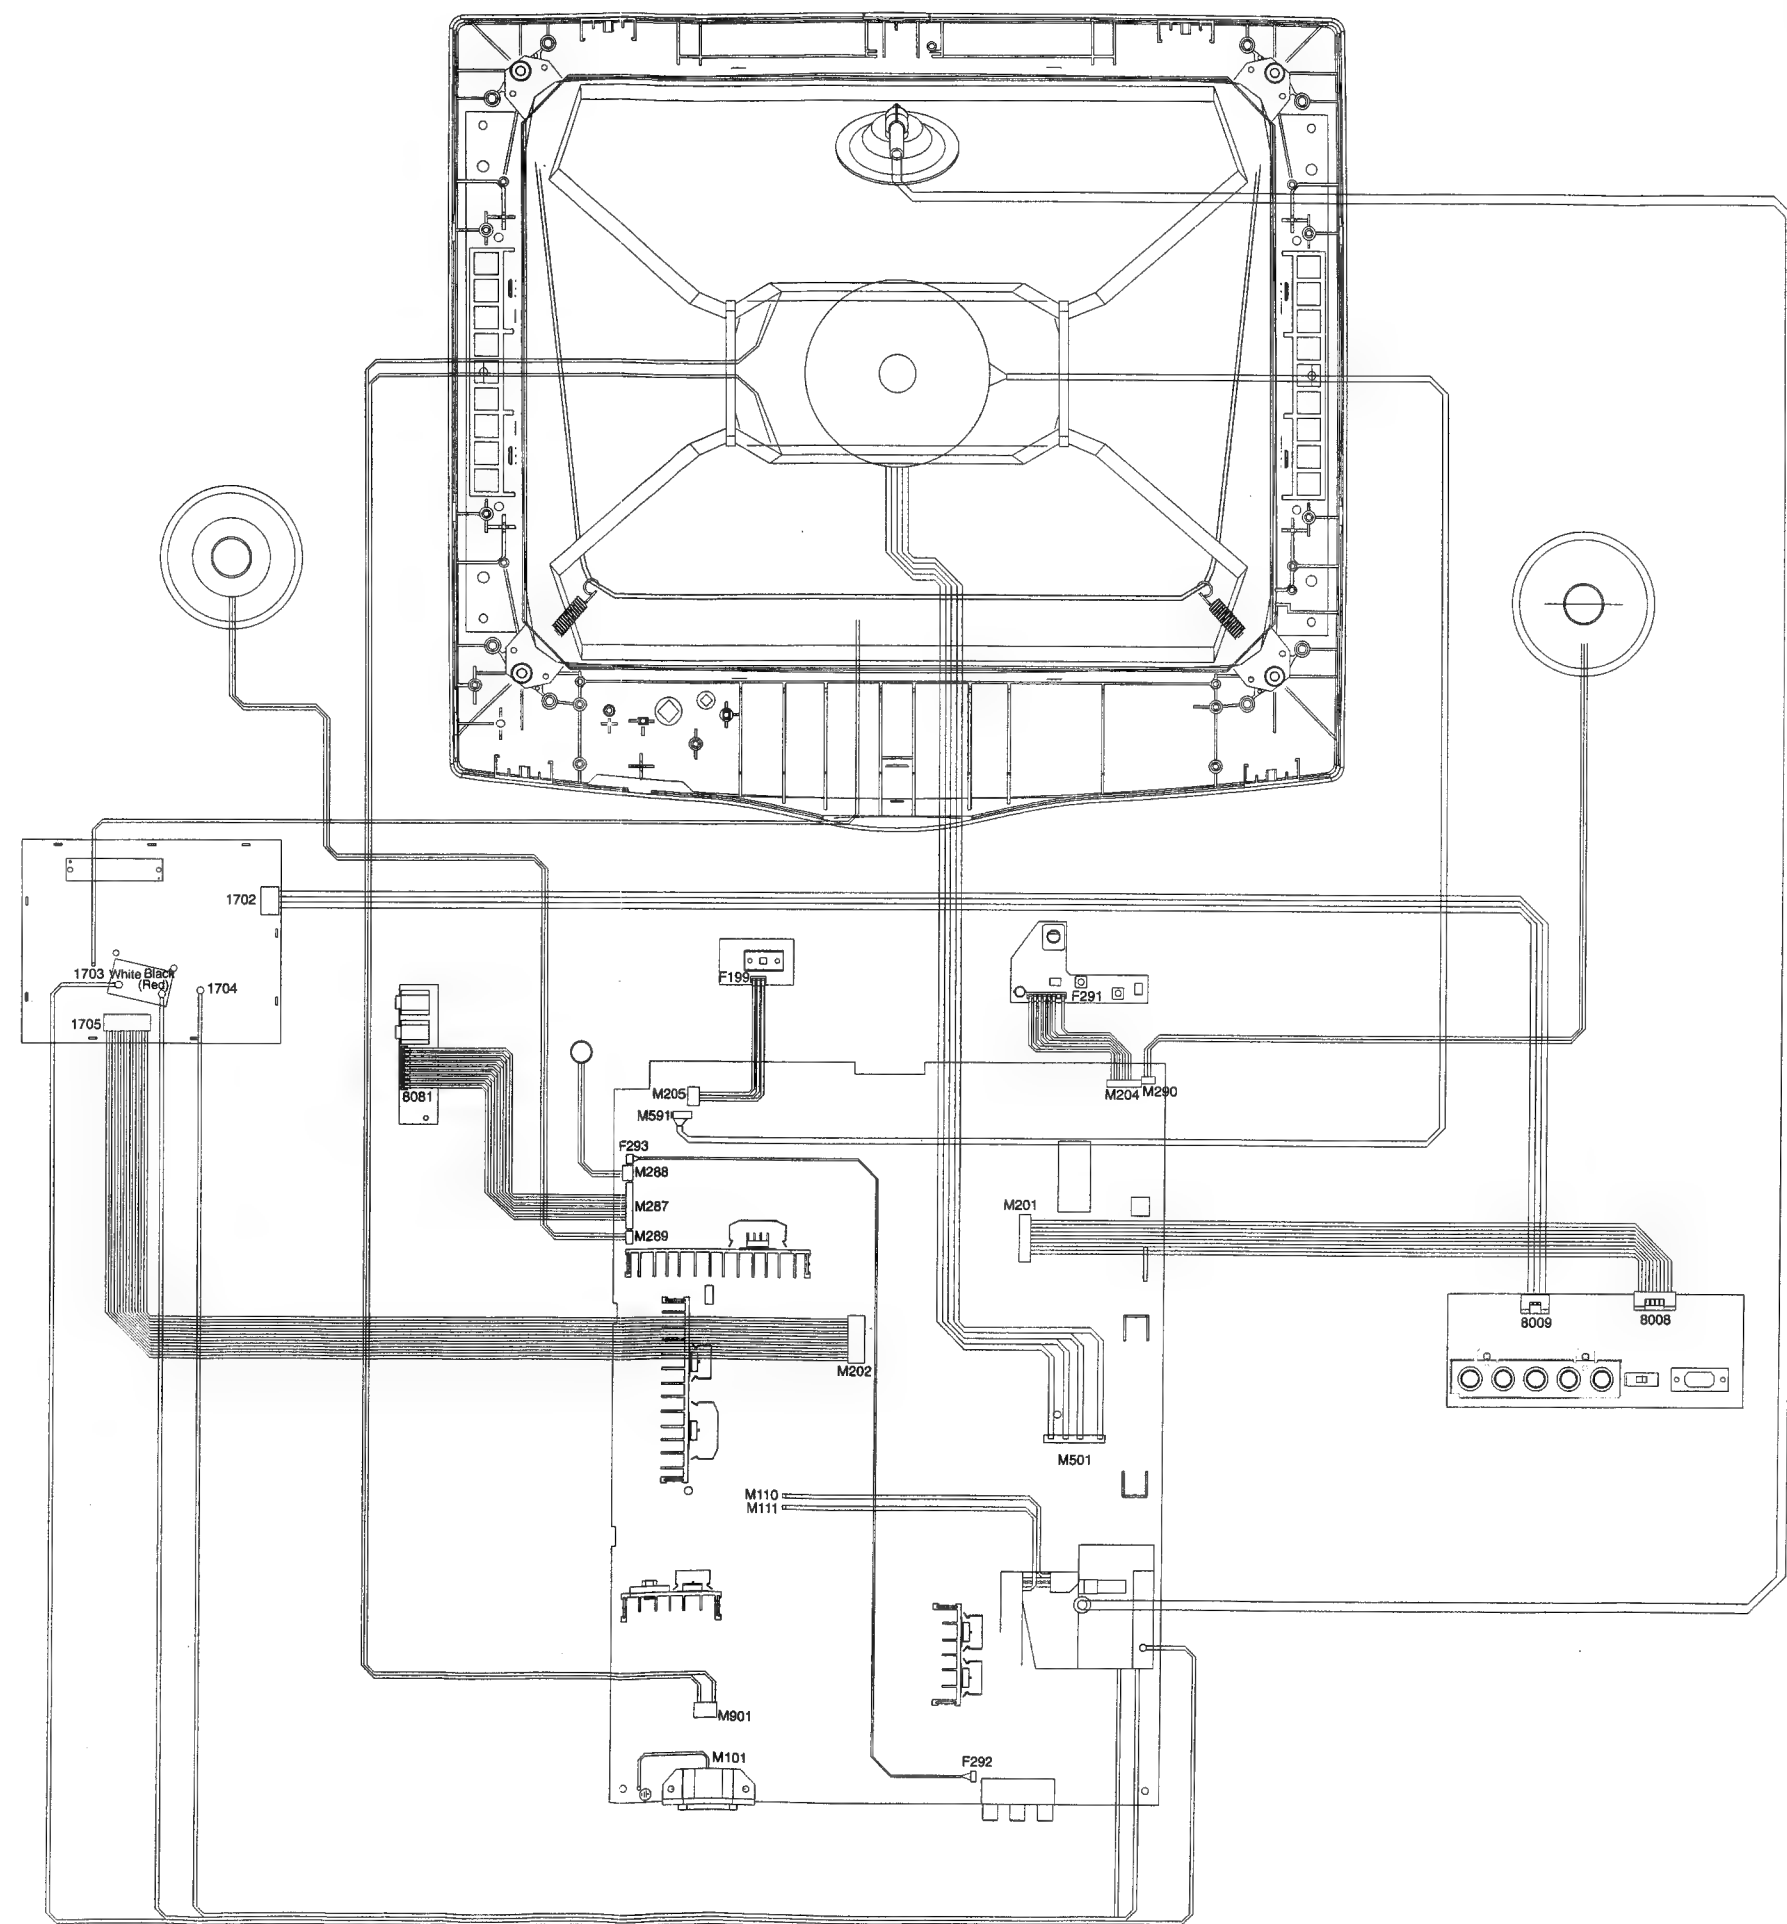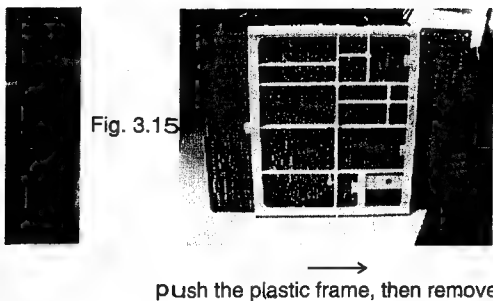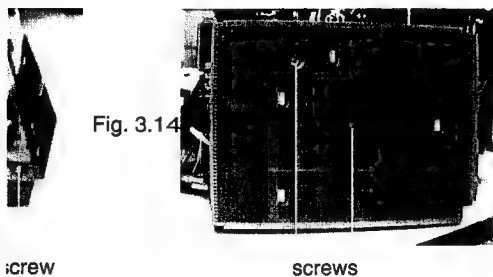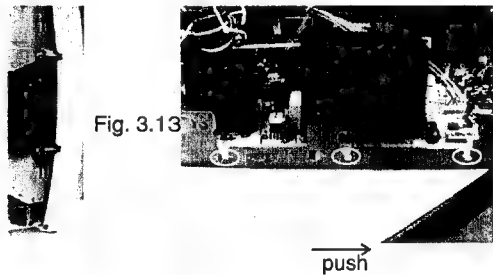


Block Diagram

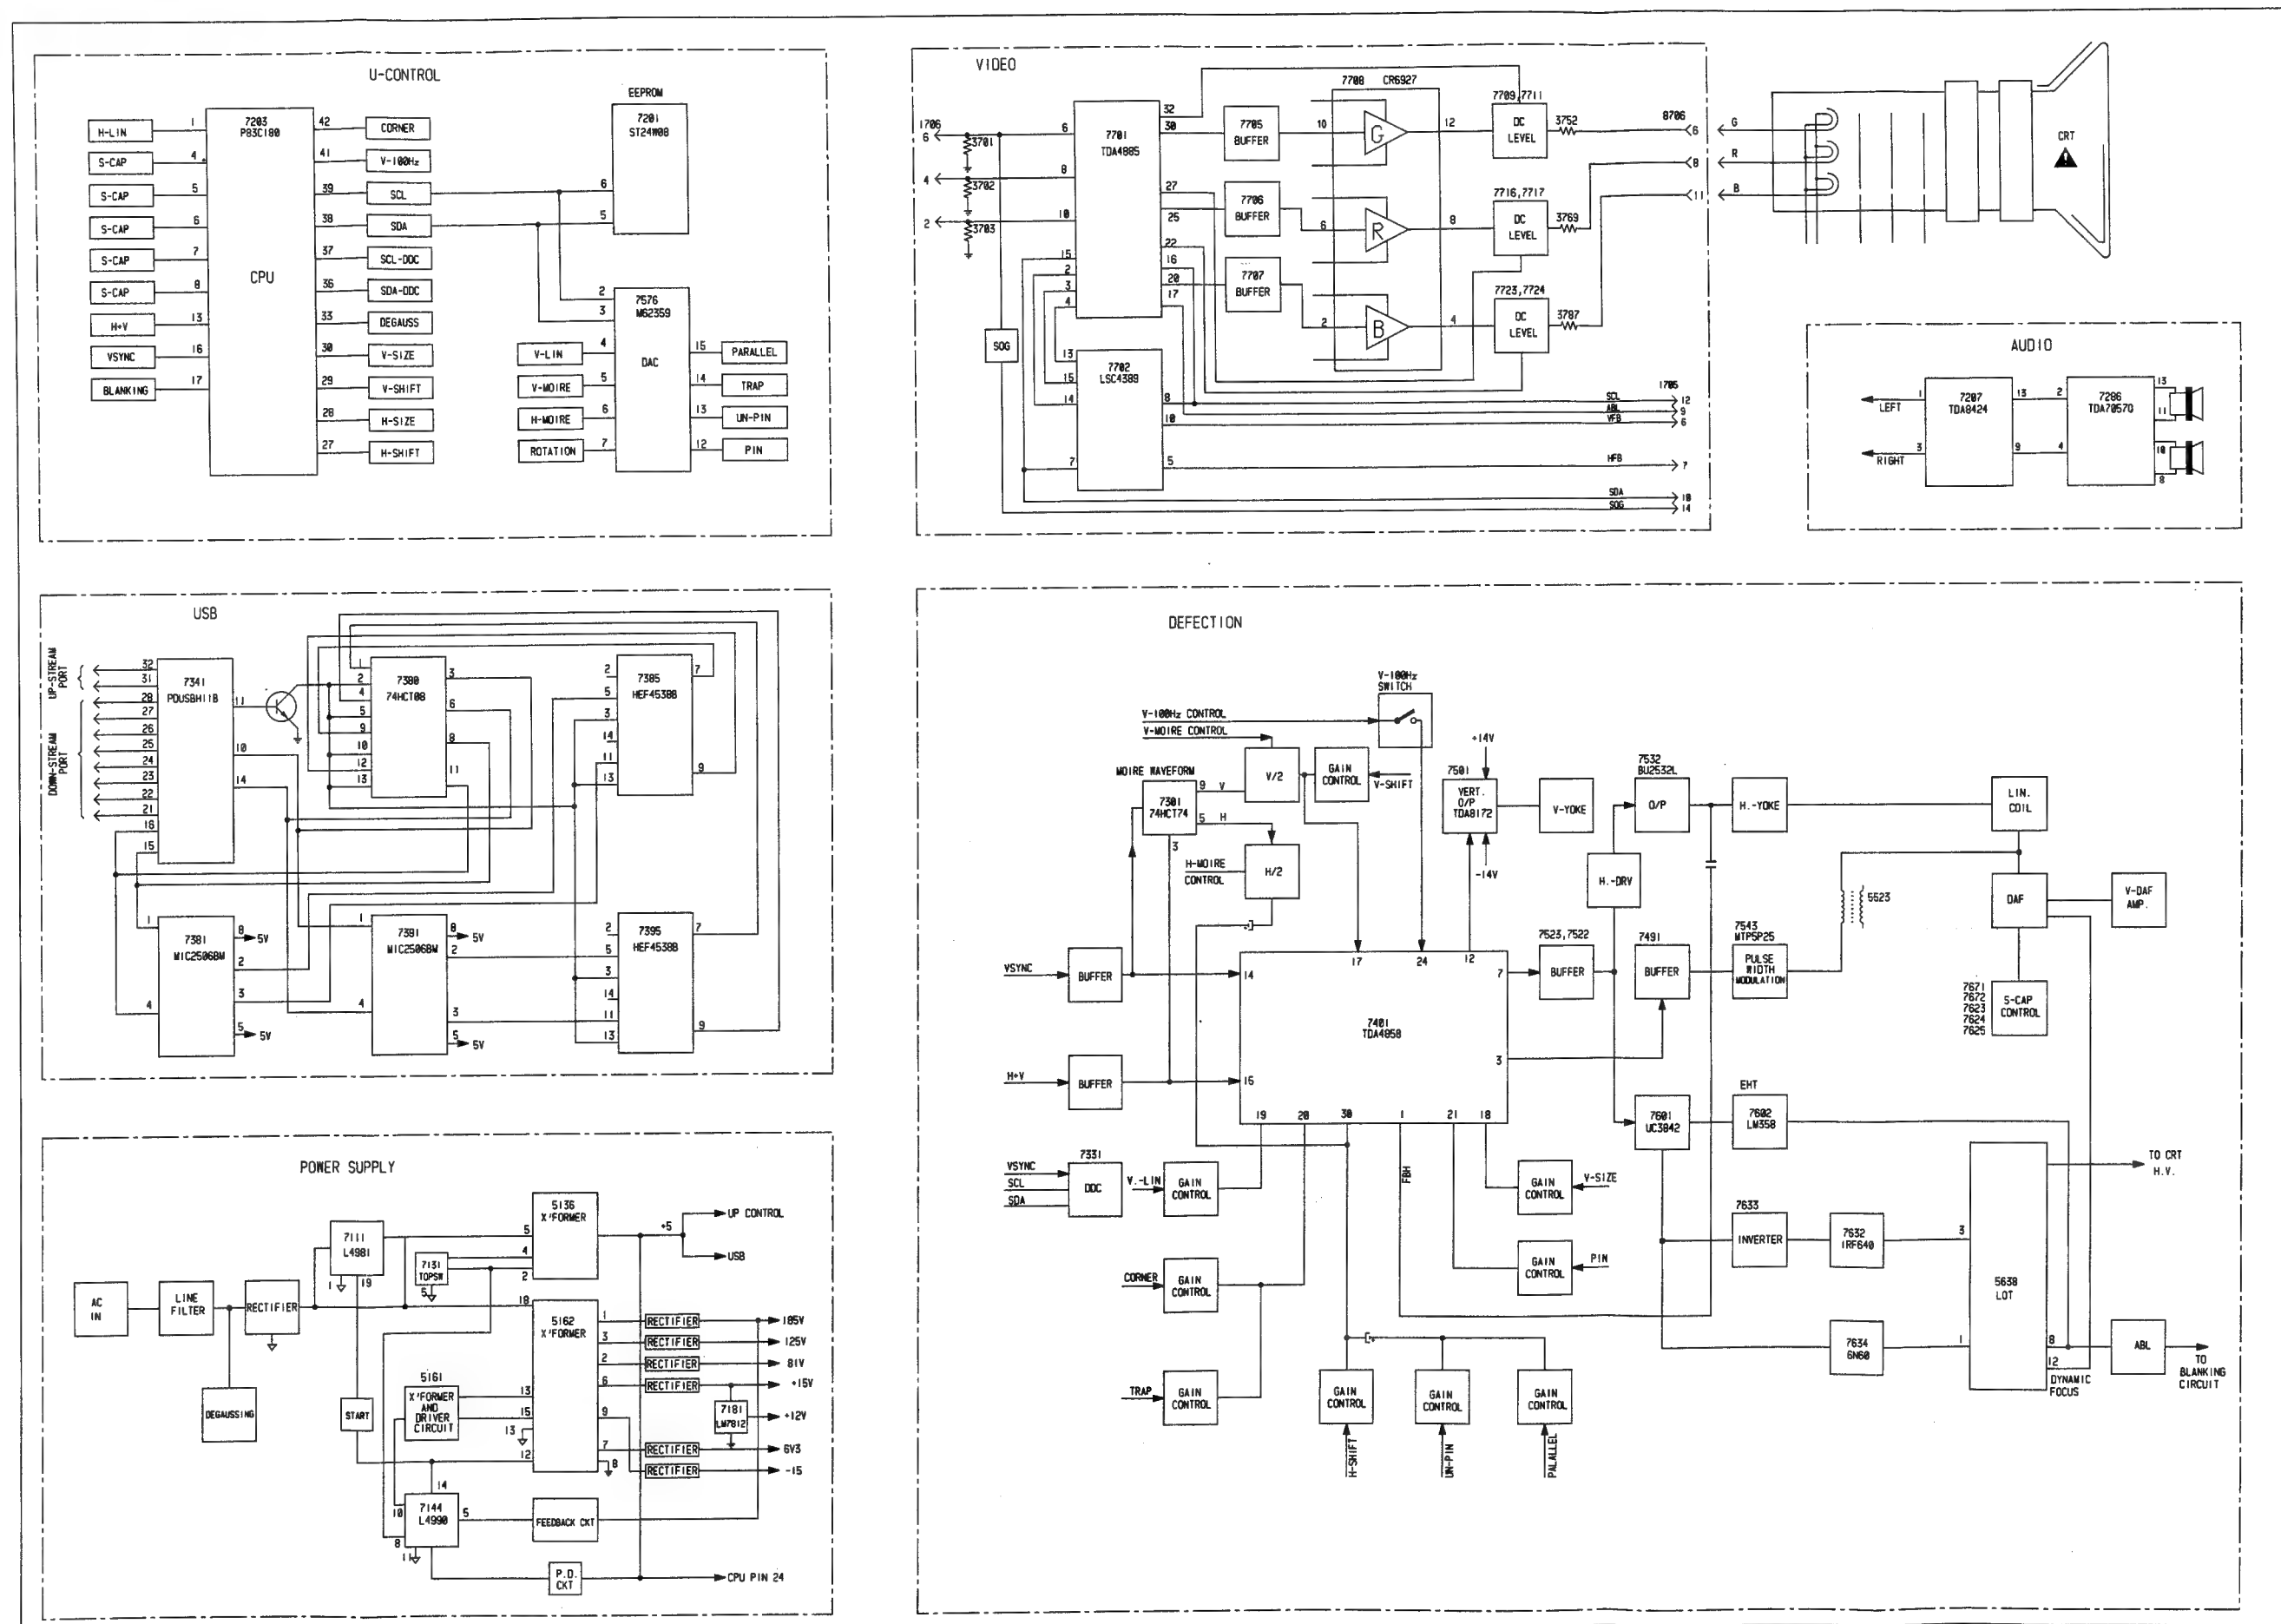


Video Panel C.B.A. (A)

6783 B 3	3797 D 6	3749 C 2	2793 C 1	2743 B 2	1781 C 3
6784 D 2	3798 D 6	3750 D 2	3781 B 7	2744 B 3	1782 B 7
6785 B 3	3799 D 6	3751 C 2	3782 B 7	2745 A 2	1783 D 3
6786 D 1	3800 D 1	3752 D 5	3783 B 7	2746 A 1	1784 D 5
6788 D 5	3801 D 8	3753 C 2	3785 D 7	2747 E 2	1785 E 3
6789 D 2	3802 D 6	3754 B 5	3786 D 7	2748 A 7	1786 C 4
6711 B 5	3803 D 7	3755 A 5	3788 D 7	2749 C 6	2781 B 7
6712 C 5	3804 E 6	3756 A 3	3789 D 7	2751 C 6	2782 B 7
6713 C 6	3805 C 2	3757 A 3	3710 B 6	2752 C 6	2783 B 7
6714 B 5	3807 B 2	3758 A 3	3711 D 7	2753 C 6	2784 B 6
6715 C 6	3808 B 1	3759 A 5	3712 B 6	2754 D 6	2785 C 7
6721 B 5	3810 D 6	3760 B 5	3713 B 6	2755 C 7	2786 D 7
6724 B 5	3811 D 5	3761 A 3	3714 B 6	2756 E 6	2787 B 6
6731 A 5	3812 C 5	3762 B 3	3715 C 7	2757 D 1	2788 B 6
6734 A 5	3813 D 7	3763 B 3	3716 B 7	2758 C 6	2789 A 6
7701 C 7	3814 B 4	3764 D 1	3717 C 7	2759 D 6	2711 A 6
7702 C 6	3815 B 3	3765 B 3	3718 C 7	2760 E 4	2712 B 5
7703 D 7	3816 C 2	3766 B 3	3719 D 7	2761 E 4	2713 B 5
7704 E 7	3817 B 7	3767 C 2	3720 B 6	2762 E 4	2714 A 5
7705 B 5	3818 A 1	3768 D 2	3721 B 7	2763 C 3	2715 B 6
7706 B 5	3819 B 5	3769 C 4	3722 B 7	2764 E 3	2716 B 5
7707 A 5	3820 B 5	3770 C 2	3723 B 7	2765 E 3	2717 A 4
7708 A 2	3821 A 5	3771 B 2	3724 A 7	2766 E 3	2718 A 4
7709 C 2	3822 A 5	3772 A 5	3725 A 7	2767 E 4	2719 A 4
7711 C 2	3823 A 5	3773 A 5	3726 A 7	2768 E 2	2720 B 2
7716 B 2	3824 A 5	3774 A 3	3727 B 6	2769 E 3	2721 B 4
7717 C 2	3825 B 5	3775 A 2	3728 A 6	2770 E 3	2722 B 3
7723 B 1	3826 A 5	3776 A 2	3729 B 6	2771 E 3	2723 B 4
7724 C 1	3827 A 5	3777 A 5	3730 B 6	2772 C 3	2724 A 5
7725 E 6	3828 E 6	3778 A 2	3731 A 6	2773 D 5	2725 B 5
7726 E 1	3829 C 5	3779 B 2	3732 A 6	2774 C 5	2726 B 5
7727 A 1	3831 C 6	3780 B 2	3733 A 5	2776 E 4	2727 A 3
	3832 C 6	3781 B 3	3734 A 6	2777 D 5	2728 A 3
	5702 C 7	3782 B 1	3735 A 6	2778 D 2	2729 A 3
	5703 D 6	3784 B 2	3736 B 5	2779 C 4	2730 B 3
	5704 E 2	3785 C 1	3737 B 5	2780 C 3	2731 B 3
	5705 E 2	3786 D 1	3738 A 4	2781 D 1	2732 B 3
	5706 B 4	3787 C 3	3739 A 4	2782 E 1	2733 D 2
	5707 B 4	3788 C 1	3740 B 5	2783 E 2	2734 A 5
	5708 C 3	3789 C 1	3741 A 3	2784 C 2	2735 A 5
	5709 E 2	3790 A 5	3742 B 5	2785 C 1	2736 A 5
	5710 B 1	3791 E 6	3743 A 3	2786 C 1	2737 B 7
	5711 A 5	3792 E 6	3744 B 4	2787 A 4	2738 A 3
	5712 B 1	3793 D 6	3745 B 4	2788 A 3	2739 A 2
	5713 E 6	3794 C 6	3746 D 2	2789 A 2	2740 A 2
	6701 B 4	3795 C 6	3747 B 4	2791 D 2	2741 A 6
	6702 D 2	3796 D 6	3748 B 4	2792 C 2	2742 B 2

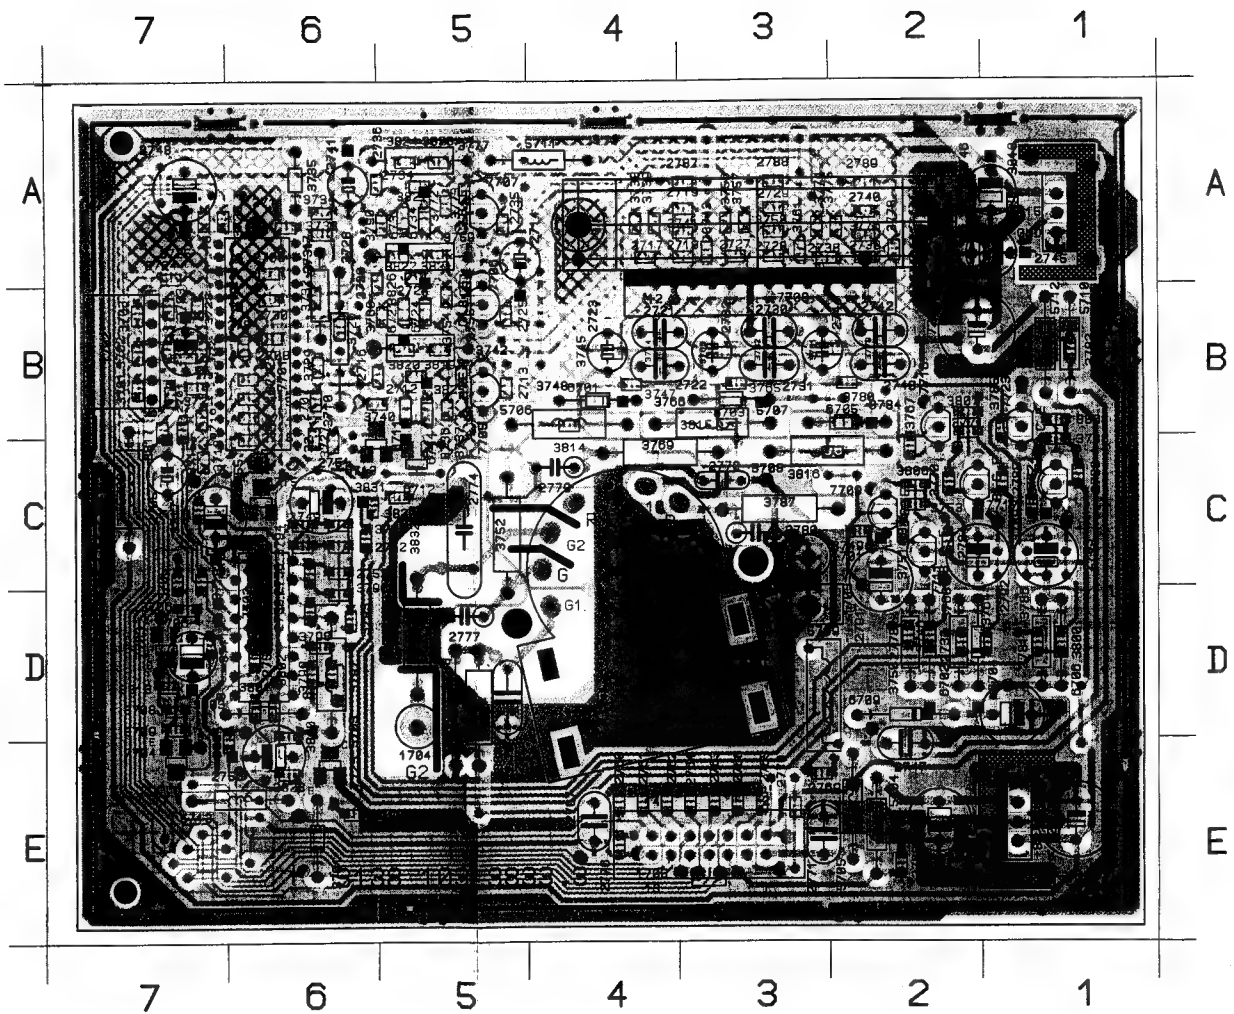


Power Switch Panel C.B.A

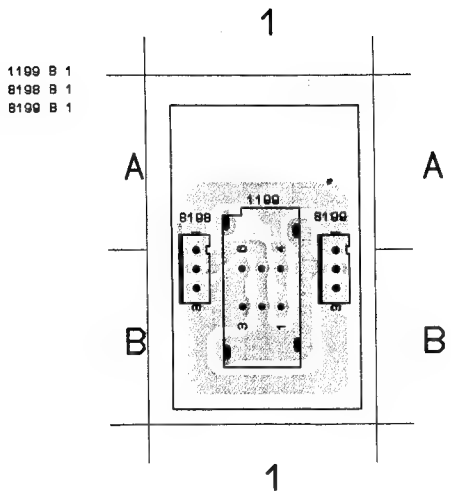



Earphone Panel C.B.A. (F)

8833 A 3	5884 A 1	3885 A 4	3881 A 3	2884 A 4
8884 A 4	3883 A 1	3882 A 3	2885 A 4	
8831 A 2	3884 A 1	3883 A 4	2886 A 3	
8832 A 3	5883 A 1	3884 A 4	2887 A 3	

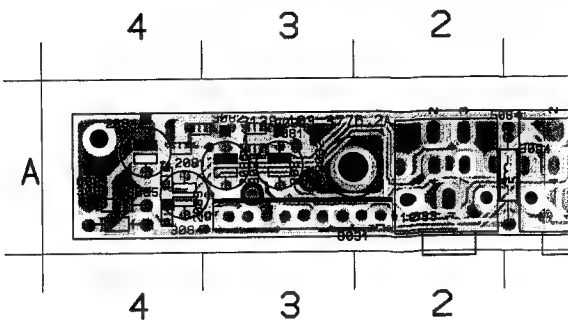



Power Switch Panel C.B.A. (G)

Terminal Panel C.B.A. (A1)

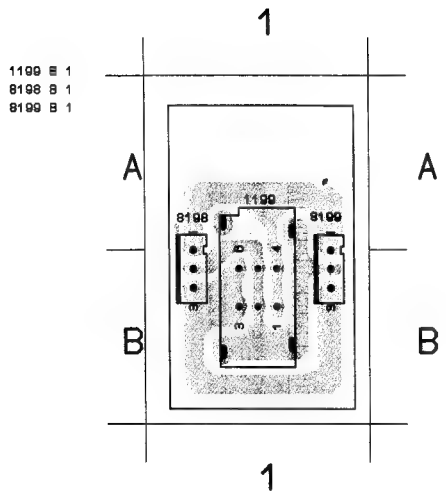
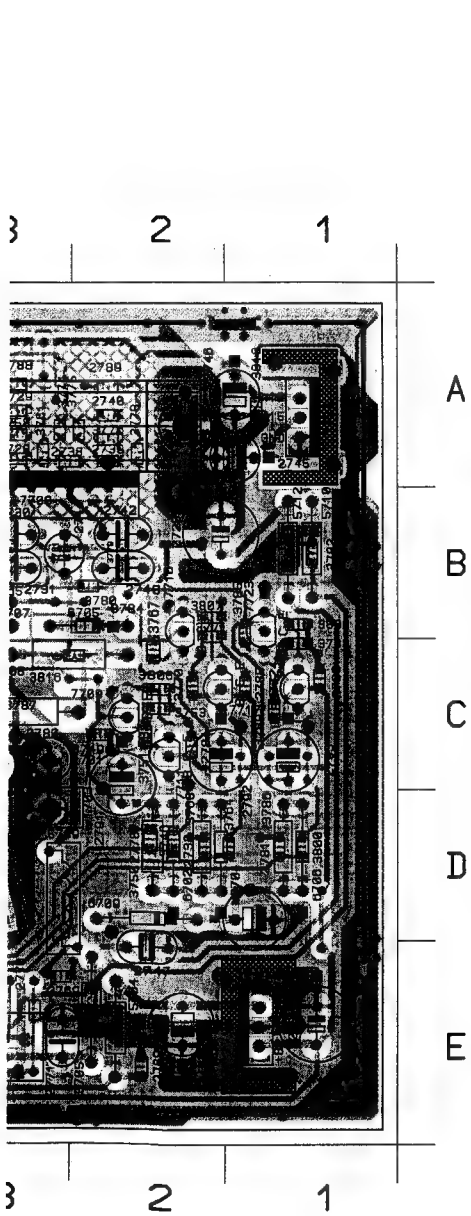


Earphone Panel C.B.A. (F)

8093 A 3	5084 A 1	3095 A 4	3081 A 3	2084 A 4	1032 A 1
8084 A 4	3093 A 1	3082 A 3	2085 A 4	1033 A 2	
8031 A 2	3084 A 1	3083 A 4	2086 A 3	2081 A 4	
8032 A 3	5083 A 1	3084 A 4	2087 A 3	2082 A 3	

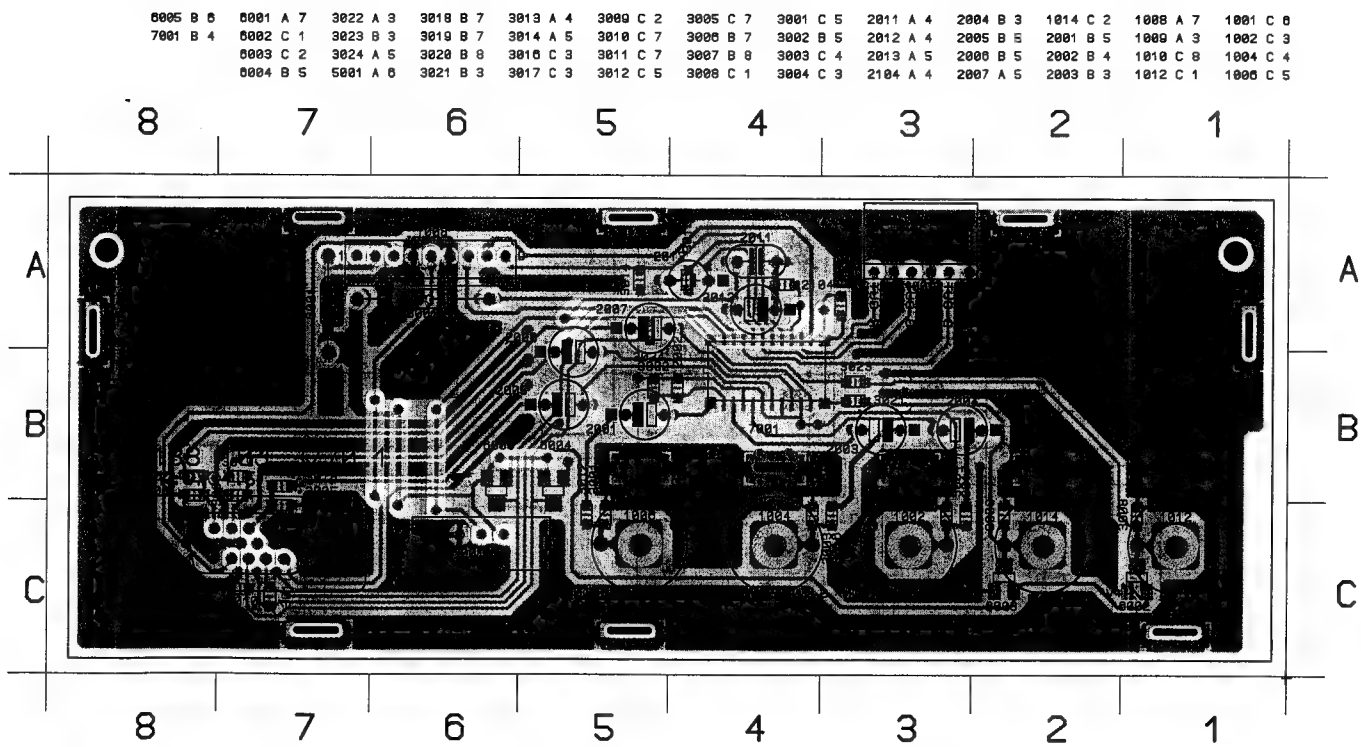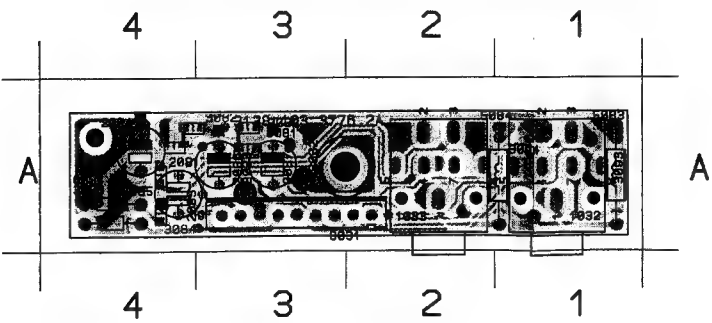

A1

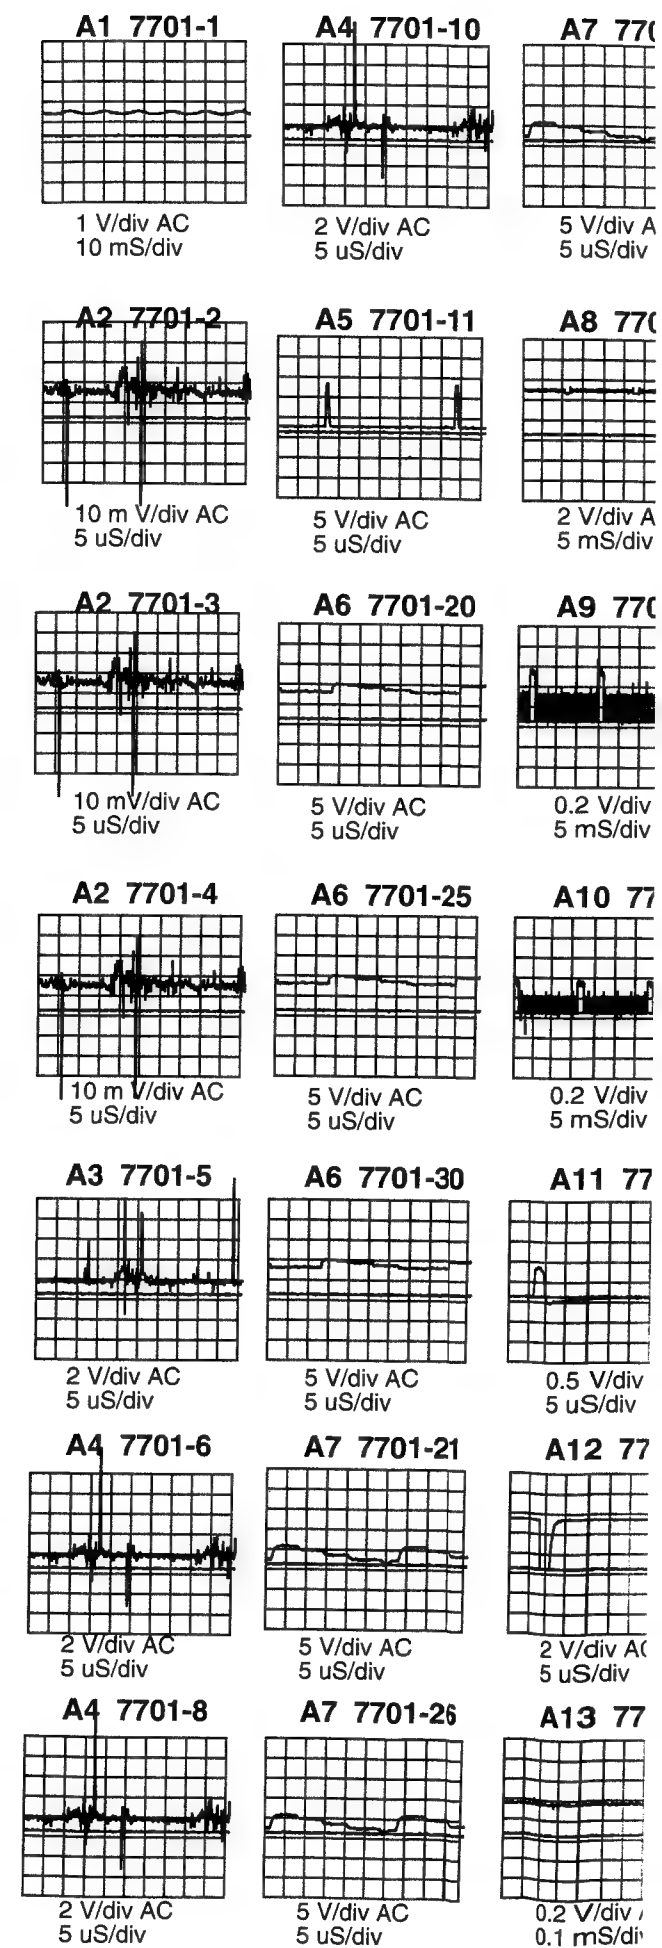
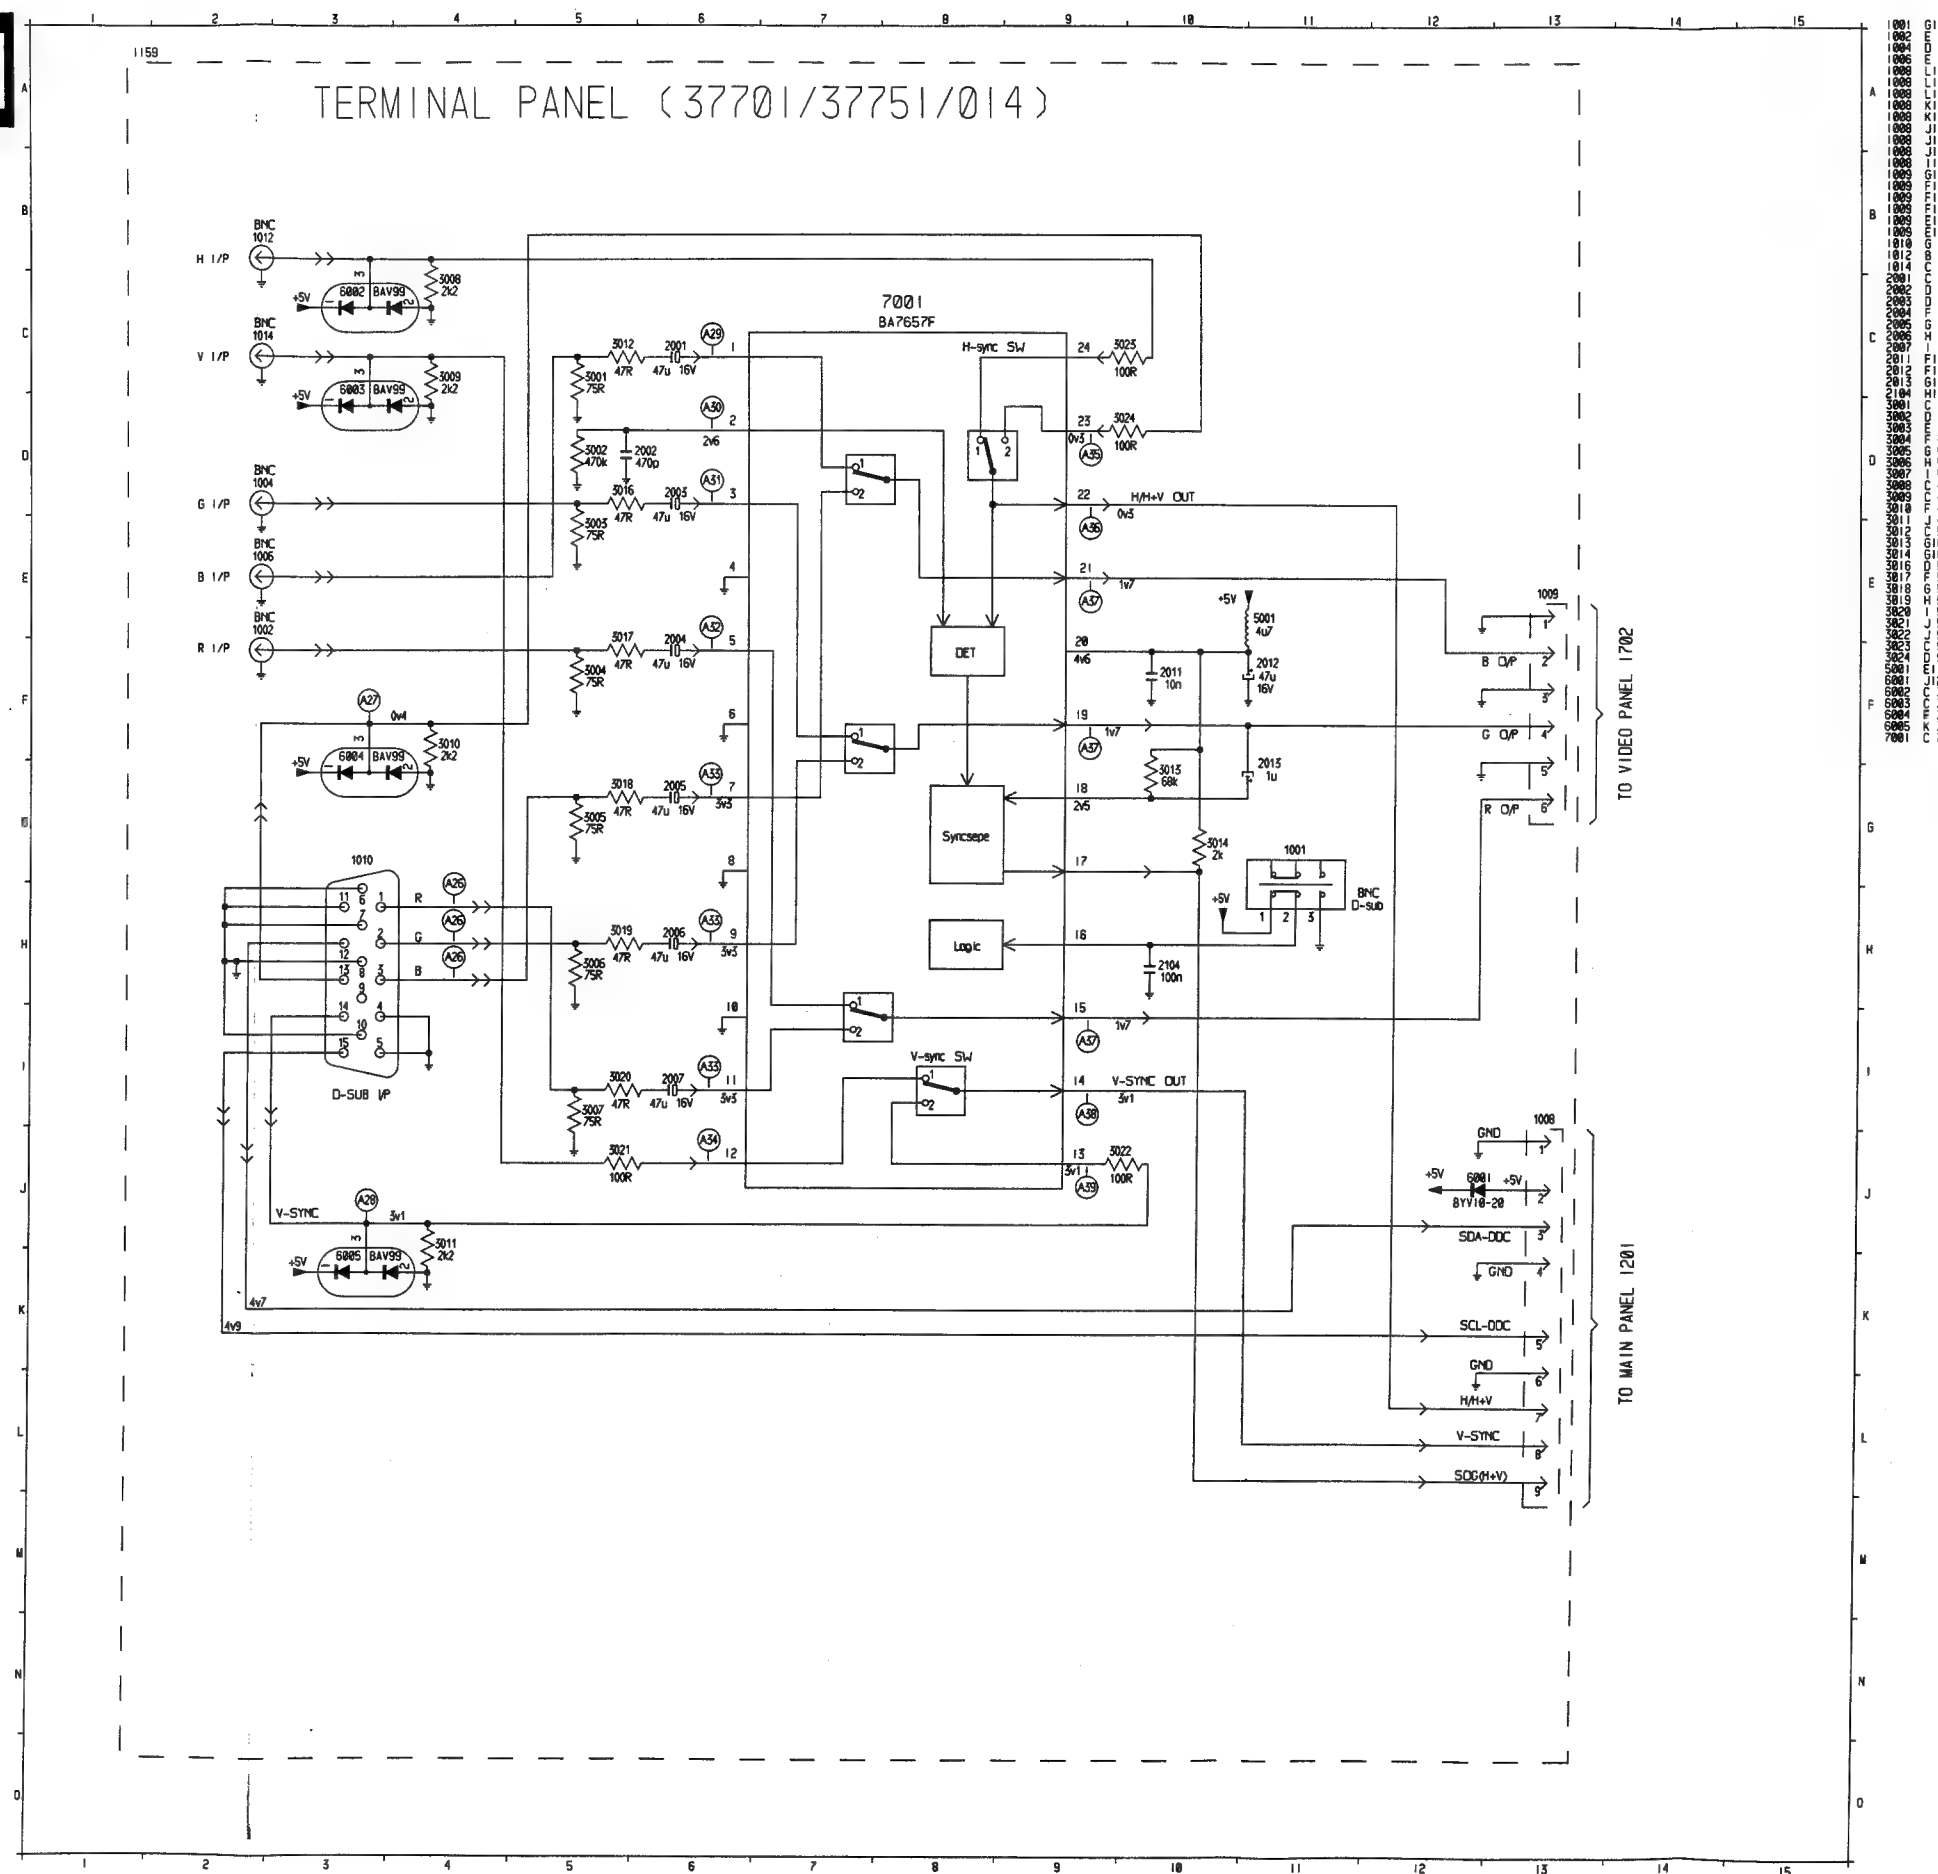


Waveforms for Diagram A1 and A2

1001
1002
1003
1004
1005
1006
1007
1008
1009
1010
1011
1012
1013
1014
1015
1016
1017
1018
1019
1020
1021
1022
1023
1024
1025
1026
1027
1028
1029
1030
1031
1032
1033
1034
1035
1036
1037
1038
1039
1040
1041
1042
1043
1044
1045
1046
1047
1048
1049
1050
1051
1052
1053
1054
1055
1056
1057
1058
1059
1060
1061
1062
1063
1064
1065
1066
1067
1068
1069
1070
1071
1072
1073
1074
1075
1076
1077
1078
1079
1080
1081
1082
1083
1084
1085
1086
1087
1088
1089
1090
1091
1092
1093
1094
1095
1096
1097
1098
1099
1100
1101
1102
1103
1104
1105
1106
1107
1108
1109
1110
1111
1112
1113
1114
1115
1116
1117
1118
1119
1120
1121
1122
1123
1124
1125
1126
1127
1128
1129
1130
1131
1132
1133
1134
1135
1136
1137
1138
1139
1140
1141
1142
1143
1144
1145
1146
1147
1148
1149
1150
1151
1152
1153
1154
1155
1156
1157
1158
1159
1160
1161
1162
1163
1164
1165
1166
1167
1168
1169
1170
1171
1172
1173
1174
1175
1176
1177
1178
1179
1180
1181
1182
1183
1184
1185
1186
1187
1188
1189
1190
1191
1192
1193
1194
1195
1196
1197
1198
1199
1200


TO VIDEO PANEL 1702

TO MAIN PANEL 1201

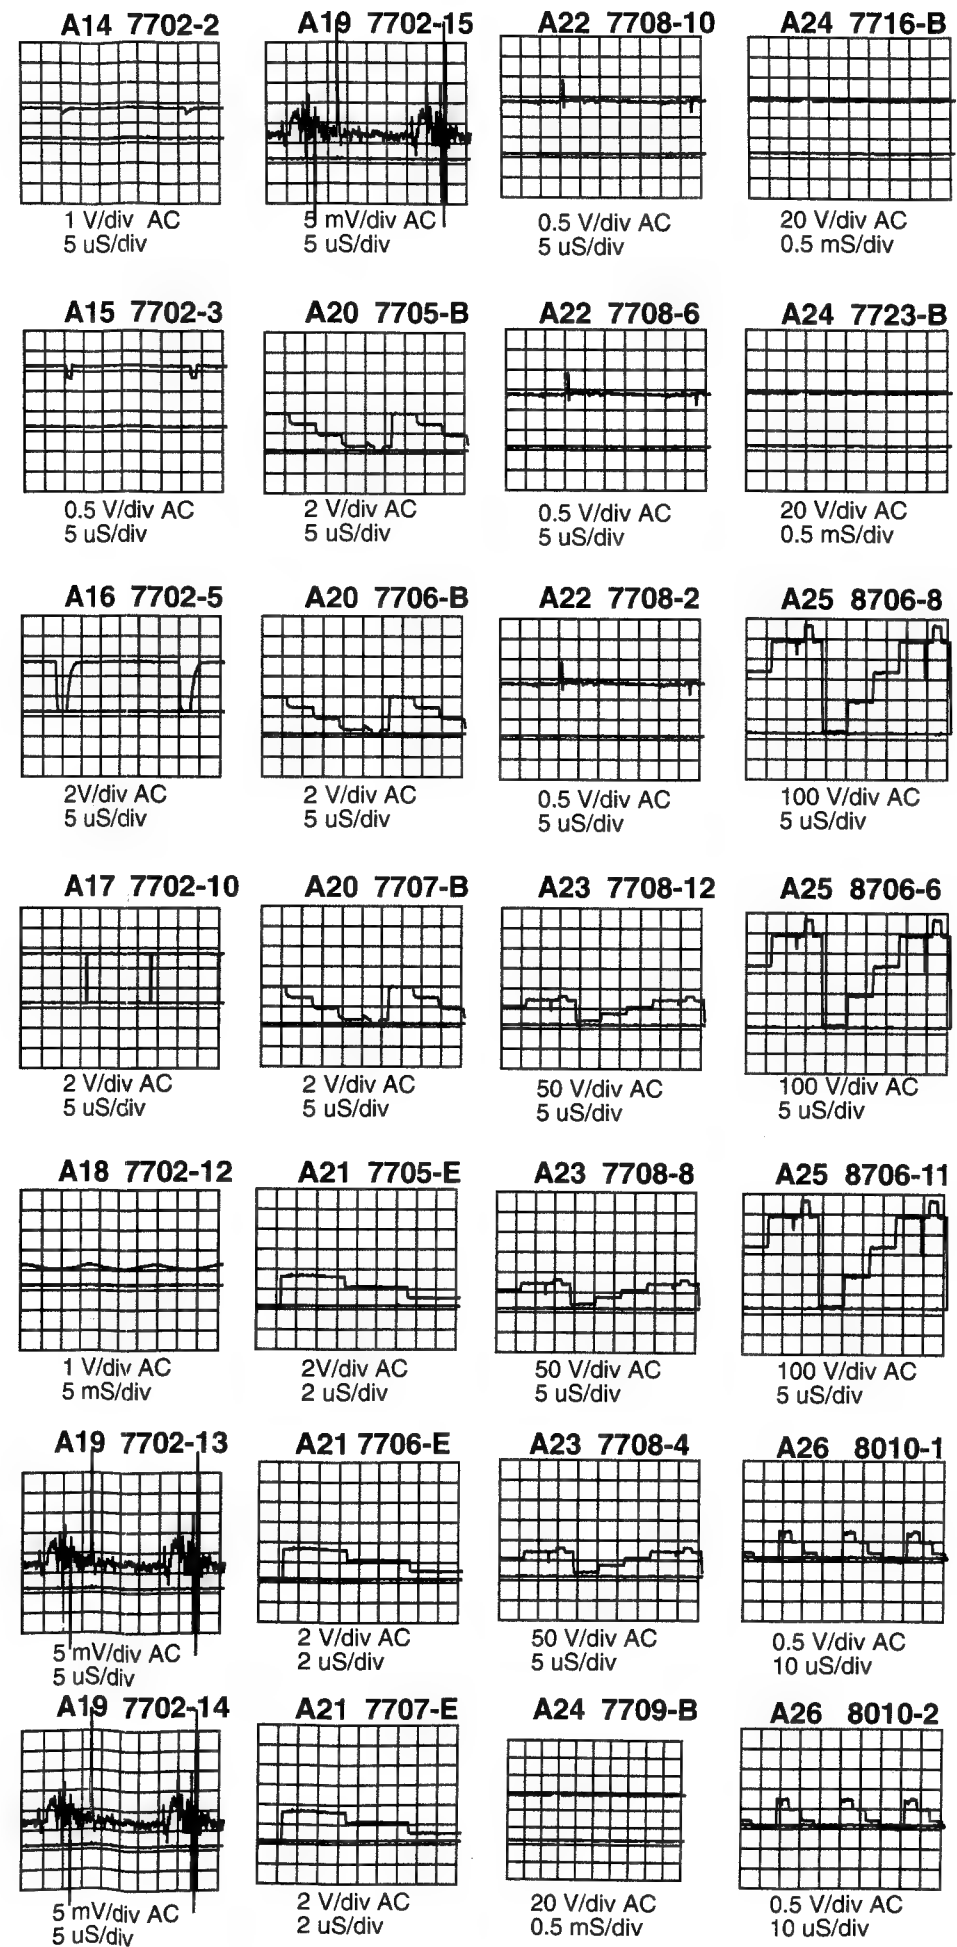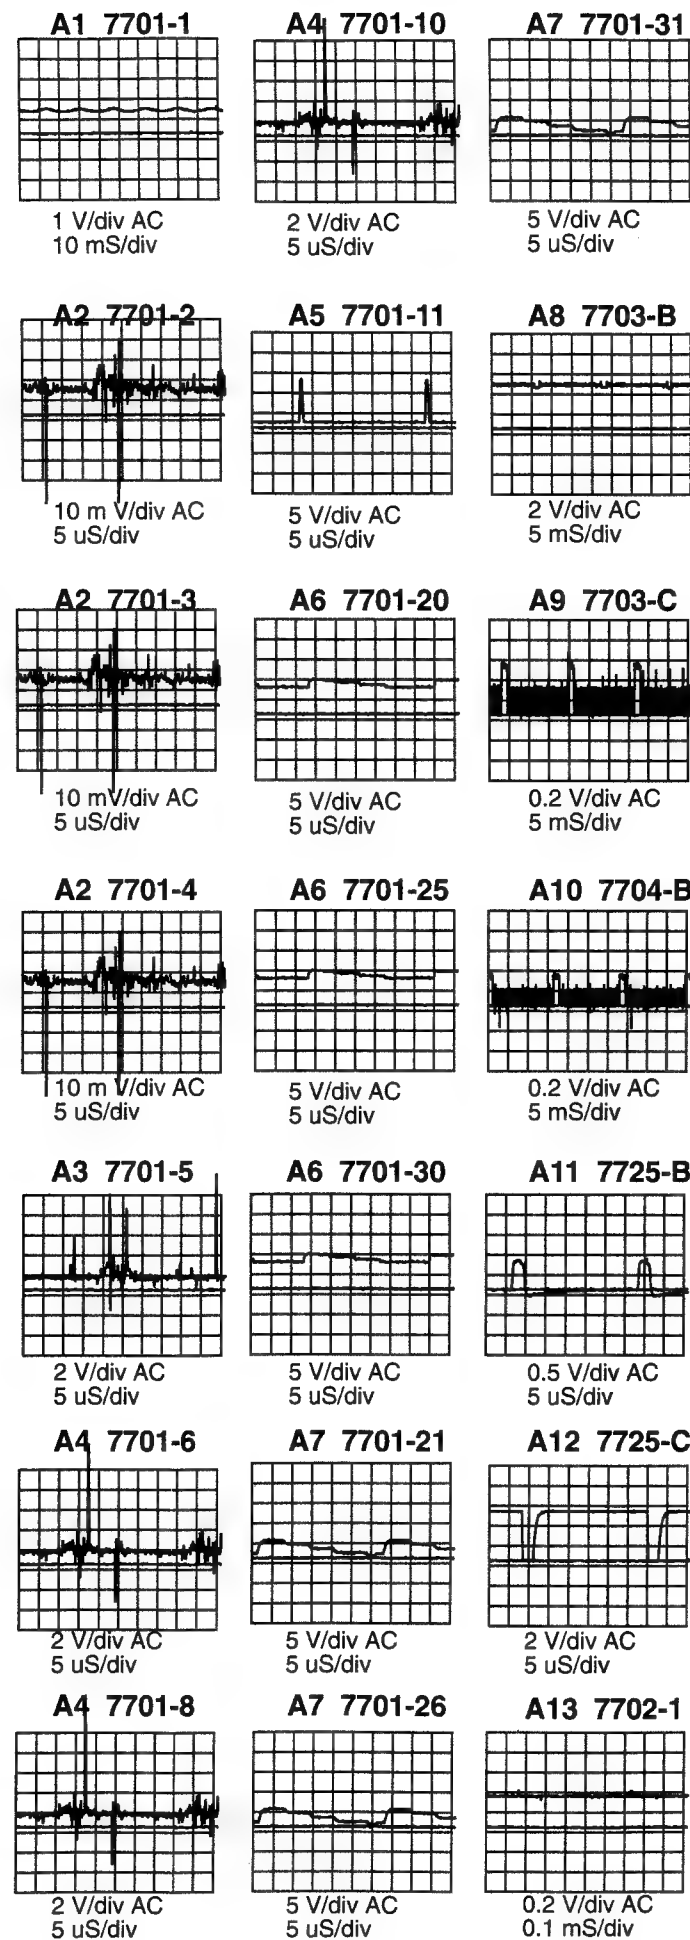


Video Schematic Diagram


A2

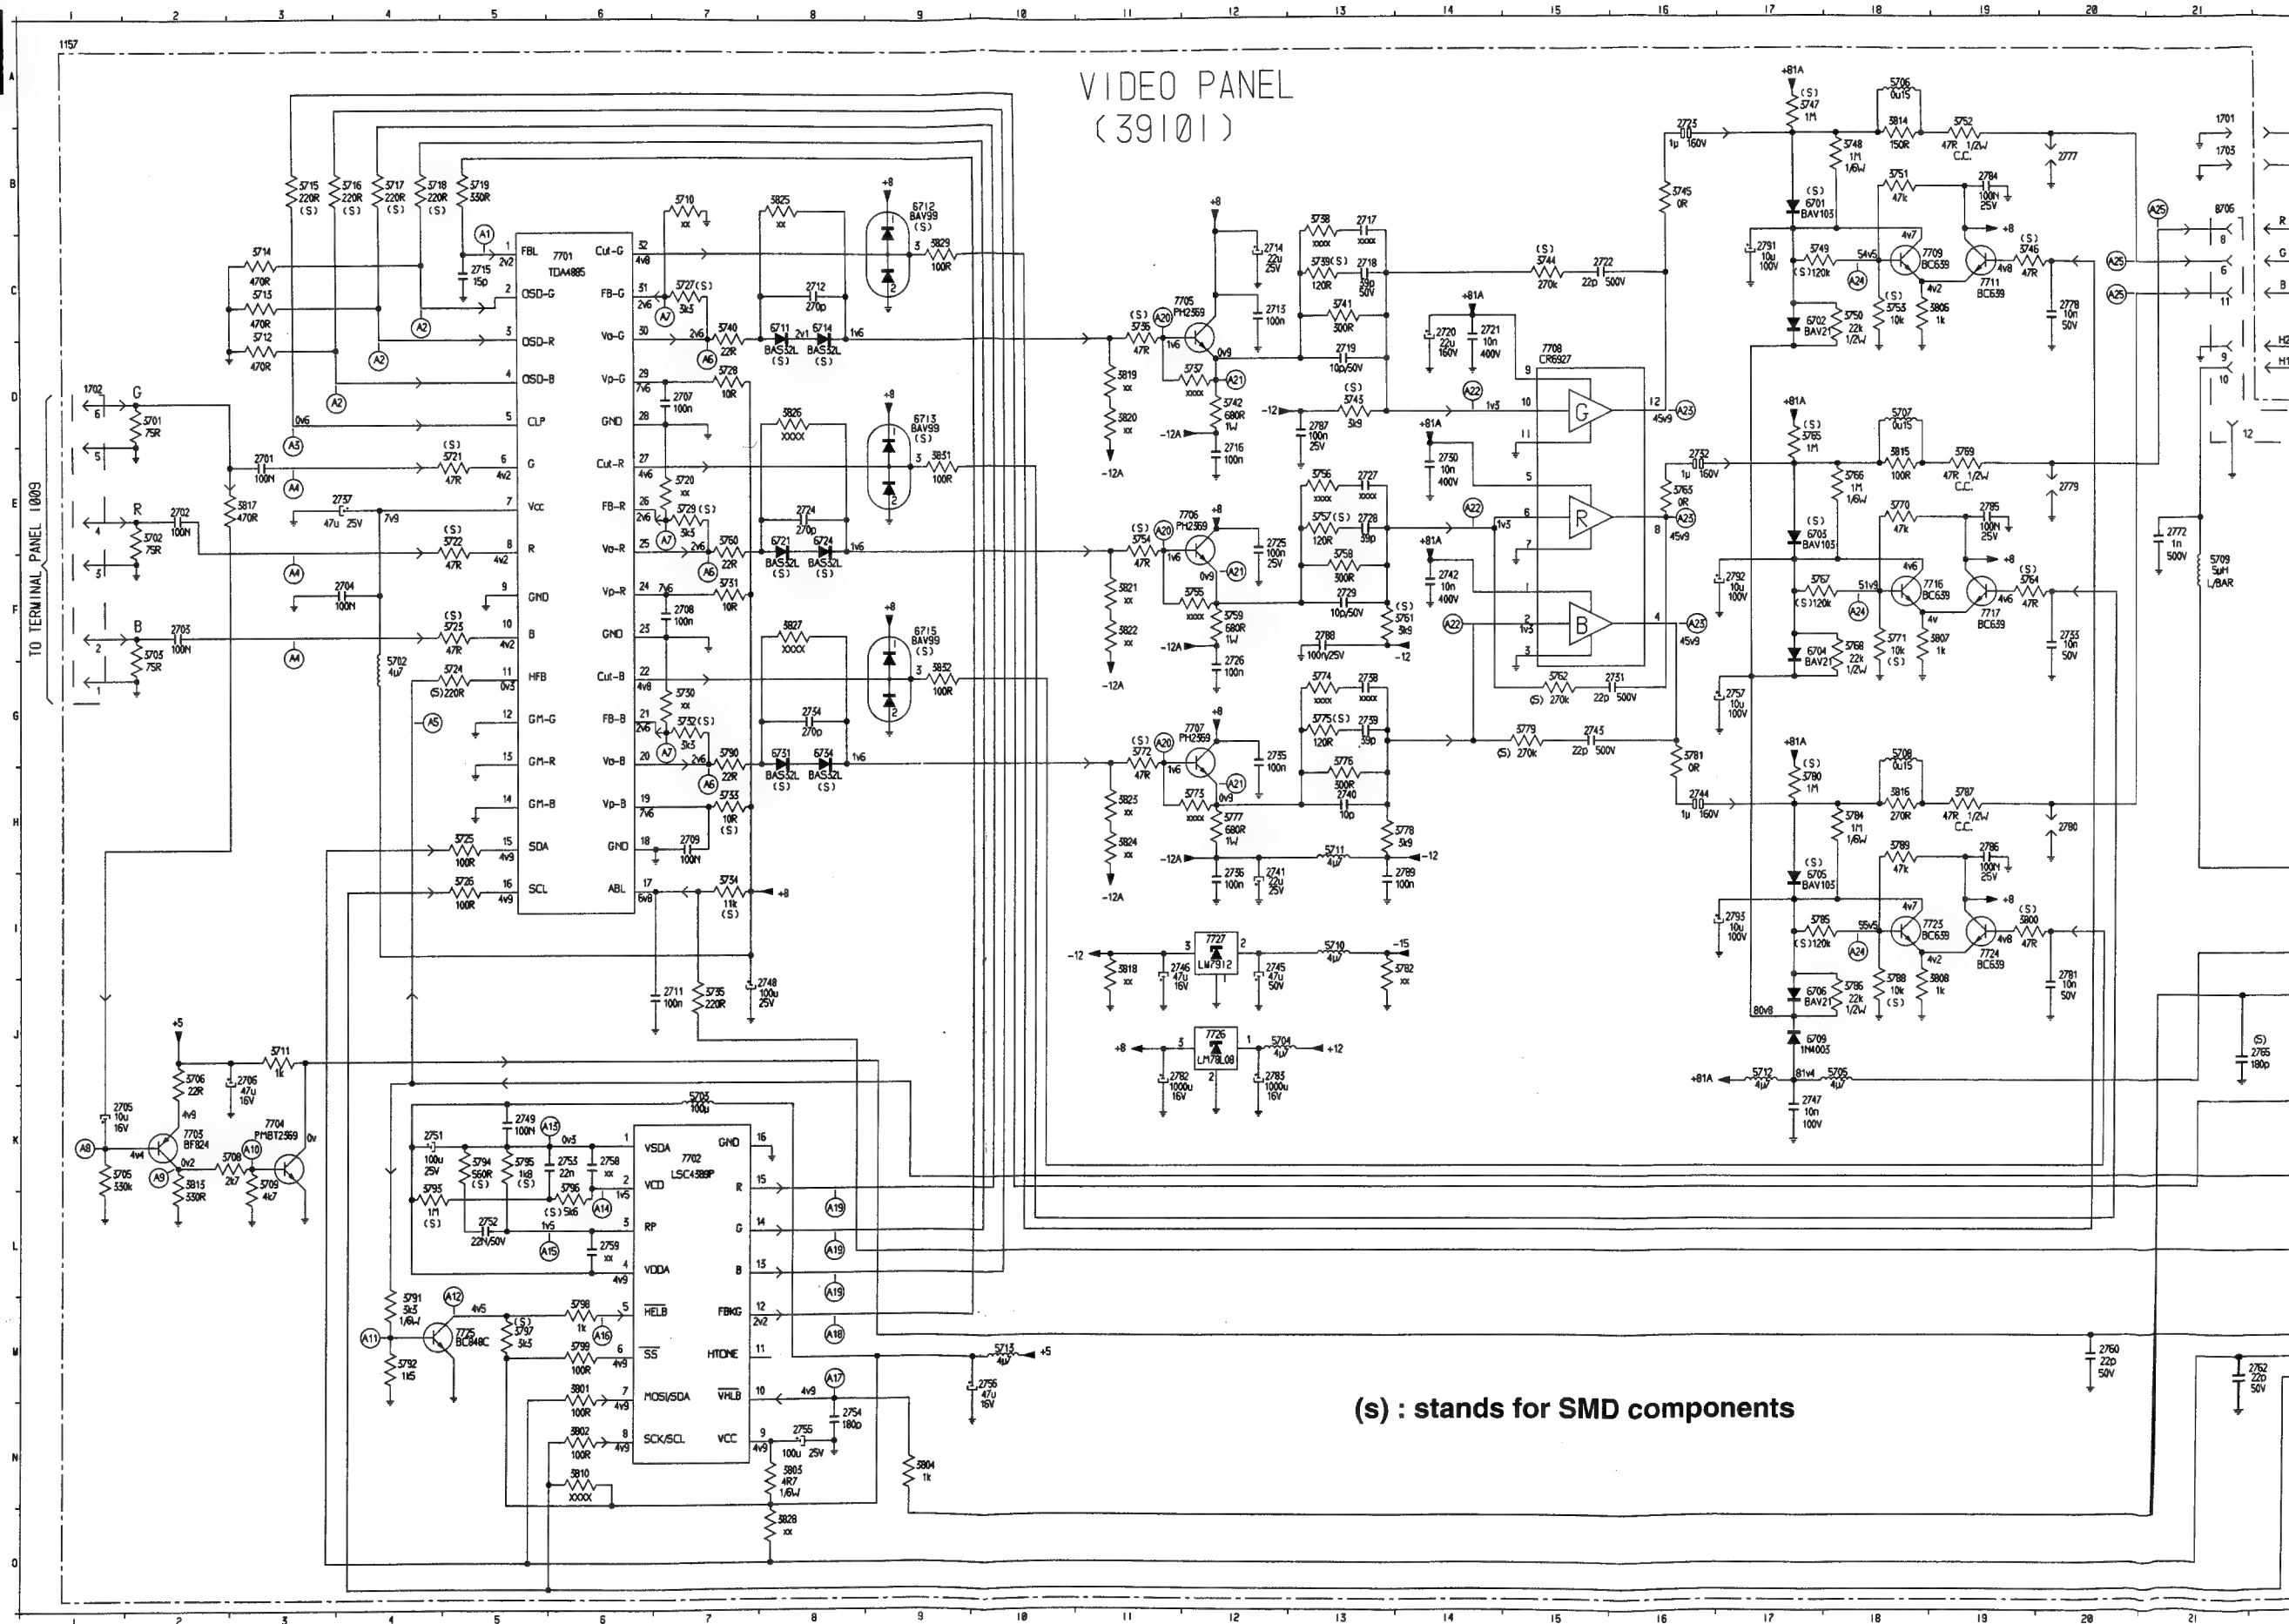


Deflection Schematic Diagram

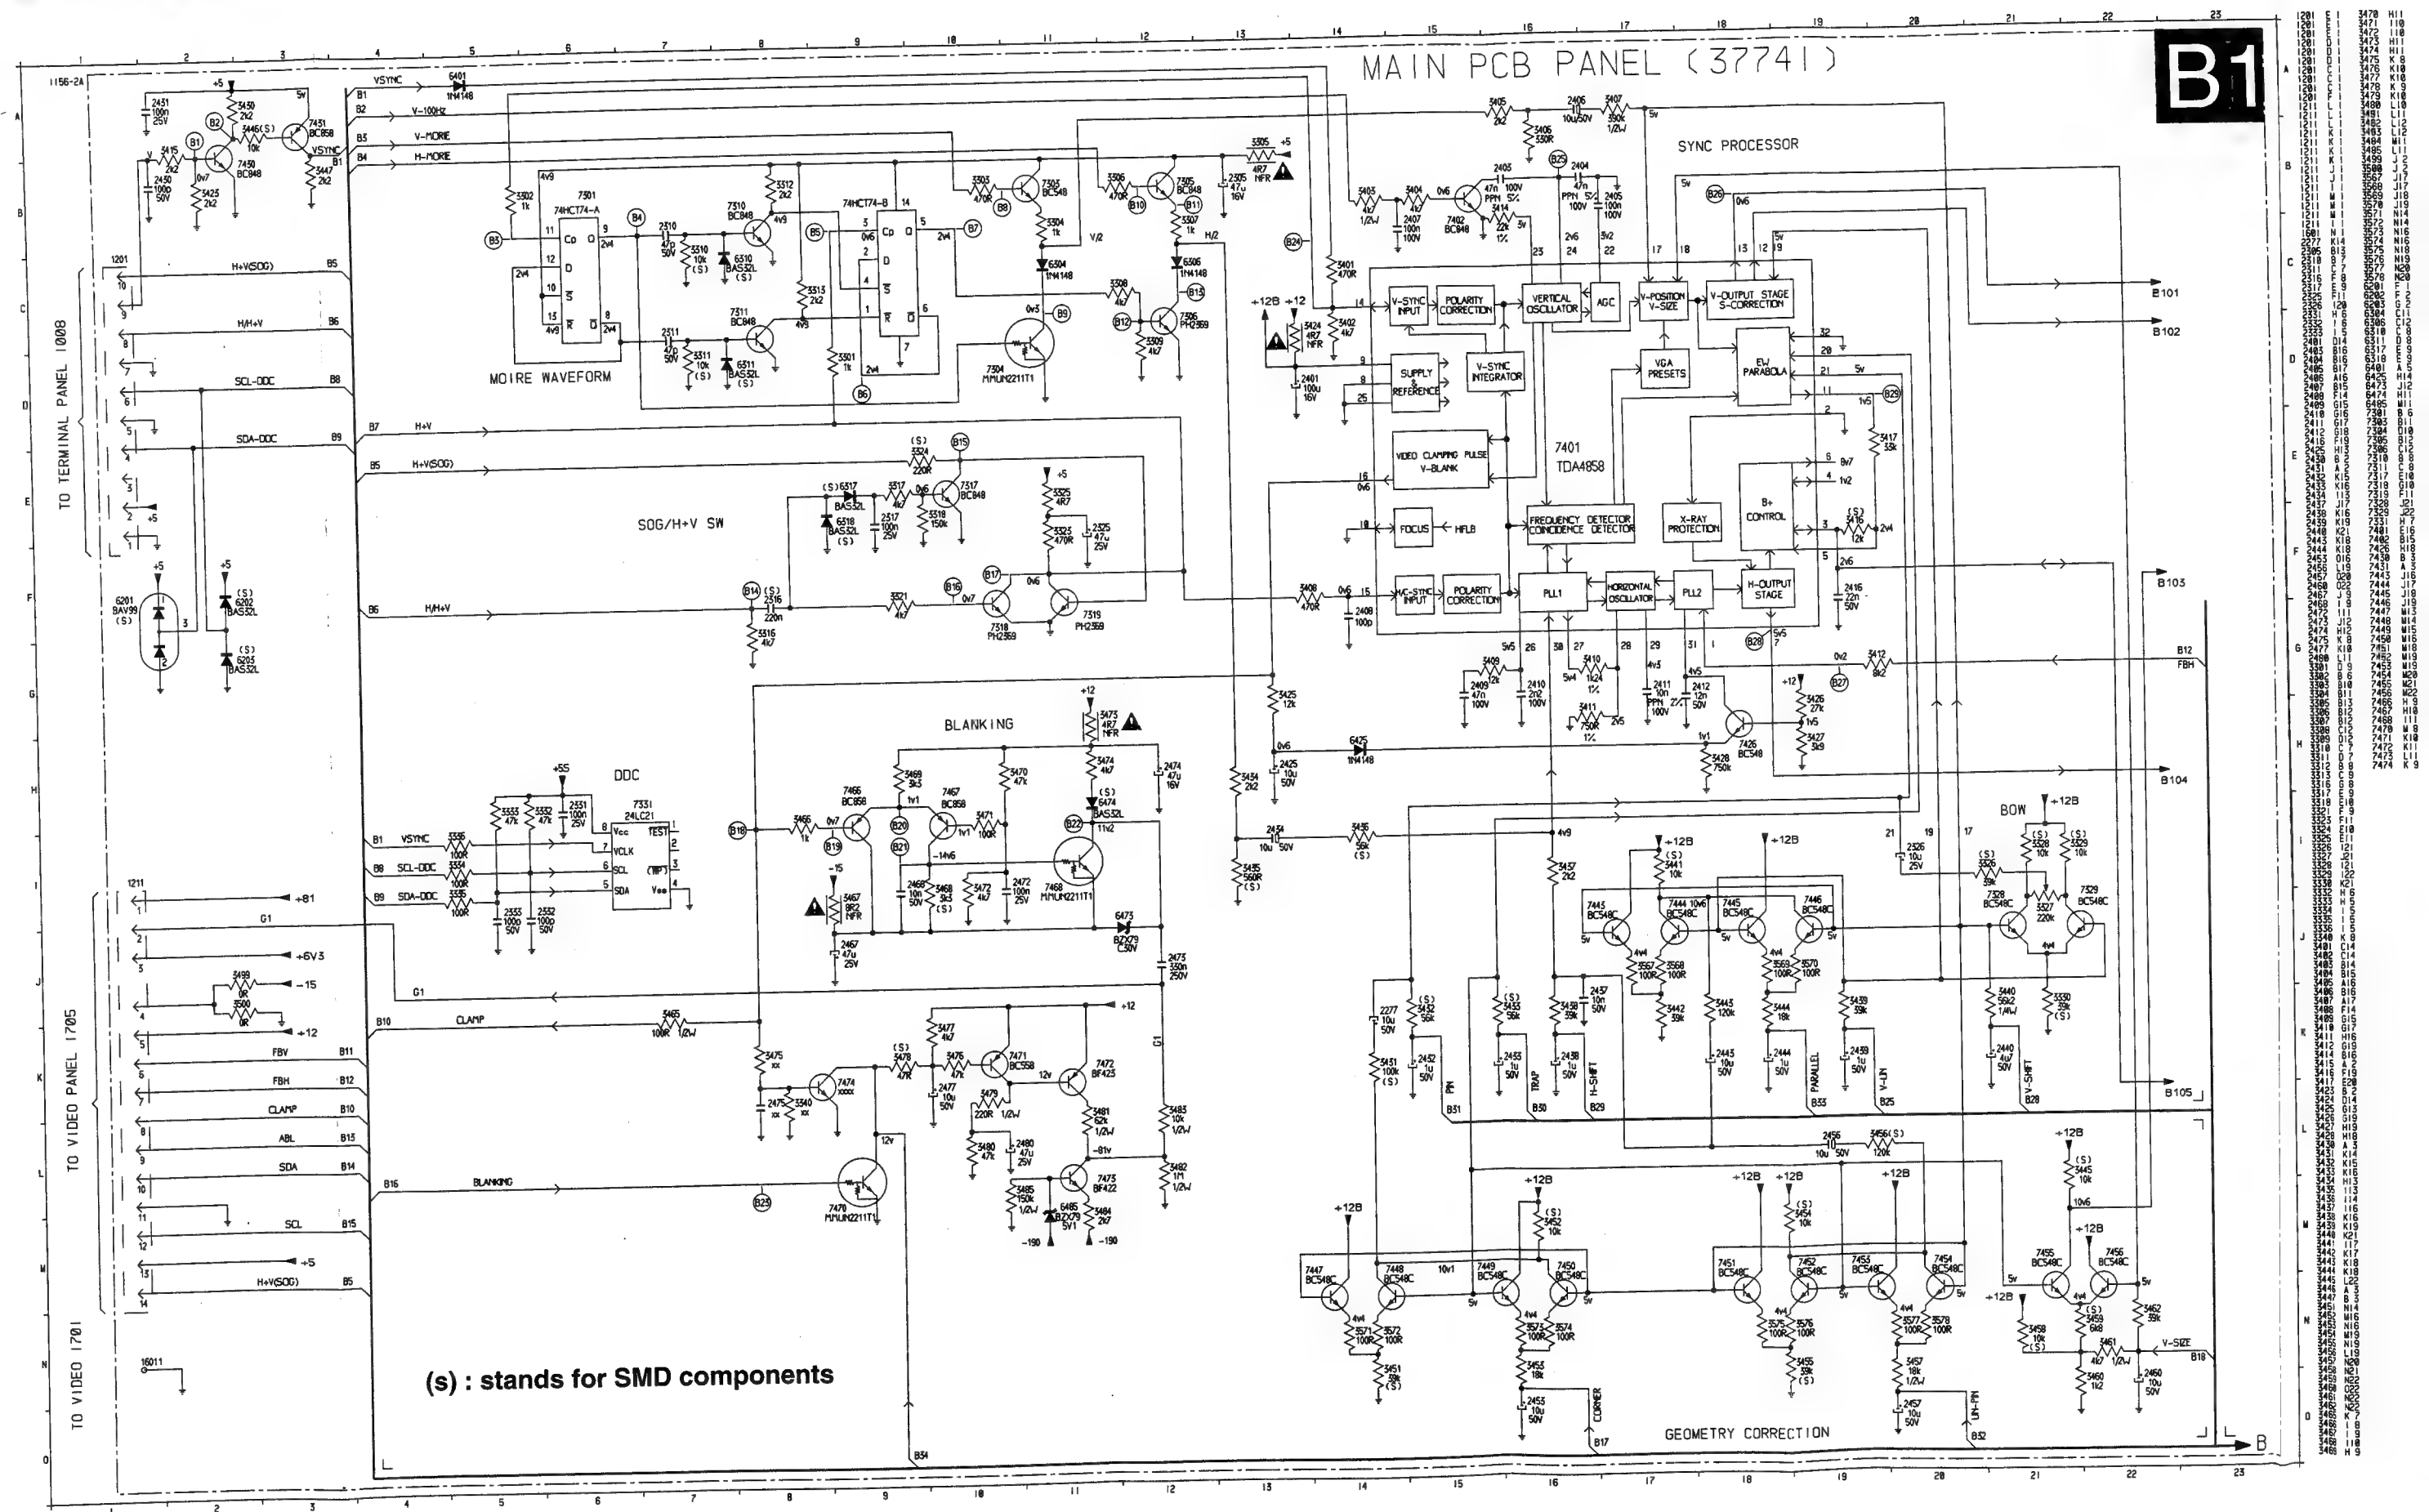

Waveforms for Diagram B1 and B2

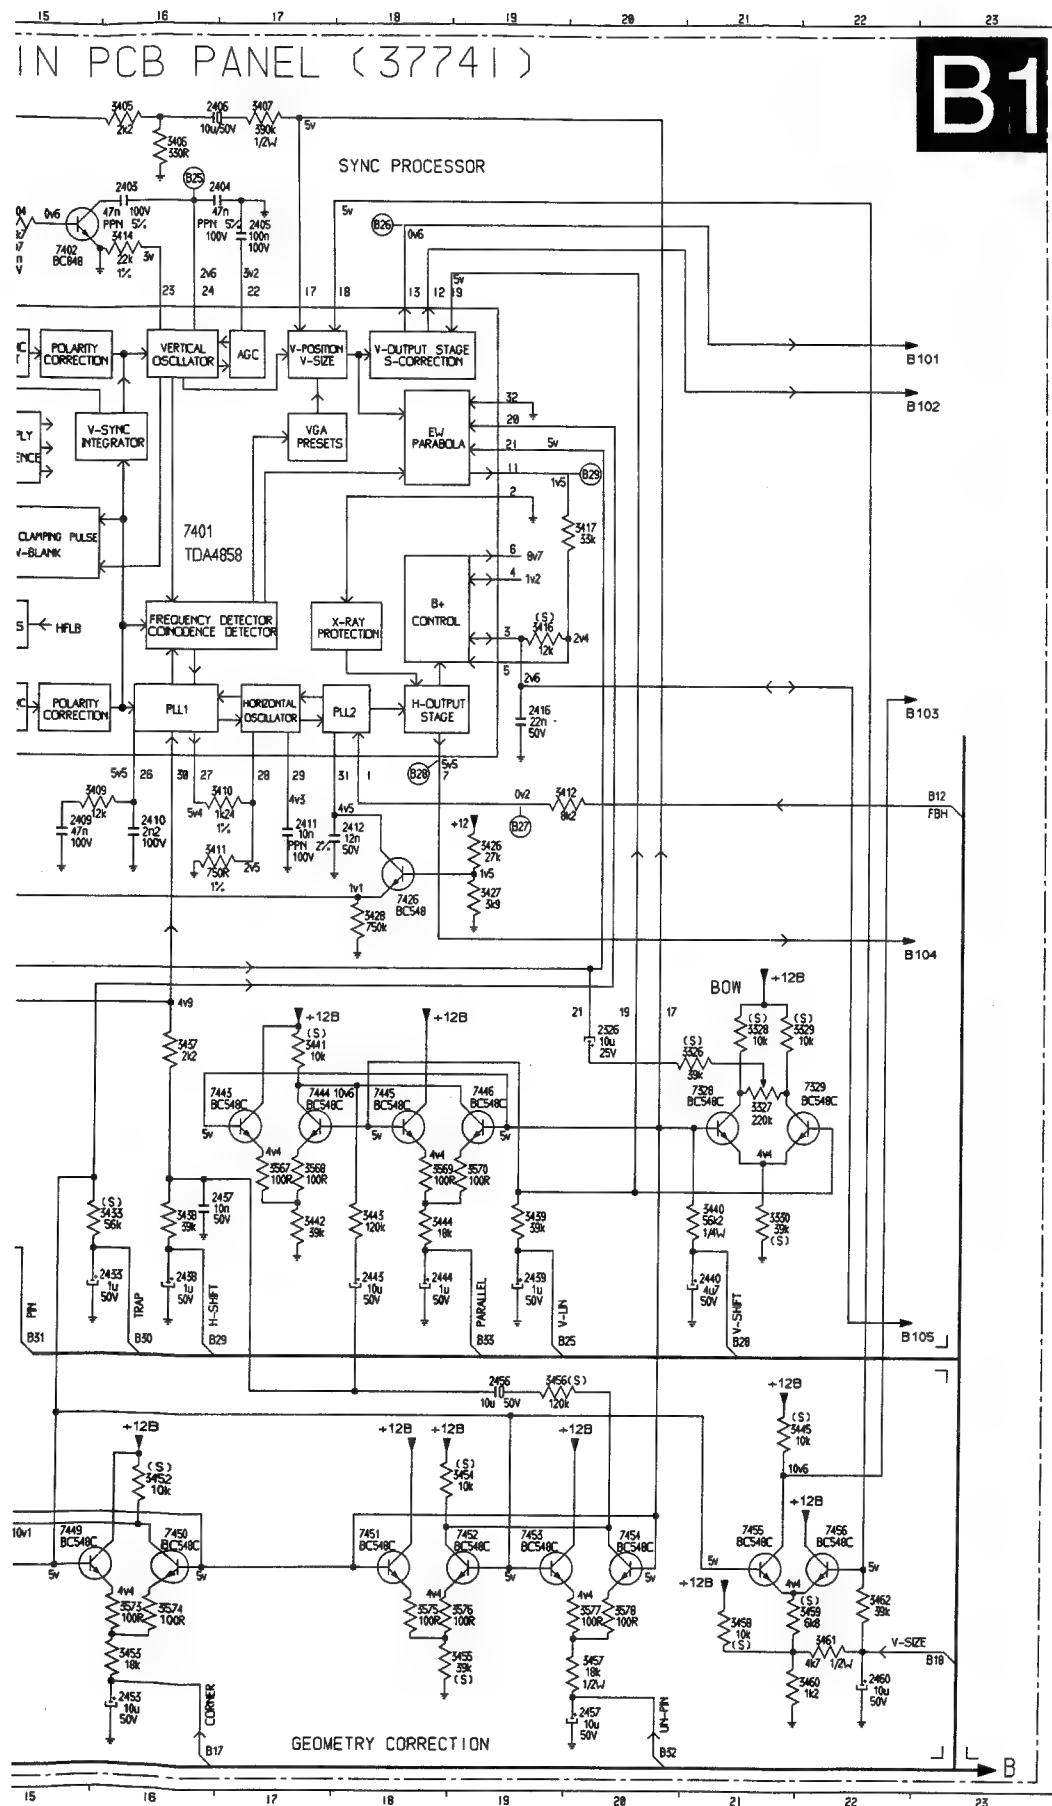


B1 7430-B

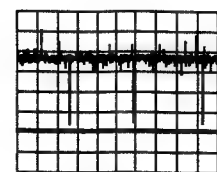


0.2 V/div AC
5 mS/div

B8 7303-B

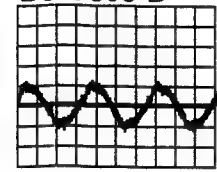


50 mV/div AC
20 uS/div

B15 7317-C

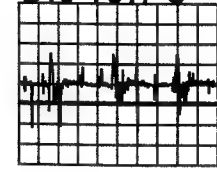


50 mV/div AC
10 uS/div

B22 7468-C

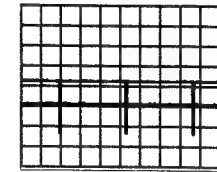


10 V/div AC
5 mS/div

B29 7401-11

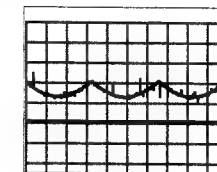


0.1 V/div AC
5 mS/div

B36 7501-4

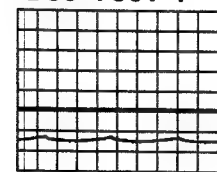


10 V/div AC
5 mS/div

B2 7430-C

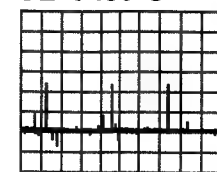


2 V/div AC
5 mS/div

B9 7304-C

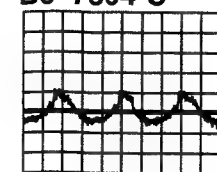

0.2 V/div AC
5 mS/div

B16 7318-B

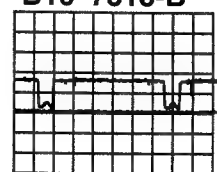


0.5 V/div AC
5 uS/div

B23 7470-B




0.1 V/div AC
5 uS/div

B30 7518-C

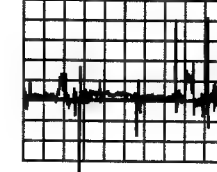


0.1 V/div AC
5 uS/div

B37 7501-7

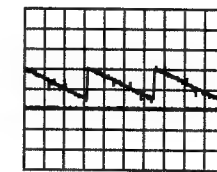


0.5 V/div AC
5 mS/div

B3 7301-11

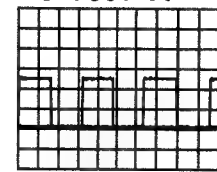


2 V/div AC
5 mS/div

B10 7305-B

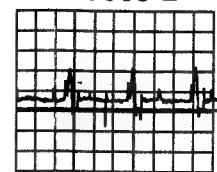


50 mV/div AC
10 uS/div

B17 7318-C

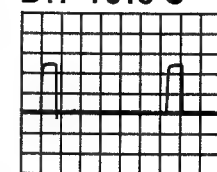


21 V/div AC
5 uS/div

B24 7401-14

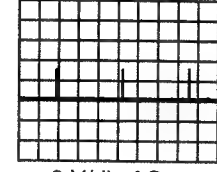


2 V/div AC
5 mS/div

B31 7518-B

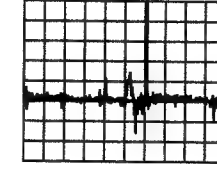


0.1 V/div AC
5 uS/div

B38 7501-7

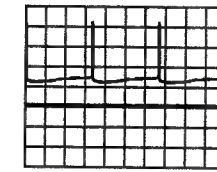

10 V/div AC
5 mS/div

B4 7301-9

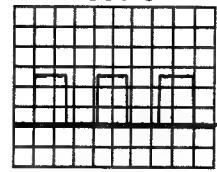









2 V

MAIN PCB PANEL (37741)

[illegible]

U-CTRL Schematic Diagram

B3

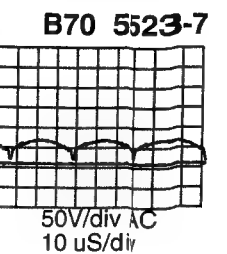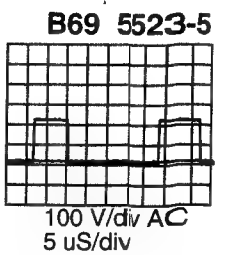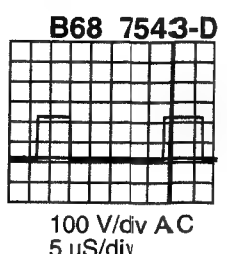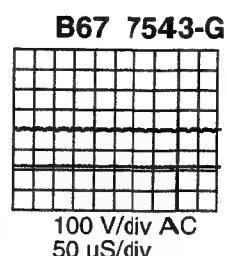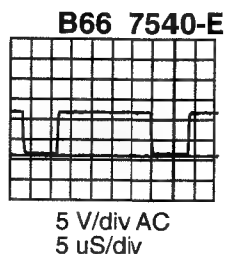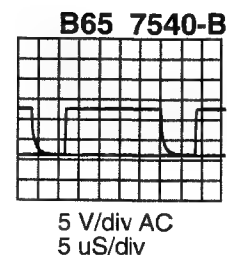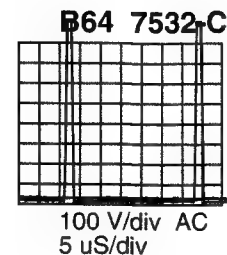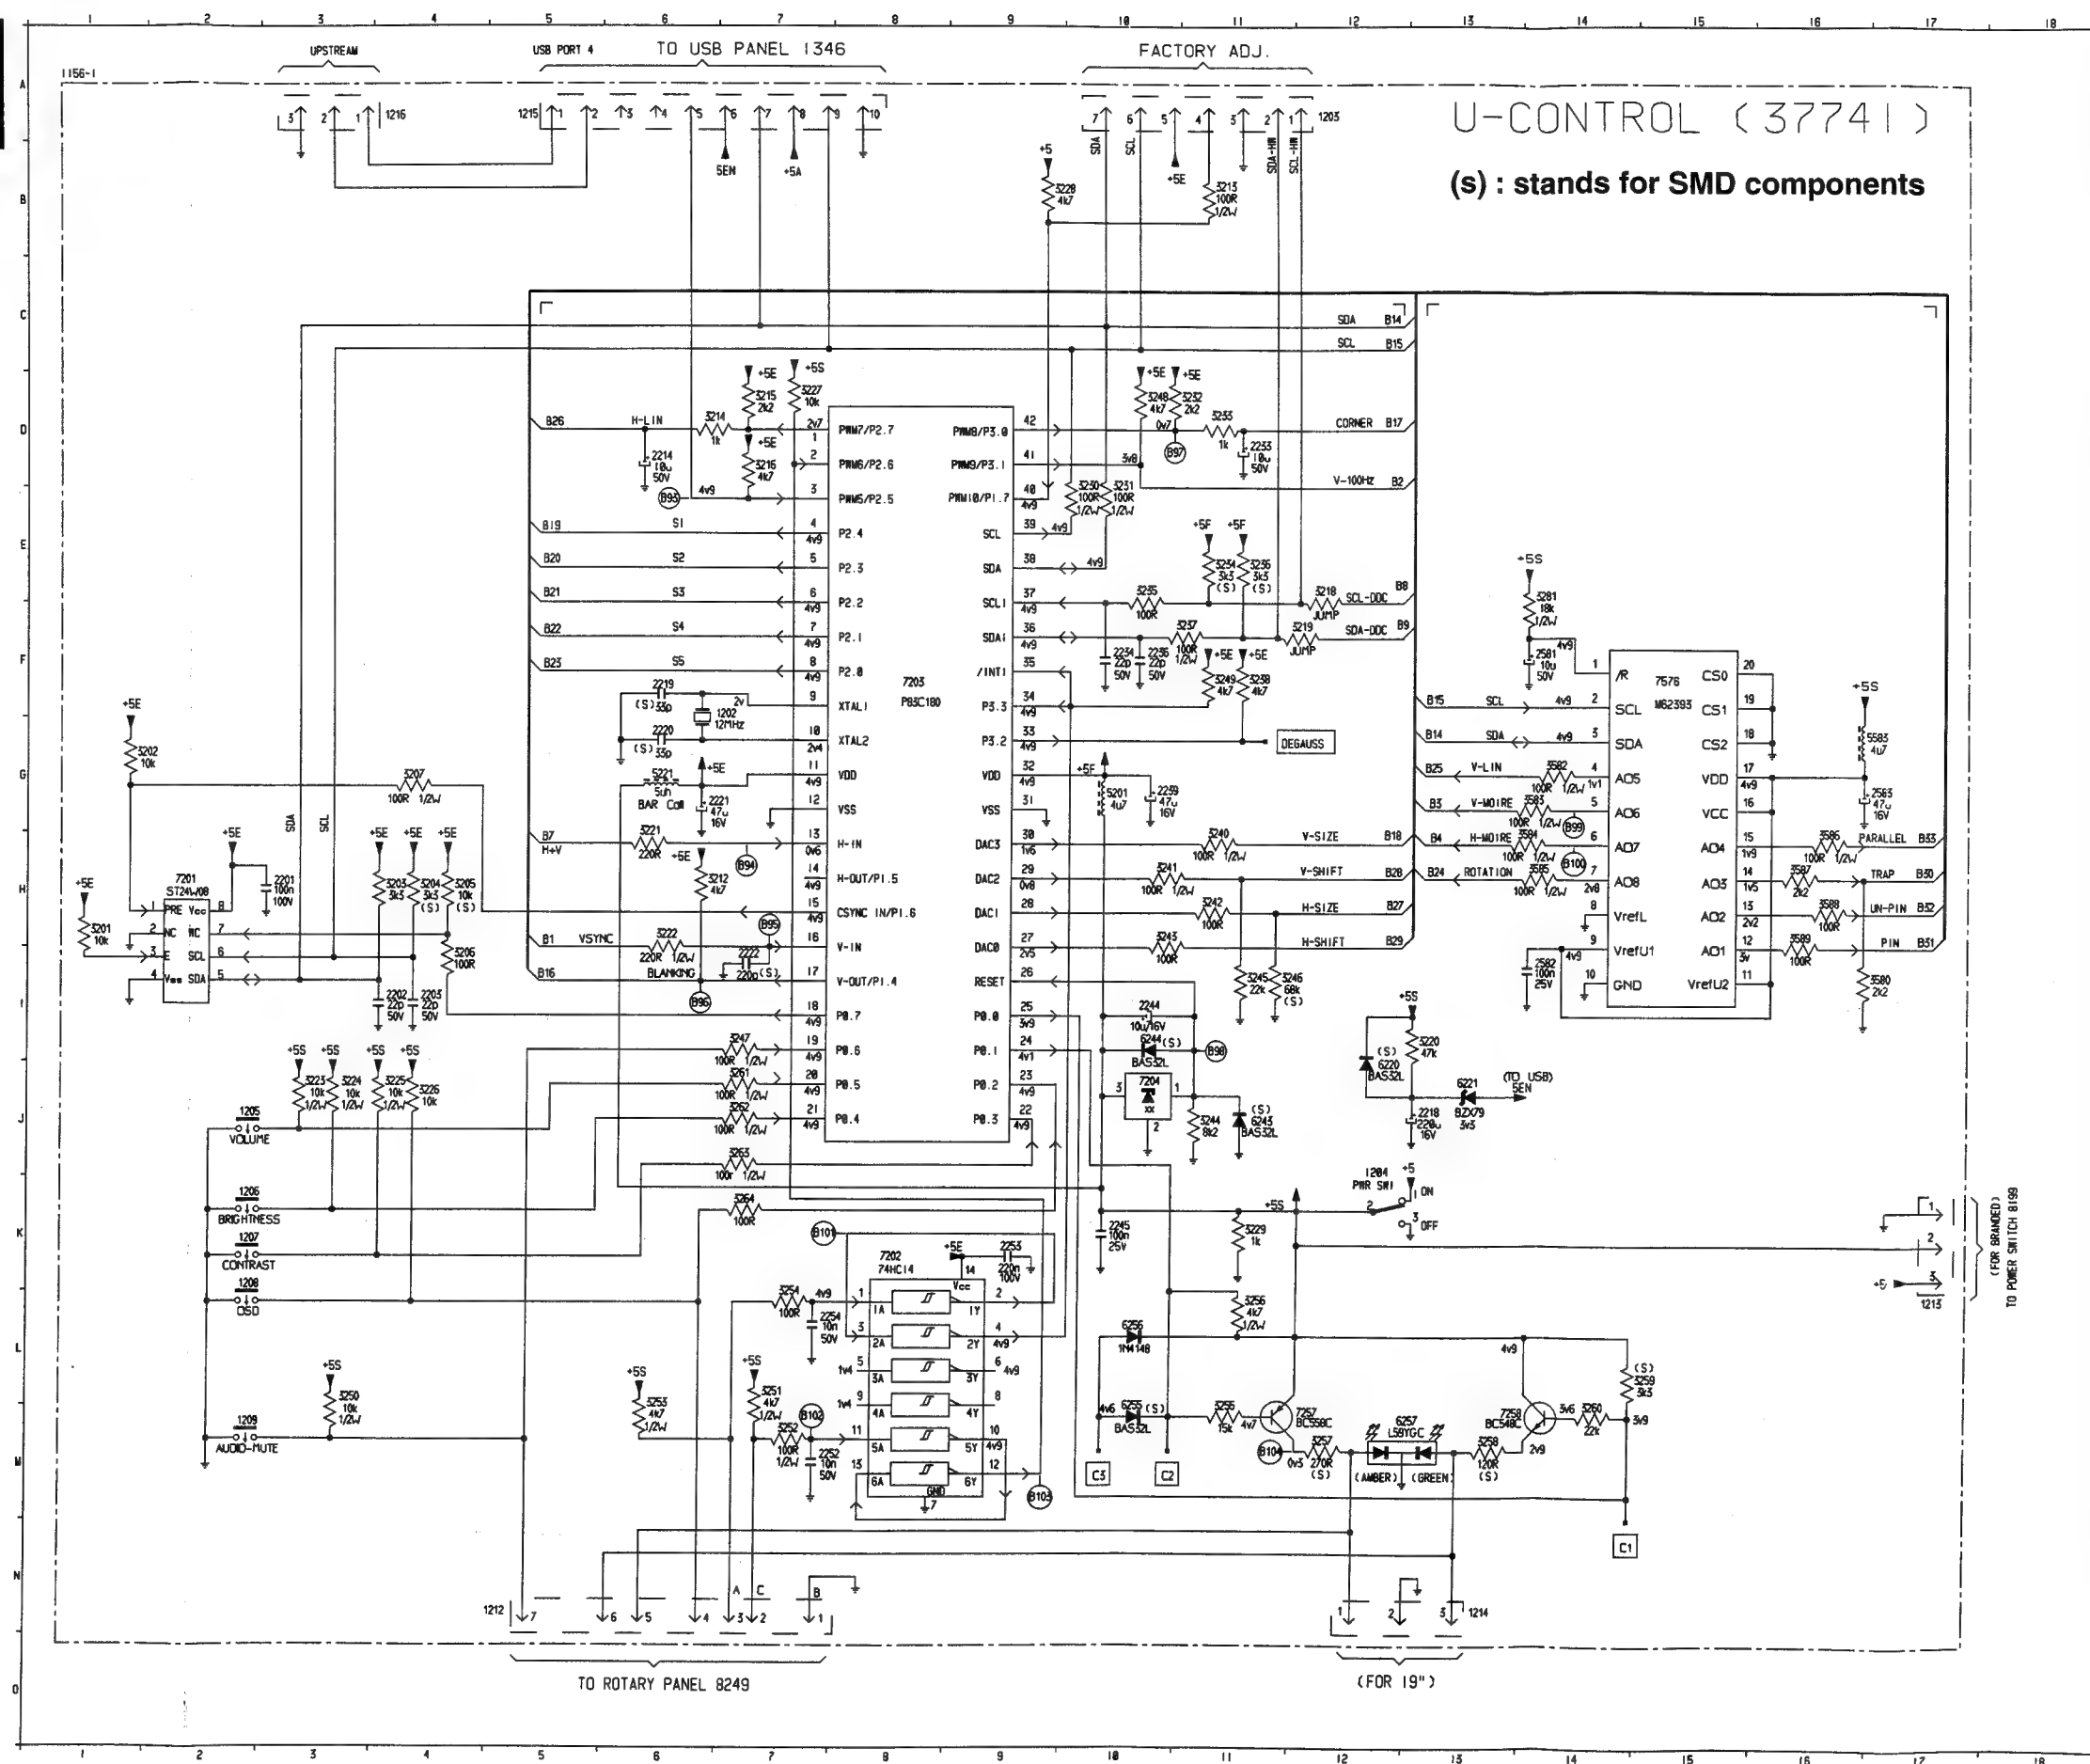

14 15 16 17 18



1-CONTROL (37741)

) : stands for SMD components


1214

14 15 16 17 18


SMD : stands for SMD components


























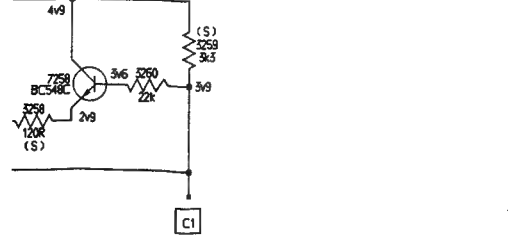
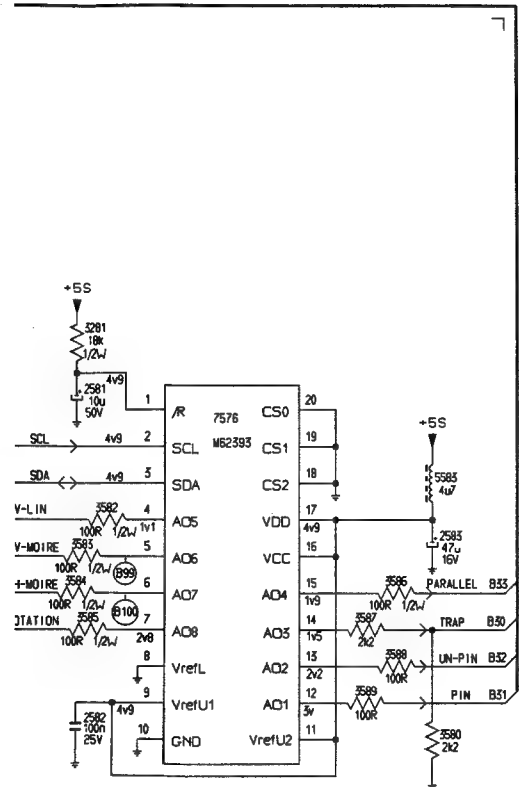


1214

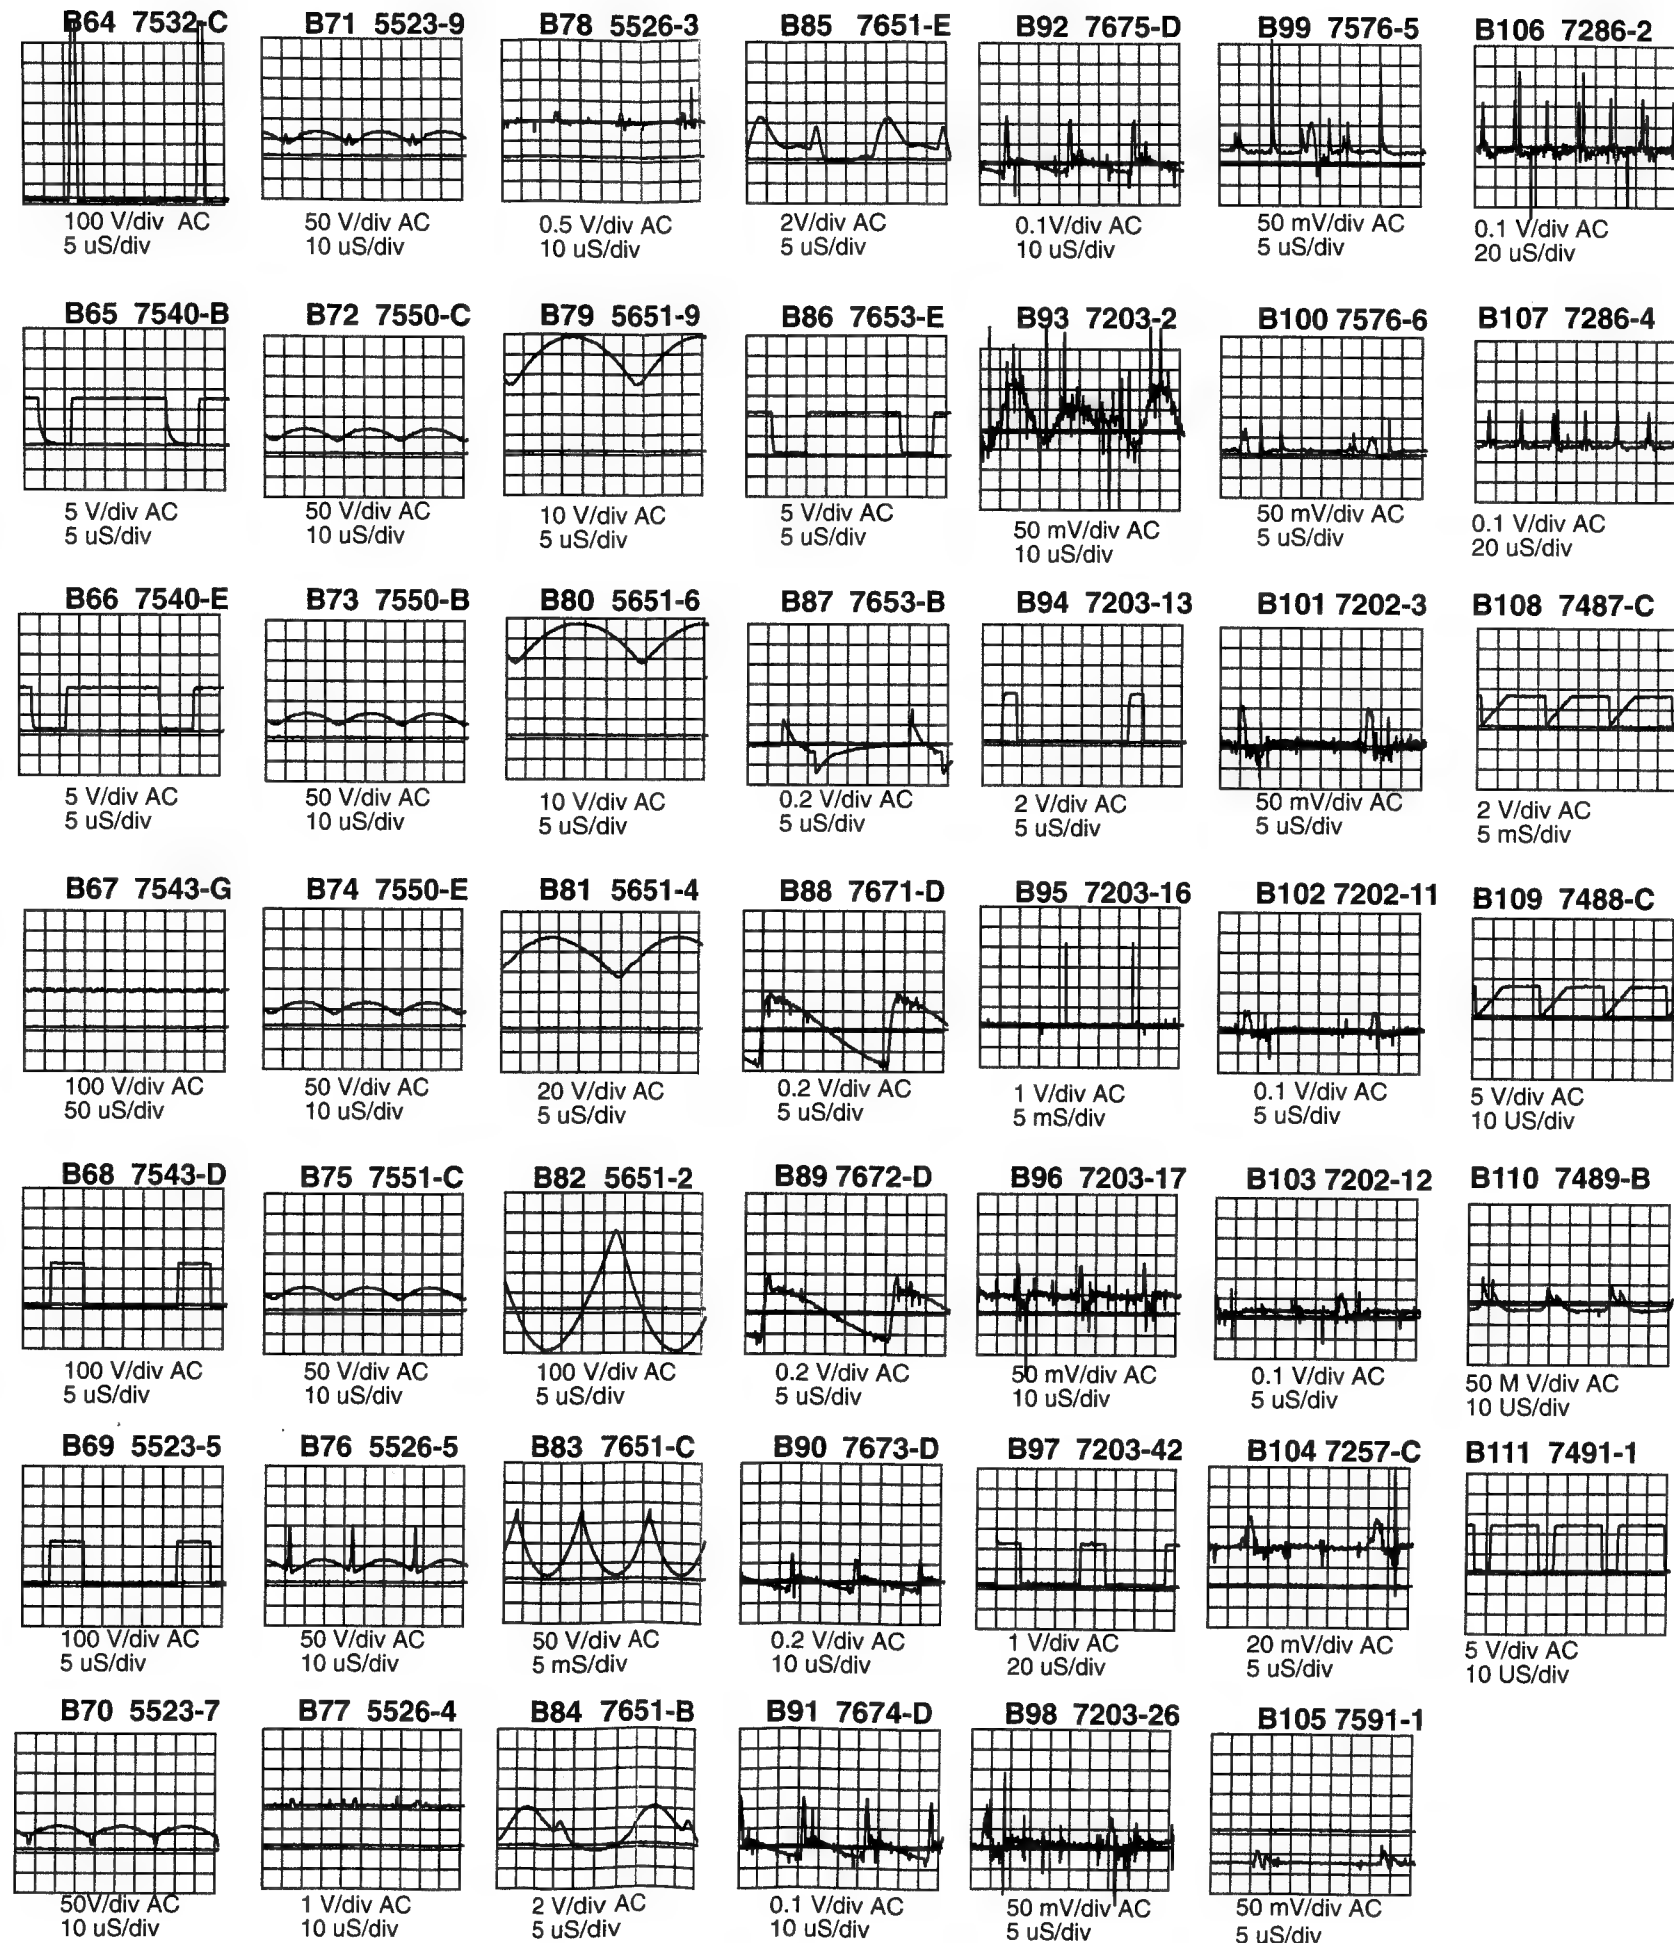

Power Supply Schematic Diagram

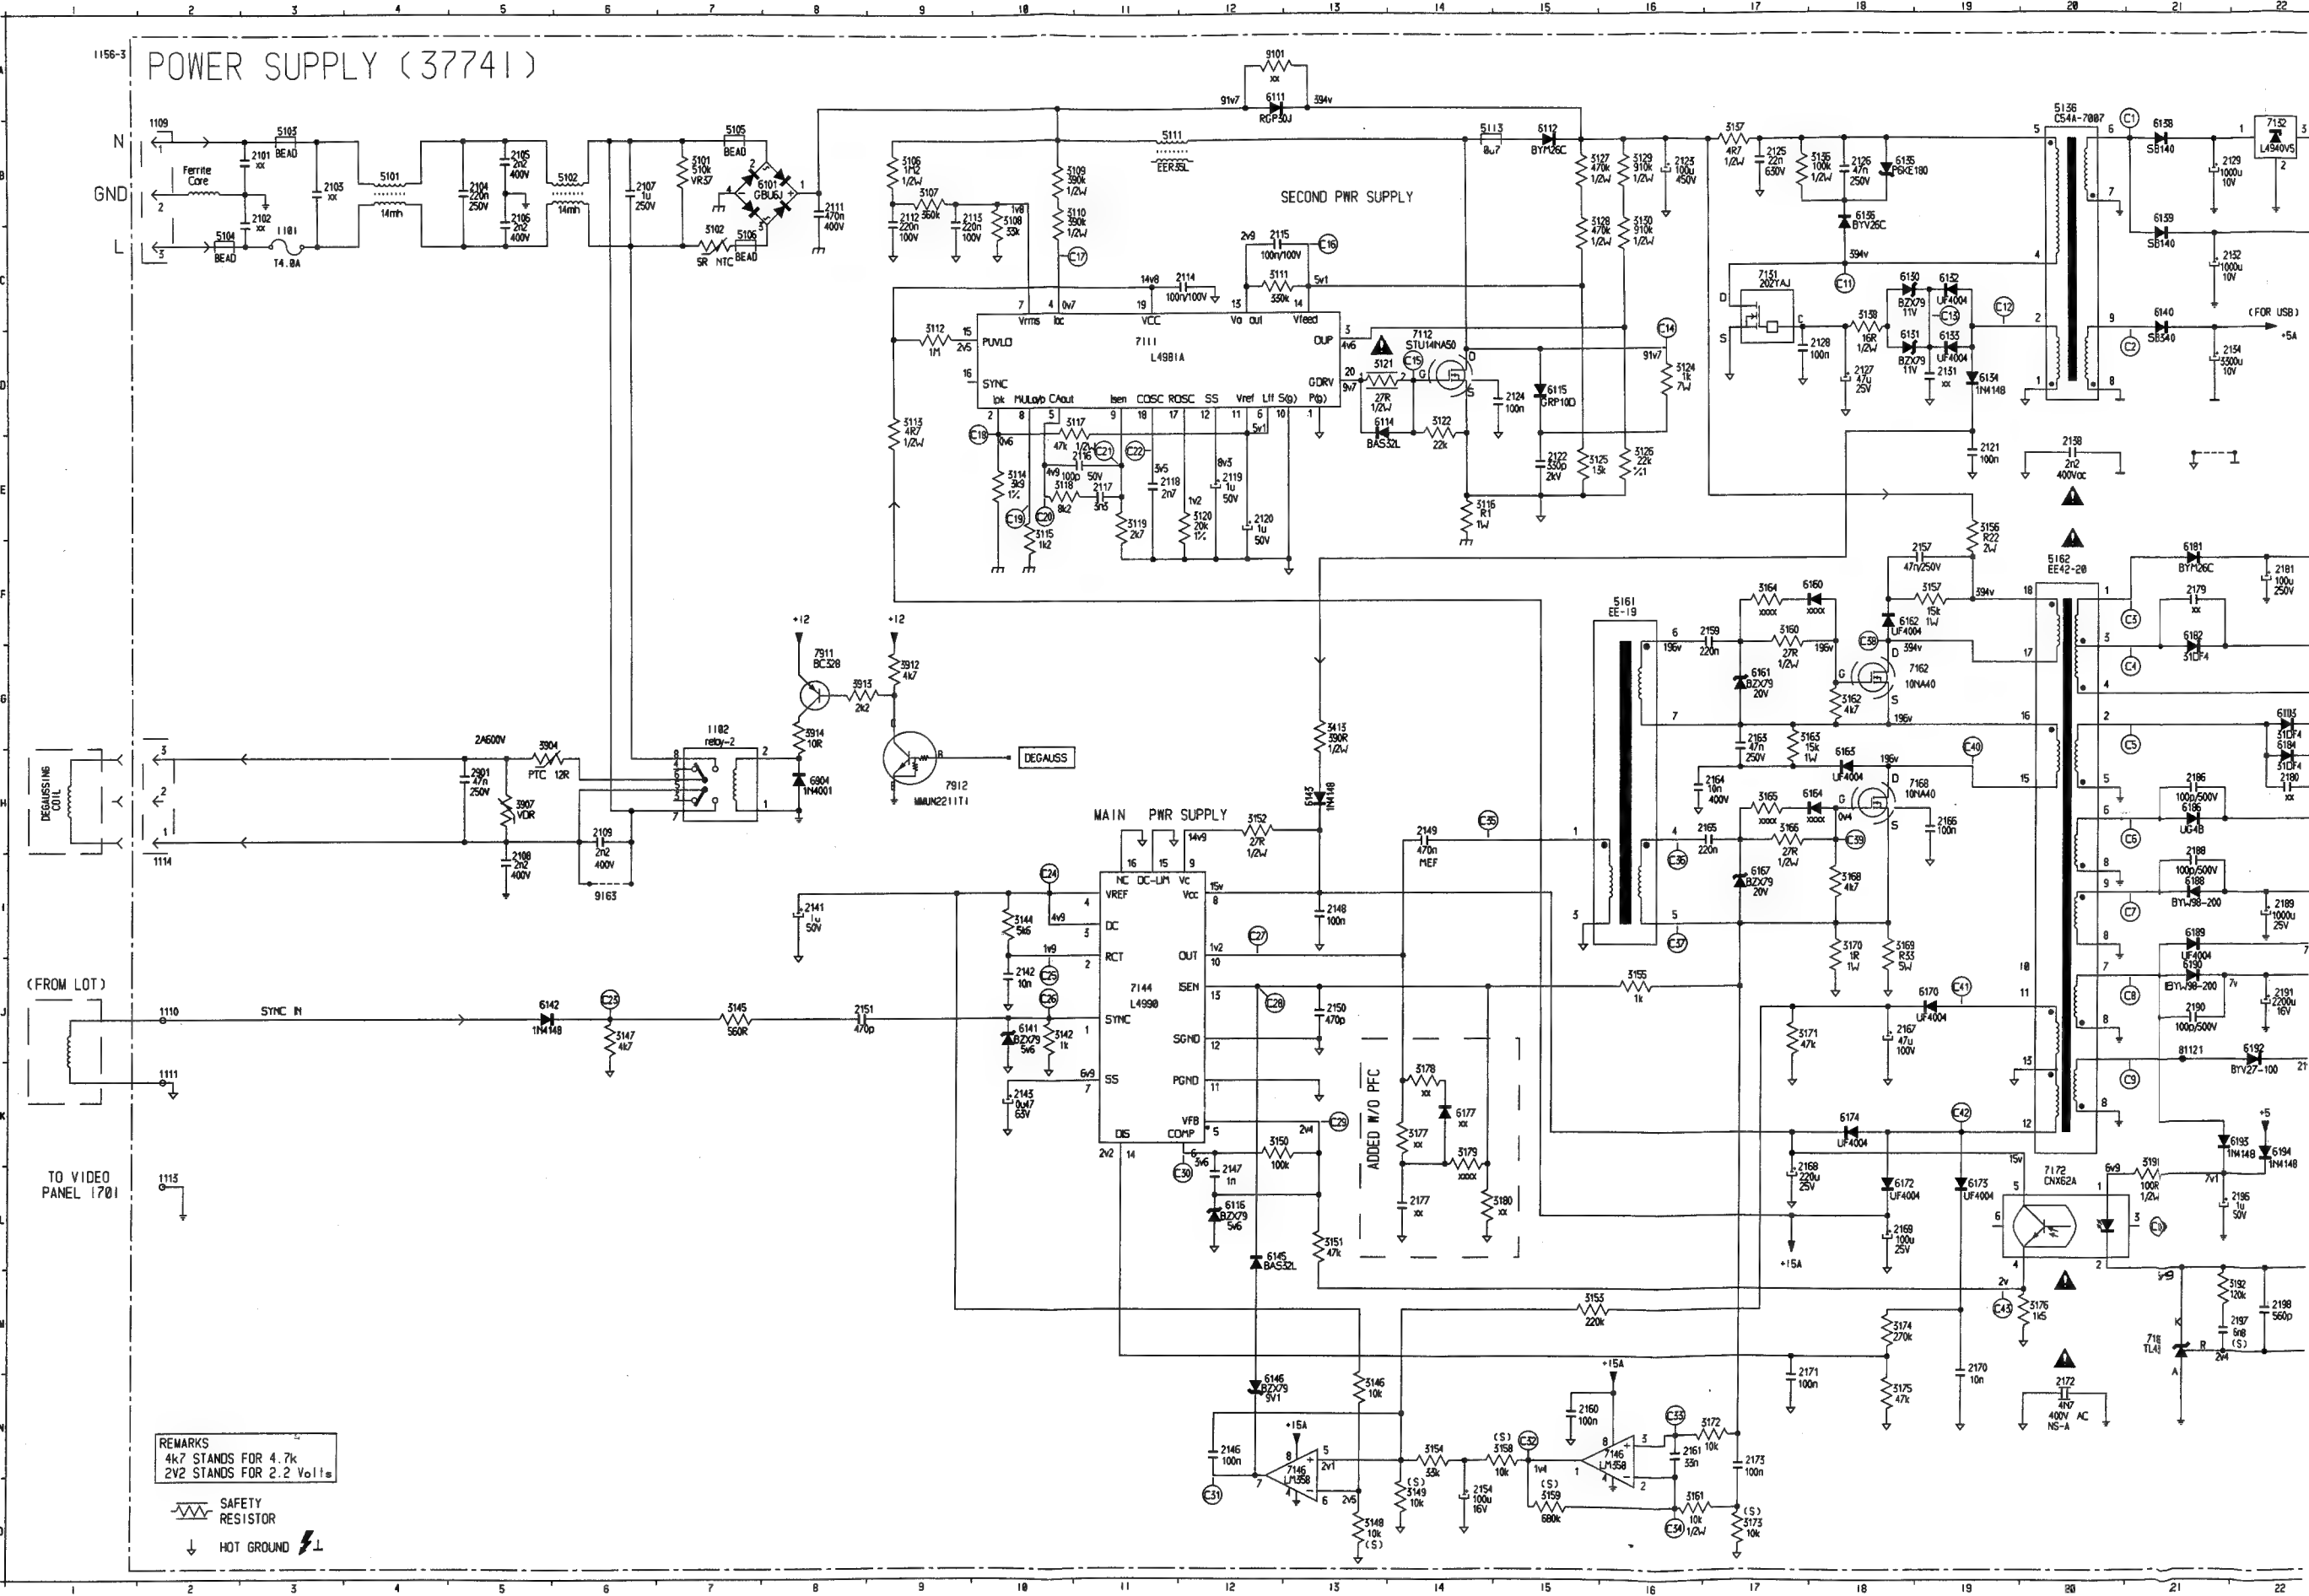

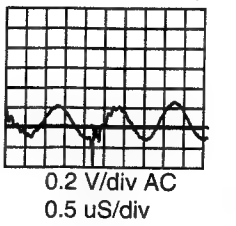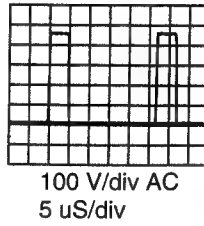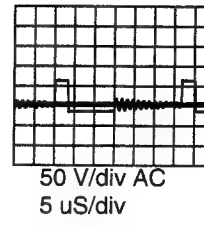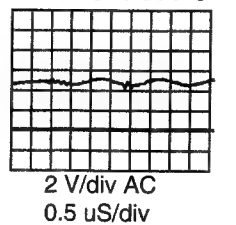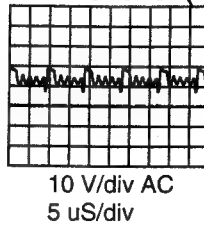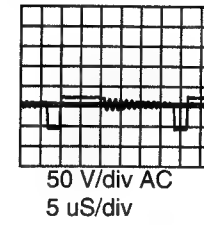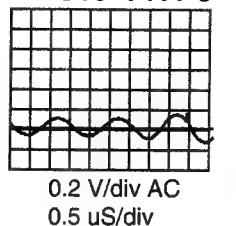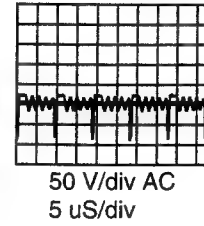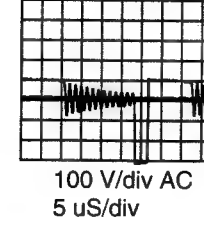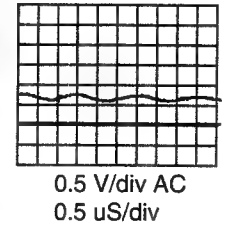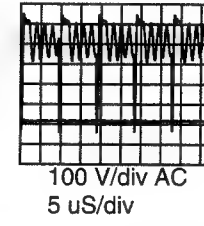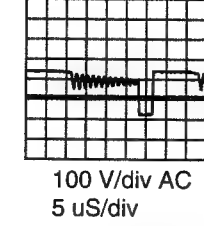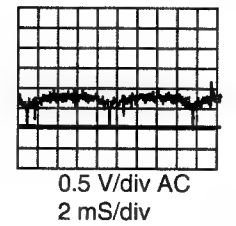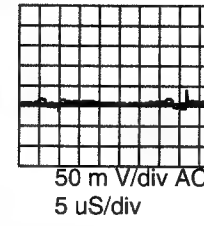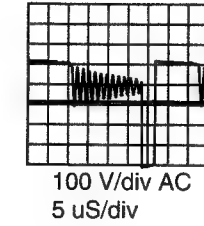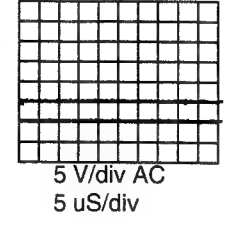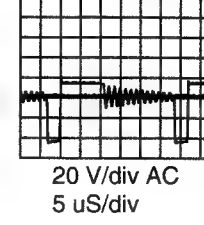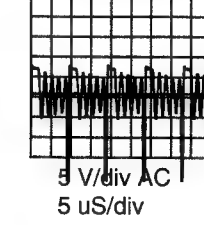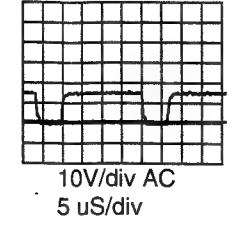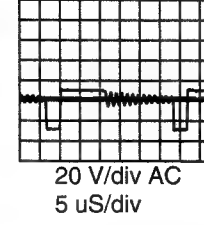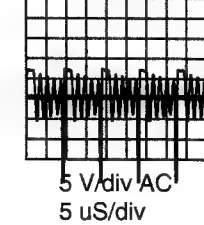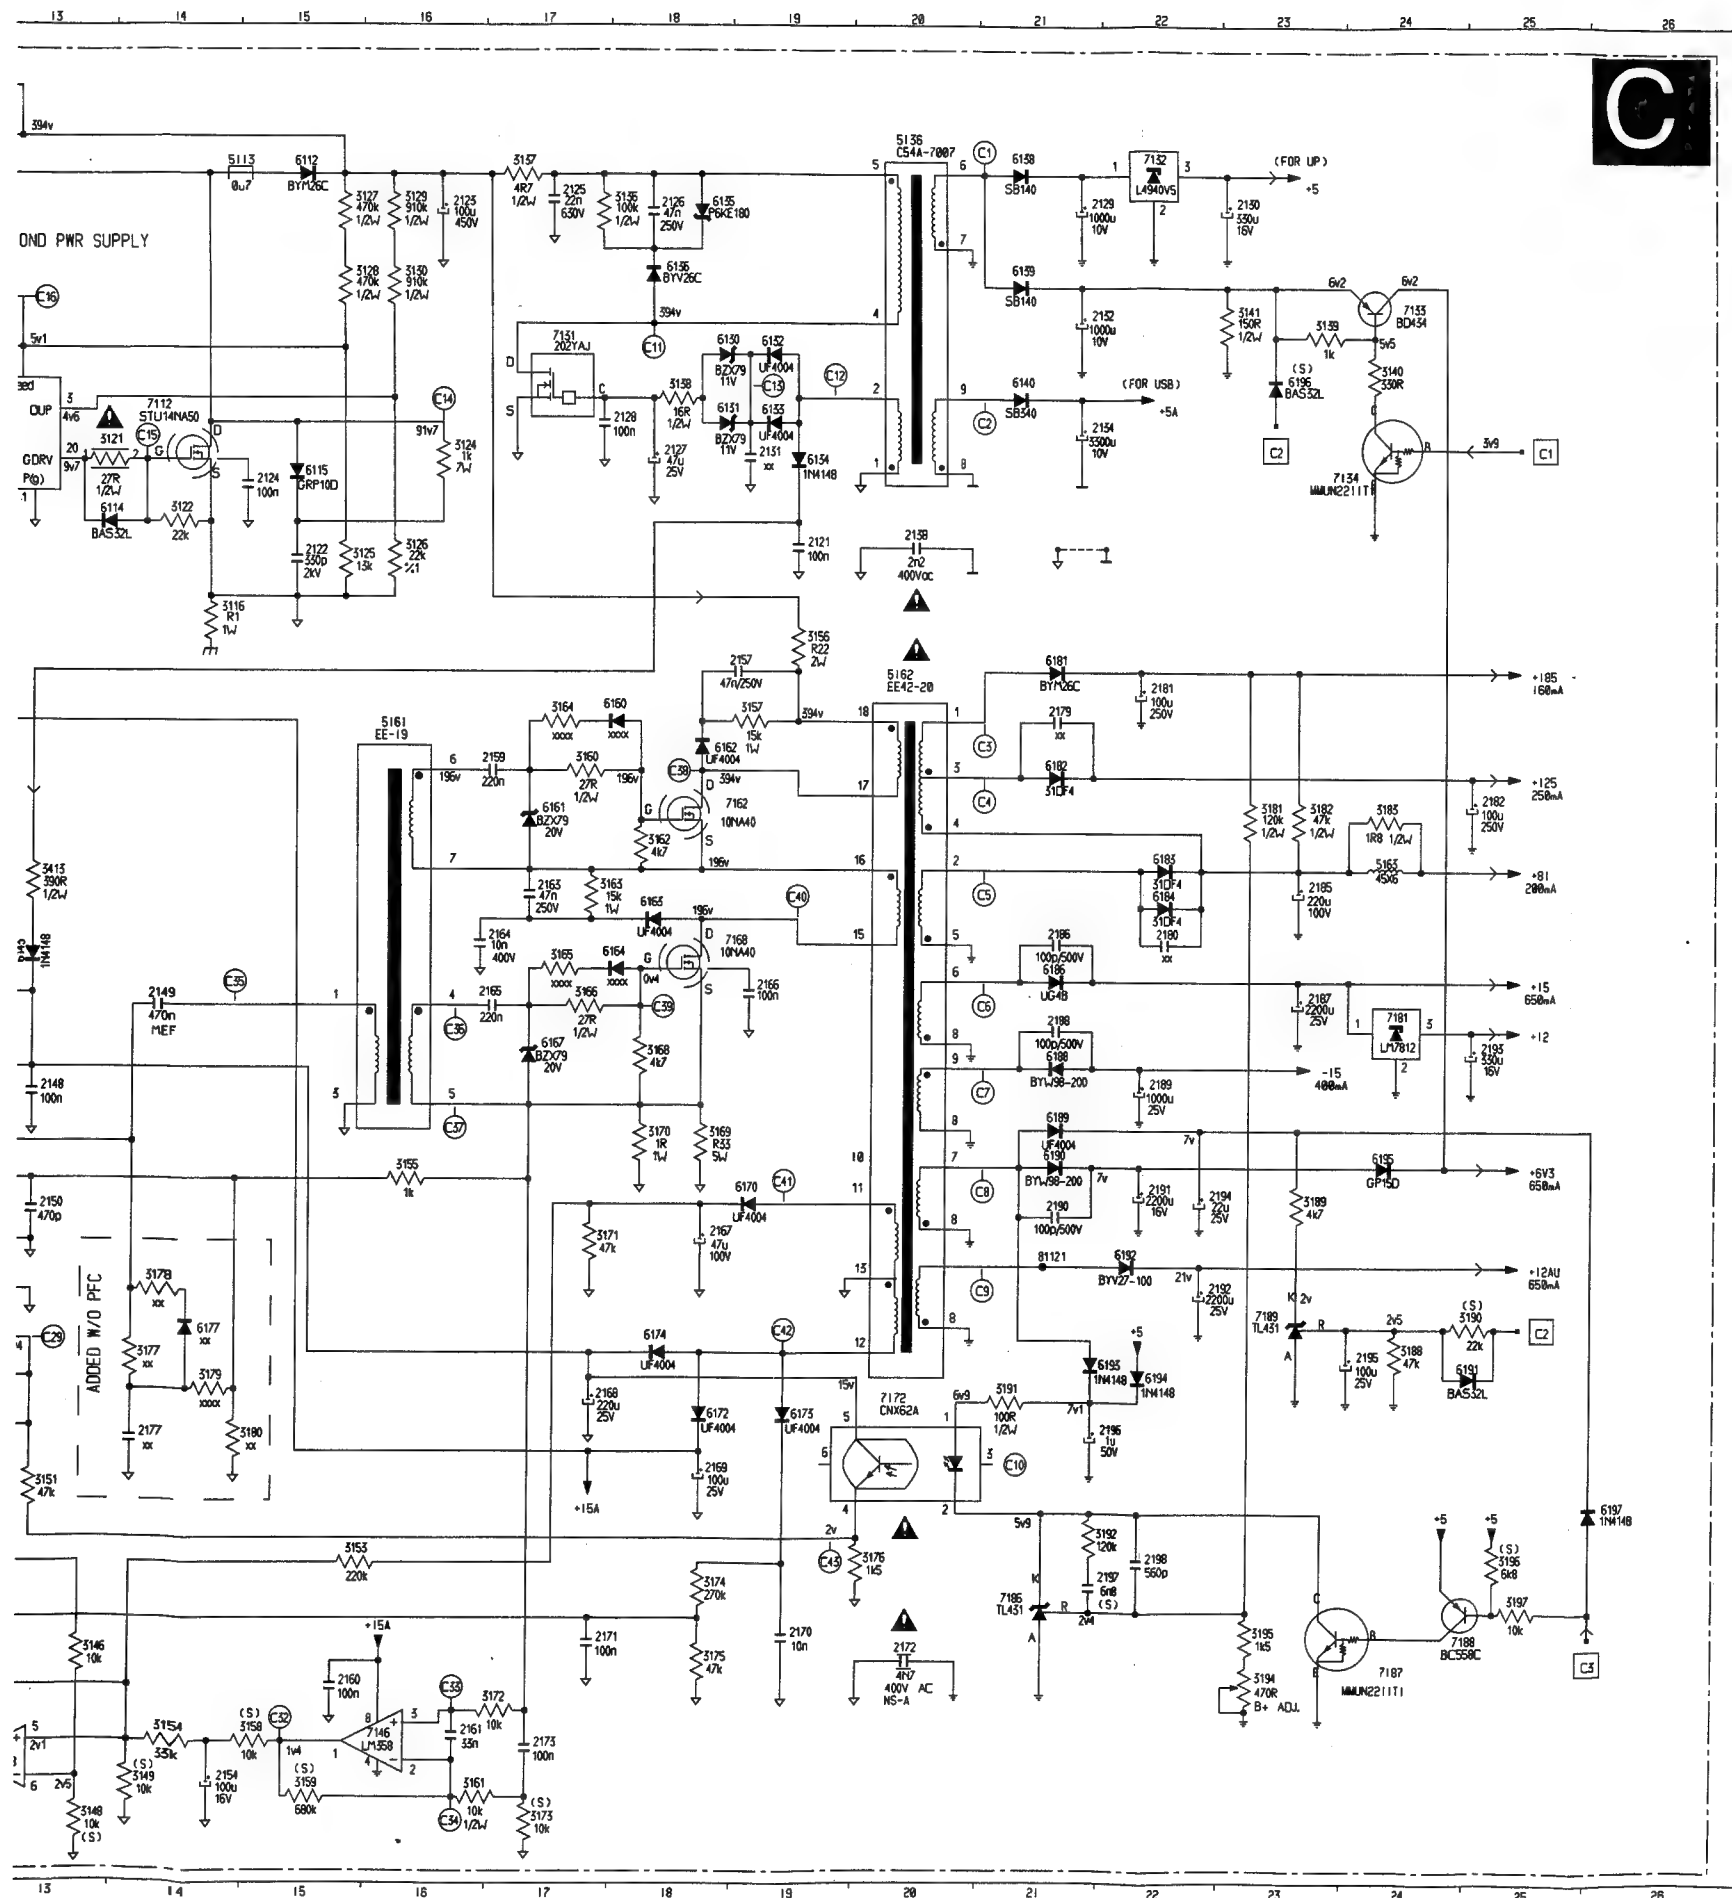


C22 7111-18




2 V/div AC
5 uS/div

C29 7144-5

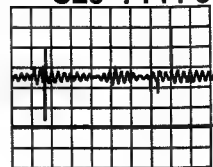


1 V/div AC
5 uS/div

C36 5161-1

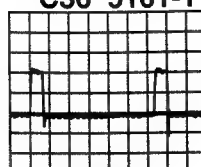


5 V/div AC
5 uS/div

C43 7172-4

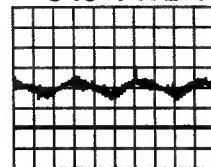


1 V/div AC
10 uS/div

C23 3147

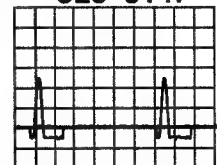


5 V/div AC
5 uS/div

C30 7144-6

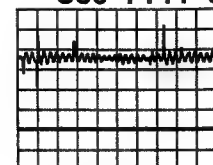


1 V/div AC
5 uS/div

C37 5161-5

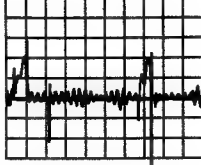


0.5 V/div AC
5 uS/div

C24 7144-4

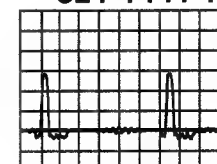


2 V/div AC
5 uS/div

C31 7146-7

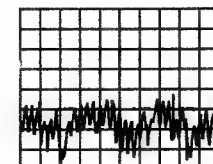


0.1 V/div AC
5 uS/div

C38 7162-D

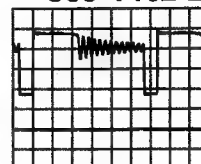


100 V/div AC
5 uS/div

C25 7144-2

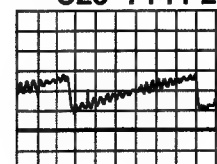


1 V/div AC
5 uS/div

C32 7146-1

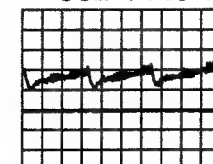


1 V/div AC
10 uS/div

C39 7168-G

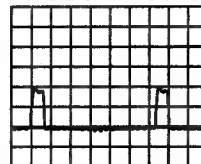


5 V/div AC
5 uS/div

C26 7144-1

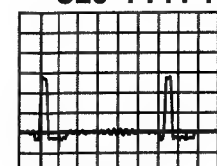


2 V/div AC
5 uS/div

C33 7146-3

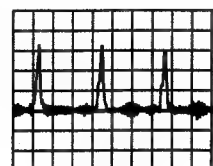


0.2 V/div AC
10 uS/div

C40 7168-D

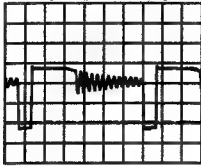


100 V/div AC
5 uS/div

C27 7144-10

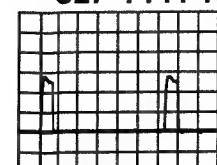


5 V/div AC
5 uS/div

C34 7146-2

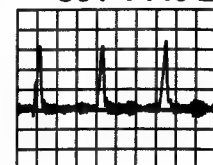


0.2 V/div AC
10 uS/div

C41 5162-11

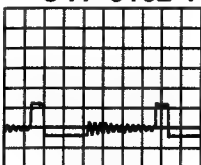


50 V/div AC
5 uS/div

C28 7144-13

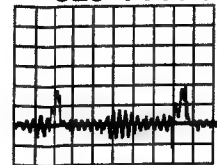


0.5 V/div AC
5 uS/div

C35 5161-1

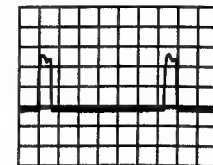

5 V/div AC
5 uS/div


C42 5162-12

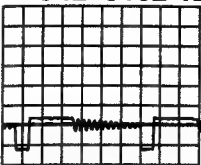



50 V/div AC
5 uS/div

0130 0 7 7383 I 2 0130 J 18 3527 D 2 3440 E 3 3221 C 2 2051 D 18 2280 K 3 1101 L 16
0131 H 0 7384 I 2 0130 H 13 3528 D 2 3441 F 2 3222 B 3 2052 D 18 2281 K 3 1102 I 14
0132 H 0 7385 J 1 0130 H 13 3529 D 2 3442 E 2 3223 C 2 2053 D 11 2281 K 3 1103 K 18
0133 H 0 7386 J 2 0130 H 13 3531 J 1 3443 F 2 3224 B 2 2054 D 11 2282 L 3 1114 J 16
0134 K 0 7310 J 2 0141 L 18 3532 J 3 3444 E 2 3225 B 3 2055 D 12 2283 K 4 1201 D 4
0135 H 0 7311 J 2 0142 I 0 3533 J 3 3445 F 4 3226 C 2 2057 D 12 2284 K 4 1202 B 3
0136 I 0 7312 F 4 0143 L 0 3534 K 2 3446 C 5 3227 B 2 2058 E 11 2285 L 4 1203 A 8
0137 H 16 7313 F 4 0144 K 7 3535 J 3 3447 C 5 3228 B 4 2059 E 11 2286 K 4 1204 K 1
0138 B 0 7310 F 4 0140 K 7 3536 K 2 3448 F 0 3229 K 1 2062 E 11 2287 J 2 1205 C 1
0139 B 0 7320 B 4 0108 K 0 3537 K 3 3449 F 0 3230 D 4 2065 E 11 2305 J 2 1206 B 1
0140 B 0 7320 B 4 0101 K 0 3538 K 2 3450 E 5 3231 D 3 2071 E 8 2318 I 2 1207 E 1
0141 B 0 7331 B 5 0102 J 9 3539 J 3 3451 F 3 3232 C 4 2072 E 7 2311 J 1 1208 E 1
0142 B 0 7401 B 2 0103 K 8 3540 D 15 3452 E 3 3233 C 4 2073 D 7 2316 E 4 1209 C 1
0143 B 0 7402 F 2 0104 K 8 3541 C 15 3453 E 4 3234 C 4 2074 D 8 2317 E 5 1211 B 7
0144 F 0 7420 I 1 0105 K 8 3542 D 15 3454 F 2 3235 C 4 2075 D 8 2326 F 4 1212 A 1
0145 F 0 7430 C 5 0106 K 7 3543 F 7 3455 F 2 3236 C 4 2081 E 8 2328 F 4 1213 K 1
0146 B 5 7431 C 5 0107 J 7 3544 C 15 3456 F 2 3237 C 3 2082 D 0 2331 B 6 1214 K 1
0147 H 5 7443 E 2 0108 J 7 3545 D 15 3457 E 2 3238 C 3 2083 B 8 2332 B 5 1215 F 12
0148 H 5 7444 E 2 0109 J 7 3546 C 15 3458 F 2 3239 C 3 2084 B 8 2333 B 5 1216 F 12
0149 B 12 7445 E 2 0110 K 7 3547 C 15 3459 F 2 3240 B 9 2081 J 15 2338 B 5 1217 L 4
0150 B 12 7446 E 3 0111 H 0 3548 K 15 3460 E 4 3241 B 9 2081 K 3 2339 F 3 1218 L 3
0151 B 11 7447 E 3 0112 H 0 3549 K 14 3461 F 3 3242 C 2 2082 F 2 2344 F 3 1219 A 1
0152 B 11 7448 E 3 0113 J 9 3550 K 14 3462 E 3 3243 C 2 2083 F 2 2345 F 3 1220 L 4
0153 F 11 7449 E 3 0114 J 9 3551 K 14 3463 F 3 3244 C 2 2084 F 2 2346 F 3 1221 L 4
0154 E 13 7450 E 3 0115 I 8 3552 K 14 3464 F 3 3245 C 2 2085 E 3 2347 B 2 1222 K 2
0155 C 2 7451 F 2 0116 H 7 3553 D 15 3465 B 4 3246 B 2 2086 F 3 2348 H 3 1223 J 10
0156 B 0 7452 E 2 0117 J 7 3554 D 15 3466 F 3 3247 C 2 2087 C 3 2349 F 3 1224 K 12
0157 F 0 7453 F 2 0118 J 7 3555 E 15 3467 F 3 3248 C 2 2088 F 2 2350 F 3 1225 L 14
0158 H 0 7454 F 3 0119 H 0 3556 D 15 3468 F 3 3249 C 2 2089 C 3 2351 B 3 1226 L 14
0159 B 11 7455 F 4 0120 J 7 3557 D 15 3469 F 3 3250 A 1 2090 D 4 2352 F 3 1227 L 14
0160 B 7 7456 F 4 0121 J 9 3558 E 15 3470 F 3 3251 A 1 2091 D 4 2353 F 3 1228 L 14
0161 H 8 7457 F 4 0122 J 9 3559 E 15 3471 F 3 3252 A 1 2092 D 4 2354 F 3 1229 L 14
0162 L 18 7458 F 4 0123 J 9 3560 E 15 3472 F 3 3253 A 1 2093 D 4 2355 F 3 1230 L 14
0163 J 14 7459 F 4 0124 J 9 3561 E 15 3473 F 3 3254 A 1 2094 D 4 2356 F 3 1231 L 14
0201 B 1 7471 F 4 0125 J 9 3562 E 15 3474 F 3 3255 A 1 2095 D 4 2357 F 3 1232 L 14
0202 B 1 7472 F 4 0126 J 9 3563 E 15 3475 F 3 3256 A 1 2096 D 4 2358 F 3 1233 L 14
0203 B 2 7473 E 8 0203 B 4 3564 E 15 3476 F 3 3257 A 1 2097 D 4 2359 F 3 1234 L 14
0204 B 2 7474 E 8 0204 B 4 3565 E 15 3477 F 3 3258 A 1 2098 D 4 2360 F 3 1235 L 14
0205 C 2 7475 E 8 0205 B 4 3566 E 15 3478 F 3 3259 A 1 2099 D 4 2361 F 3 1236 L 14
0206 C 2 7476 E 8 0206 B 4 3567 E 15 3479 F 3 3260 A 1 2100 D 4 2362 F 3 1237 L 14
0207 I 6 7477 E 7 0207 B 4 3568 E 15 3480 F 3 3261 A 1 2101 D 4 2363 F 3 1238 L 14
0208 B 0 7480 E 8 0208 B 4 3569 E 15 3481 F 3 3262 A 1 2102 D 4 2364 F 3 1239 L 14
0209 B 0 7481 E 8 0209 B 4 3570 E 15 3482 F 3 3263 A 1 2103 D 4 2365 F 3 1240 L 14
0210 B 0 7482 E 8 0210 B 4 3571 E 15 3483 F 3 3264 A 1 2104 D 4 2366 F 3 1241 L 14
0211 B 4 7483 F 7 0211 B 4 3572 E 15 3484 F 3 3265 A 1 2105 D 4 2367 F 3 1242 L 14
0212 B 4 7484 F 7 0212 B 4 3573 E 15 3485 F 3 3266 A 1 2106 D 4 2368 F 3 1243 L 14
0213 B 4 7485 F 7 0213 B 4 3574 E 15 3486 F 3 3267 A 1 2107 D 4 2369 F 3 1244 L 14
0214 B 4 7486 F 7 0214 B 4 3575 E 15 3487 F 3 3268 A 1 2108 D 4 2370 F 3 1245 L 14
0215 B 4 7487 F 7 0215 B 4 3576 E 15 3488 F 3 3269 A 1 2109 D 4 2371 F 3 1246 L 14
0216 B 4 7488 F 7 0216 B 4 3577 E 15 3489 F 3 3270 A 1 2110 D 4 2372 F 3 1247 L 14
0217 B 4 7489 F 7 0217 B 4 3578 E 15 3490 F 3 3271 A 1 2111 D 4 2373 F 3 1248 L 14
0218 B 4 7490 F 7 0218 B 4 3579 E 15 3491 F 3 3272 A 1 2112 D 4 2374 F 3 1249 L 14
0219 B 4 7491 F 7 0219 B 4 3580 E 15 3492 F 3 3273 A 1 2113 D 4 2375 F 3 1250 L 14
0220 B 4 7492 F 7 0220 B 4 3581 E 15 3493 F 3 3274 A 1 2114 D 4 2376 F 3 1251 L 14
0221 B 4 7493 F 7 0221 B 4 3582 E 15 3494 F 3 3275 A 1 2115 D 4 2377 F 3 1252 L 14
0222 B 4 7494 F 7 0222 B 4 3583 E 15 3495 F 3 3276 A 1 2116 D 4 2378 F 3 1253 L 14
0223 B 4 7495 F 7 0223 B 4 3584 E 15 3496 F 3 3277 A 1 2117 D 4 2379 F 3 1254 L 14
0224 B 4 7496 F 7 0224 B 4 3585 E 15 3497 F 3 3278 A 1 2118 D 4 2380 F 3 1255 L 14
0225 B 4 7497 F 7 0225 B 4 3586 E 15 3498 F 3 3279 A 1 2119 D 4 2381 F 3 1256 L 14
0226 B 4 7498 F 7 0226 B 4 3587 E 15 3499 F 3 3280 A 1 2120 D 4 2382 F 3 1257 L 14
0227 B 4 7499 F 7 0227 B 4 3588 E 15 3500 F 3 3281 A 1 2121 D 4 2383 F 3 1258 L 14
0228 B 4 7500 F 7 0228 B 4 3589 E 15 3501 F 3 3282 A 1 2122 D 4 2384 F 3 1259 L 14
0229 B 4 7501 F 7 0229 B 4 3590 E 15 3502 F 3 3283 A 1 2123 D 4 2385 F 3 1260 L 14
0230 B 4 7502 F 7 0230 B 4 3591 E 15 3503 F 3 3284 A 1 2124 D 4 2386 F 3 1261 L 14
0231 B 4 7503 F 7 0231 B 4 3592 E 15 3504 F 3 3285 A 1 2125 D 4 2387 F 3 1262 L 14
0232 B 4 7504 F 7 0232 B 4 3593 E 15 3505 F 3 3286 A 1 2126 D 4 2388 F 3 1263 L 14
0233 B 4 7505 F 7 0233 B 4 3594 E 15 3506 F 3 3287 A 1 2127 D 4 2389 F 3 1264 L 14
0234 B 4 7506 F 7 0234 B 4 3595 E 15 3507 F 3 3288 A 1 2128 D 4 2390 F 3 1265 L 14
0235 B 4 7507 F 7 0235 B 4 3596 E 15 3508 F 3 3289 A 1 2129 D 4 2391 F 3 1266 L 14
0236 B 4 7508 F 7 0236 B 4 3597 E 15 3509 F 3 3290 A 1 2130 D 4 2392 F 3 1267 L 14
0237 B 4 7509 F 7 0237 B 4 3598 E 15 3510 F 3 3291 A 1 2131 D 4 2393 F 3 1268 L 14
0238 B 4 7510 F 7 0238 B 4 3599 E 15 3511 F 3 3292 A 1 2132 D 4 2394 F 3 1269 L 14
0239 B 4 7511 F 7 0239 B 4 3600 E 15 3512 F 3 3293 A 1 2133 D 4 2395 F 3 1270 L 14
0240 B 4 7512 F 7 0240 B 4 3601 E 15 3513 F 3 3294 A 1 2134 D 4 2396 F 3 1271 L 14
0241 B 4 7513 F 7 0241 B 4 3602 E 15 3514 F 3 3295 A 1 2135 D 4 2397 F 3 1272 L 14
0242 B 4 7514 F 7 0242 B 4 3603 E 15 3515 F 3 3296 A 1 2136 D 4 2398 F 3 1273 L 14
0243 B 4 7515 F 7 0243 B 4 3604 E 15 3516 F 3 3297 A 1 2137 D 4 2399 F 3 1274 L 14
0244 B 4 7516 F 7 0244 B 4 3605 E 15 3517 F 3 3298 A 1 2138 D 4 2400 F 3 1275 L 14
0245 B 4 7517 F 7 0245 B 4 3606 E 15 3518 F 3 3299 A 1 2139 D 4 2401 F 3 1276 L 14
0246 B 4 7518 F 7 0246 B 4 3607 E 15 3519 F 3 3300 A 1 2140 D 4 2402 F 3 1277 L 14
0247 B 4 7519 F 7 0247 B 4 3608 E 15 3520 F 3 3301 A 1 2141 D 4 2403 F 3 1278 L 14
0248 B 4 7520 F 7 0248 B 4 3609 E 15 3521 F 3 3302 A 1 2142 D 4 2404 F 3 1279 L 14
0249 B 4 7521 F 7 0249 B 4 3610 E 15 3522 F 3 3303 A 1 2143 D 4 2405 F 3 1280 L 14
0250 B 4 7522 F 7 0250 B 4 3611 E 15 3523 F 3 3304 A 1 2144 D 4 2406 F 3 1281 L 14
0251 B 4 7523 F 7 0251 B 4 3612 E 15 3524 F 3 3305 A 1 2145 D 4 2407 F 3 1282 L 14
0252 B 4 7524 F 7 0252 B 4 3613 E 15 3525 F 3 3306 A 1 2146 D 4 2408 F 3 1283 L 14
0253 B 4 7525 F 7 0253 B 4 3614 E 15 3526 F 3 3307 A 1 2147 D 4 2409 F 3 1284 L 14
0254 B 4 7526 F 7 0254 B 4 3615 E 15 3527 F 3 3308 A 1 2148 D 4 2410 F 3 1285 L 14
0255 B 4 7527 F 7 0255 B 4 3616 E 15 3528 F 3 3309 A 1 2149 D 4 2411 F 3 1286 L 14
0256 B 4 7528 F 7 0256 B 4 3617 E 15 3529 F 3 3310 A 1 2150 D 4 2412 F 3 1287 L 14
0257 B 4 7529 F 7 0257 B 4 3618 E 15 3530 F 3 3311 A 1 2151 D 4 2413 F 3 1288 L 14
0258 B 4 7530 F 7 0258 B 4 3619 E 15 3531 F 3 3312 A 1 2152 D 4 2414 F 3 1289 L 14
0259 B 4 7531 F 7 0259 B 4 3620 E 15 3532 F 3 3313 A 1 2153 D 4 2415 F 3 1290 L 14
0260 B 4 7532 F 7 0260 B 4 3621 E 15 3533 F 3 3314 A 1 2154 D 4 2416 F 3 1291 L 14
0261 B 4 7533 F 7 0261 B 4 3622 E 15 3534 F 3 3315 A 1 2155 D 4 2417 F 3 1292 L 14
0262 B 4 7534 F 7 0262 B 4 3623 E 15 3535 F 3 3316 A 1 2156 D 4 2418 F 3 1293 L 14
0263 B 4 7535 F 7 0263 B 4 3624 E 15 3536 F 3 3317 A 1 2157 D 4 2419 F 3 1294 L 14
0264 B 4 7536 F 7 0264 B 4 3625 E 15 3537 F 3 3318 A 1 2158 D 4 2420 F 3 1295 L 14
0265 B 4 7537 F 7 0265 B 4 3626 E 15 3538 F 3 3319 A 1 2159 D 4 2421 F 3 1296 L 14
0266 B 4 7538 F 7 0266 B 4 3627 E 15 3539 F 3 3320 A 1 2160 D 4 2422 F 3 1297 L 14
0267 B 4 7539 F 7 0267 B 4 3628 E 15 3540 F 3 3321 A 1 2161 D 4 2423 F 3 1298 L 14
0268 B 4 7540 F 7 0268 B 4 3629 E 15 3541 F 3 3322 A 1 2162 D 4 2424 F 3 1299 L 14
0269 B 4 7541 F 7 0269 B 4 3630 E 15 3542 F 3 3323 A 1 2163 D 4 2425 F 3 1300 L 14
0270 B 4 7542 F 7 0270 B 4 3631 E 15 3543 F 3 3324 A 1 2164 D 4 2426 F 3 1301 L 14
0271 B 4 7543 F 7 0271 B 4 3632 E 15 3544 F 3 3325 A 1 2165 D 4 2427 F 3 1302 L 14
0272 B 4 7544 F 7 0272 B 4 3633 E 15 3545 F 3 3326 A 1 2166 D 4 2428 F 3 1303 L 14
0273 B 4 7545 F 7 0273 B 4 3634 E 15 3546 F 3 3327 A 1 2167 D 4 2429 F 3 1304 L 14
0274 B 4 7546 F 7 0274 B 4 3635 E 15 3547 F 3 3328 A 1 2168 D 4 2430 F 3 1305 L 14
0275 B 4 7547 F 7 0275 B 4 3636 E 15 3548 F 3 3329 A 1 2169 D 4 2431 F 3 1306 L 14
0276 B 4 7548 F 7 0276 B 4 3637 E 15 3549 F 3 3330 A 1 2170 D 4 2432 F 3 1307 L 14
0277 B 4 7549 F 7 0277 B 4 3638 E 15 3550 F 3 3331 A 1 2171 D 4 2433 F 3 1308 L 14
0278 B 4 7550 F 7 0278 B 4 3639 E 15 3551 F 3 3332 A 1 2172 D 4 2434 F 3 1309 L 14
0279 B 4 7551 F 7 0279 B 4 3640 E 15 3552 F 3 3333 A 1 2173 D 4 2435 F 3 1310 L 14
0280 B 4 7552 F 7 0280 B 4 3641 E 15 3553 F 3 3334 A 1 2174 D 4 2436 F 3 1311 L 14
0281 B 4 7553 F 7 0281 B 4 3642 E 15 3554 F 3 3335 A 1 2175 D 4 2437 F 3 1312 L 14
0282 B 4 7554 F 7 0282 B 4 3643 E 15 3555 F 3 3336 A 1 2176 D 4 2438 F 3 1313 L 14
0283 B 4 7555 F 7 0283 B 4 3644 E 15 3556 F 3 3337 A 1 2177 D 4 2439 F 3 1314 L 14
0284 B 4 7556 F 7 0284 B 4 3645 E 15 3557 F 3 3338 A 1 2178 D 4 2440 F 3 1315 L 14
0285 B 4 7557 F 7 0285 B 4 3646 E 15 3558 F 3 3339 A 1 2179 D 4 2441 F 3 1316 L 14
0286 B 4 7558 F 7 0286 B 4 3647 E 15 3559 F 3 3340 A 1 2180 D 4 2442 F 3 1317 L 14
0287 B 4 7559 F 7 0287 B 4 3648 E 15 3560 F 3 3341 A 1 2181 D 4 2443 F 3 13


Main Panel C.B.A. (B1, B2, B3, C and D)

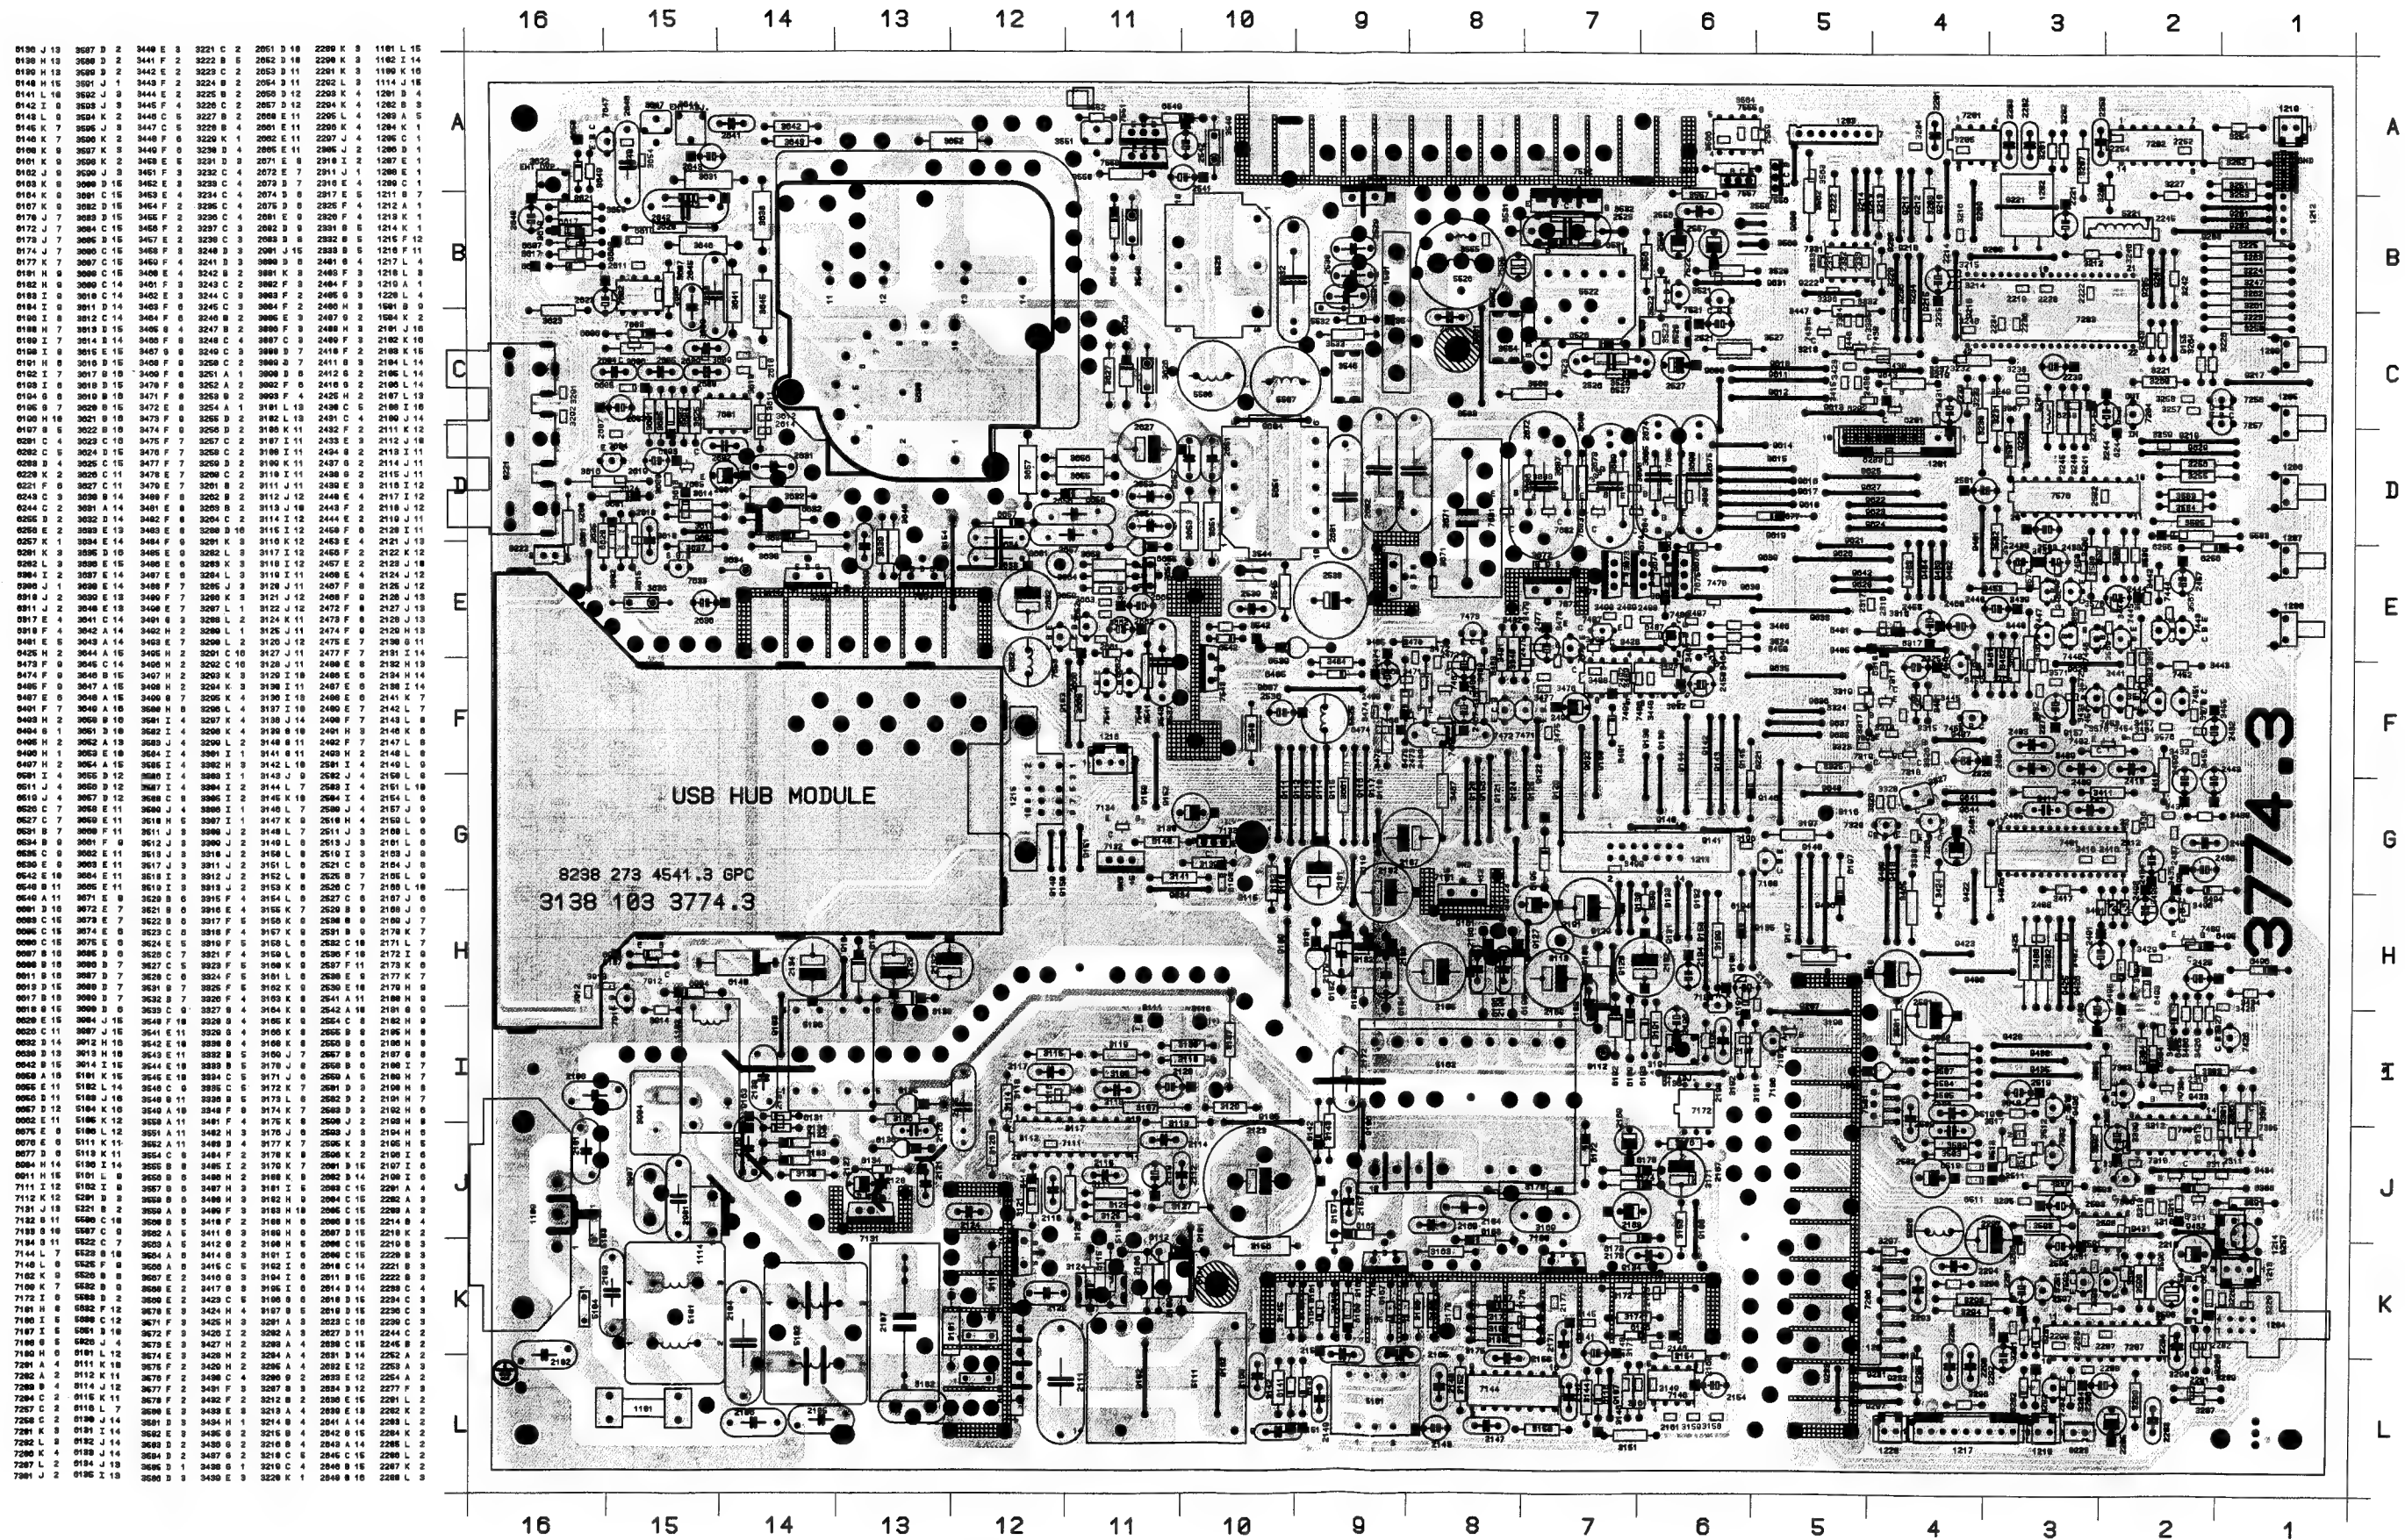

Audio Schematic Diagram

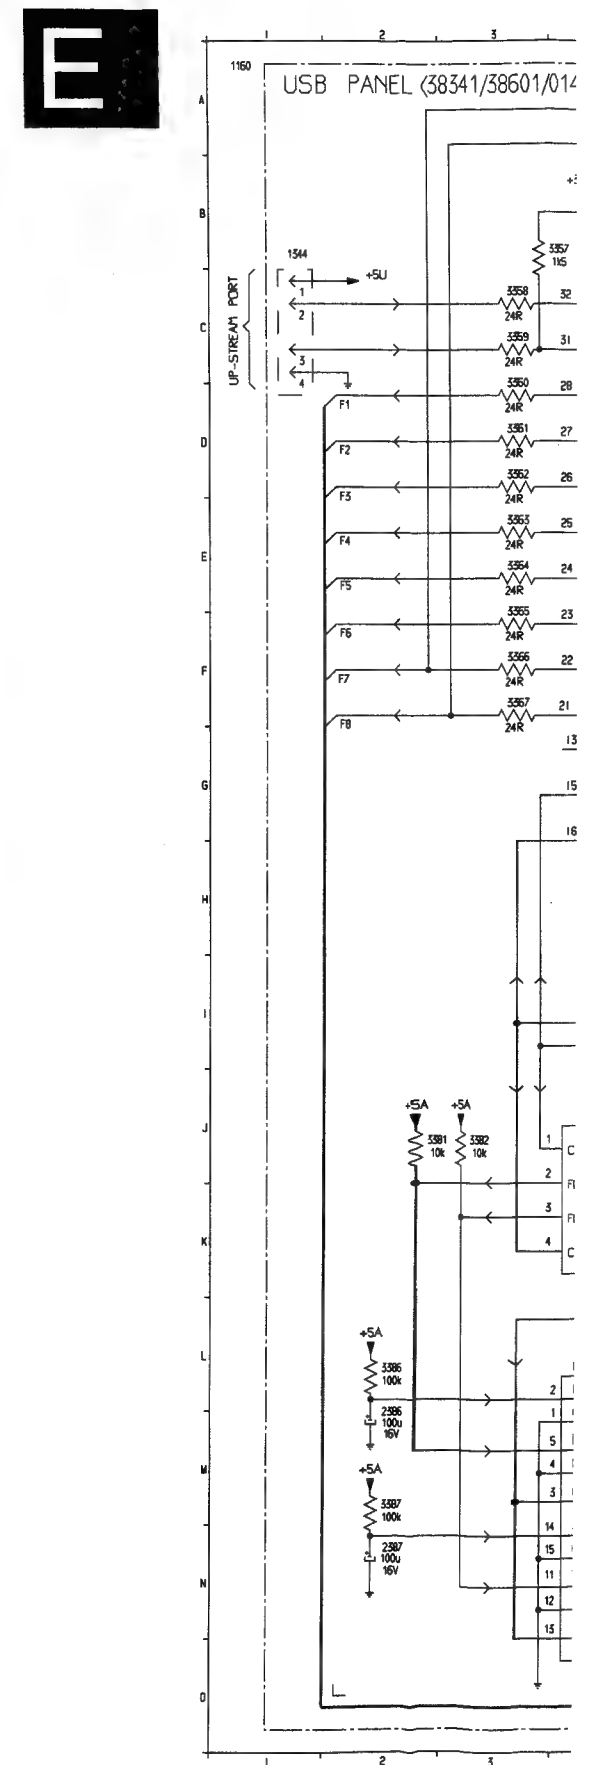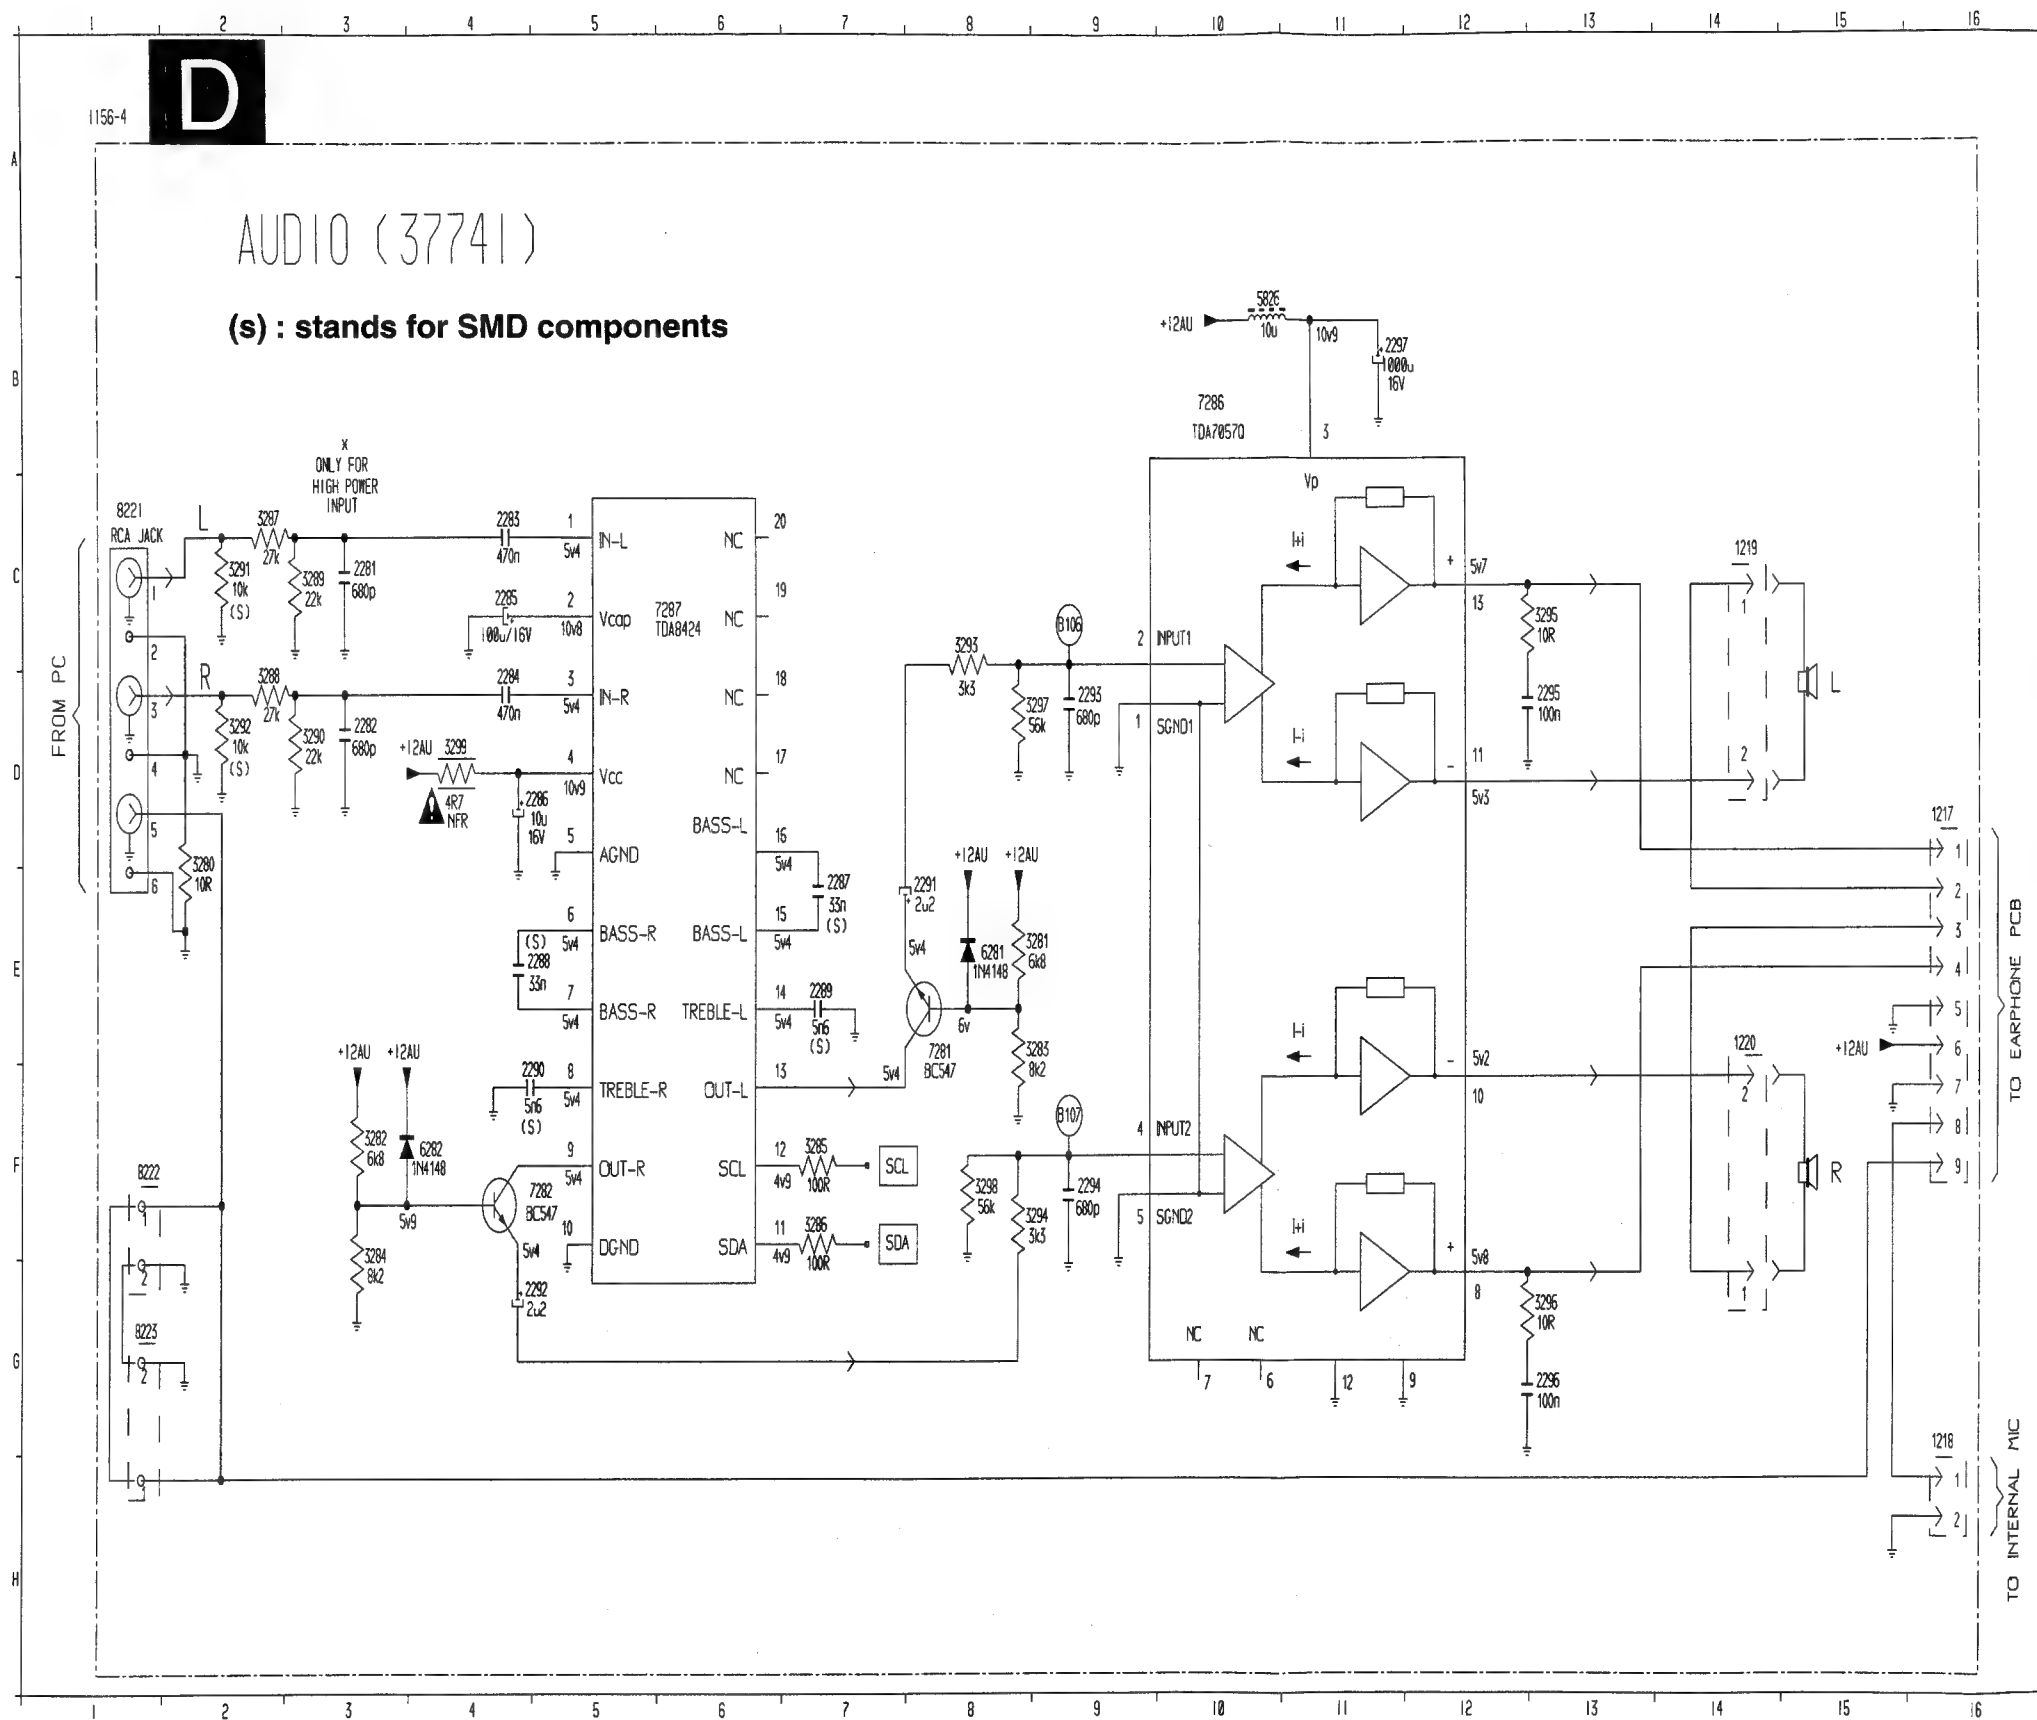


19A CM5800 25

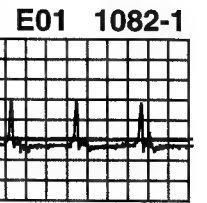


E02 1083-1


0.1 V/div AC
10 μ S/div



Earphone Schematic Diagram



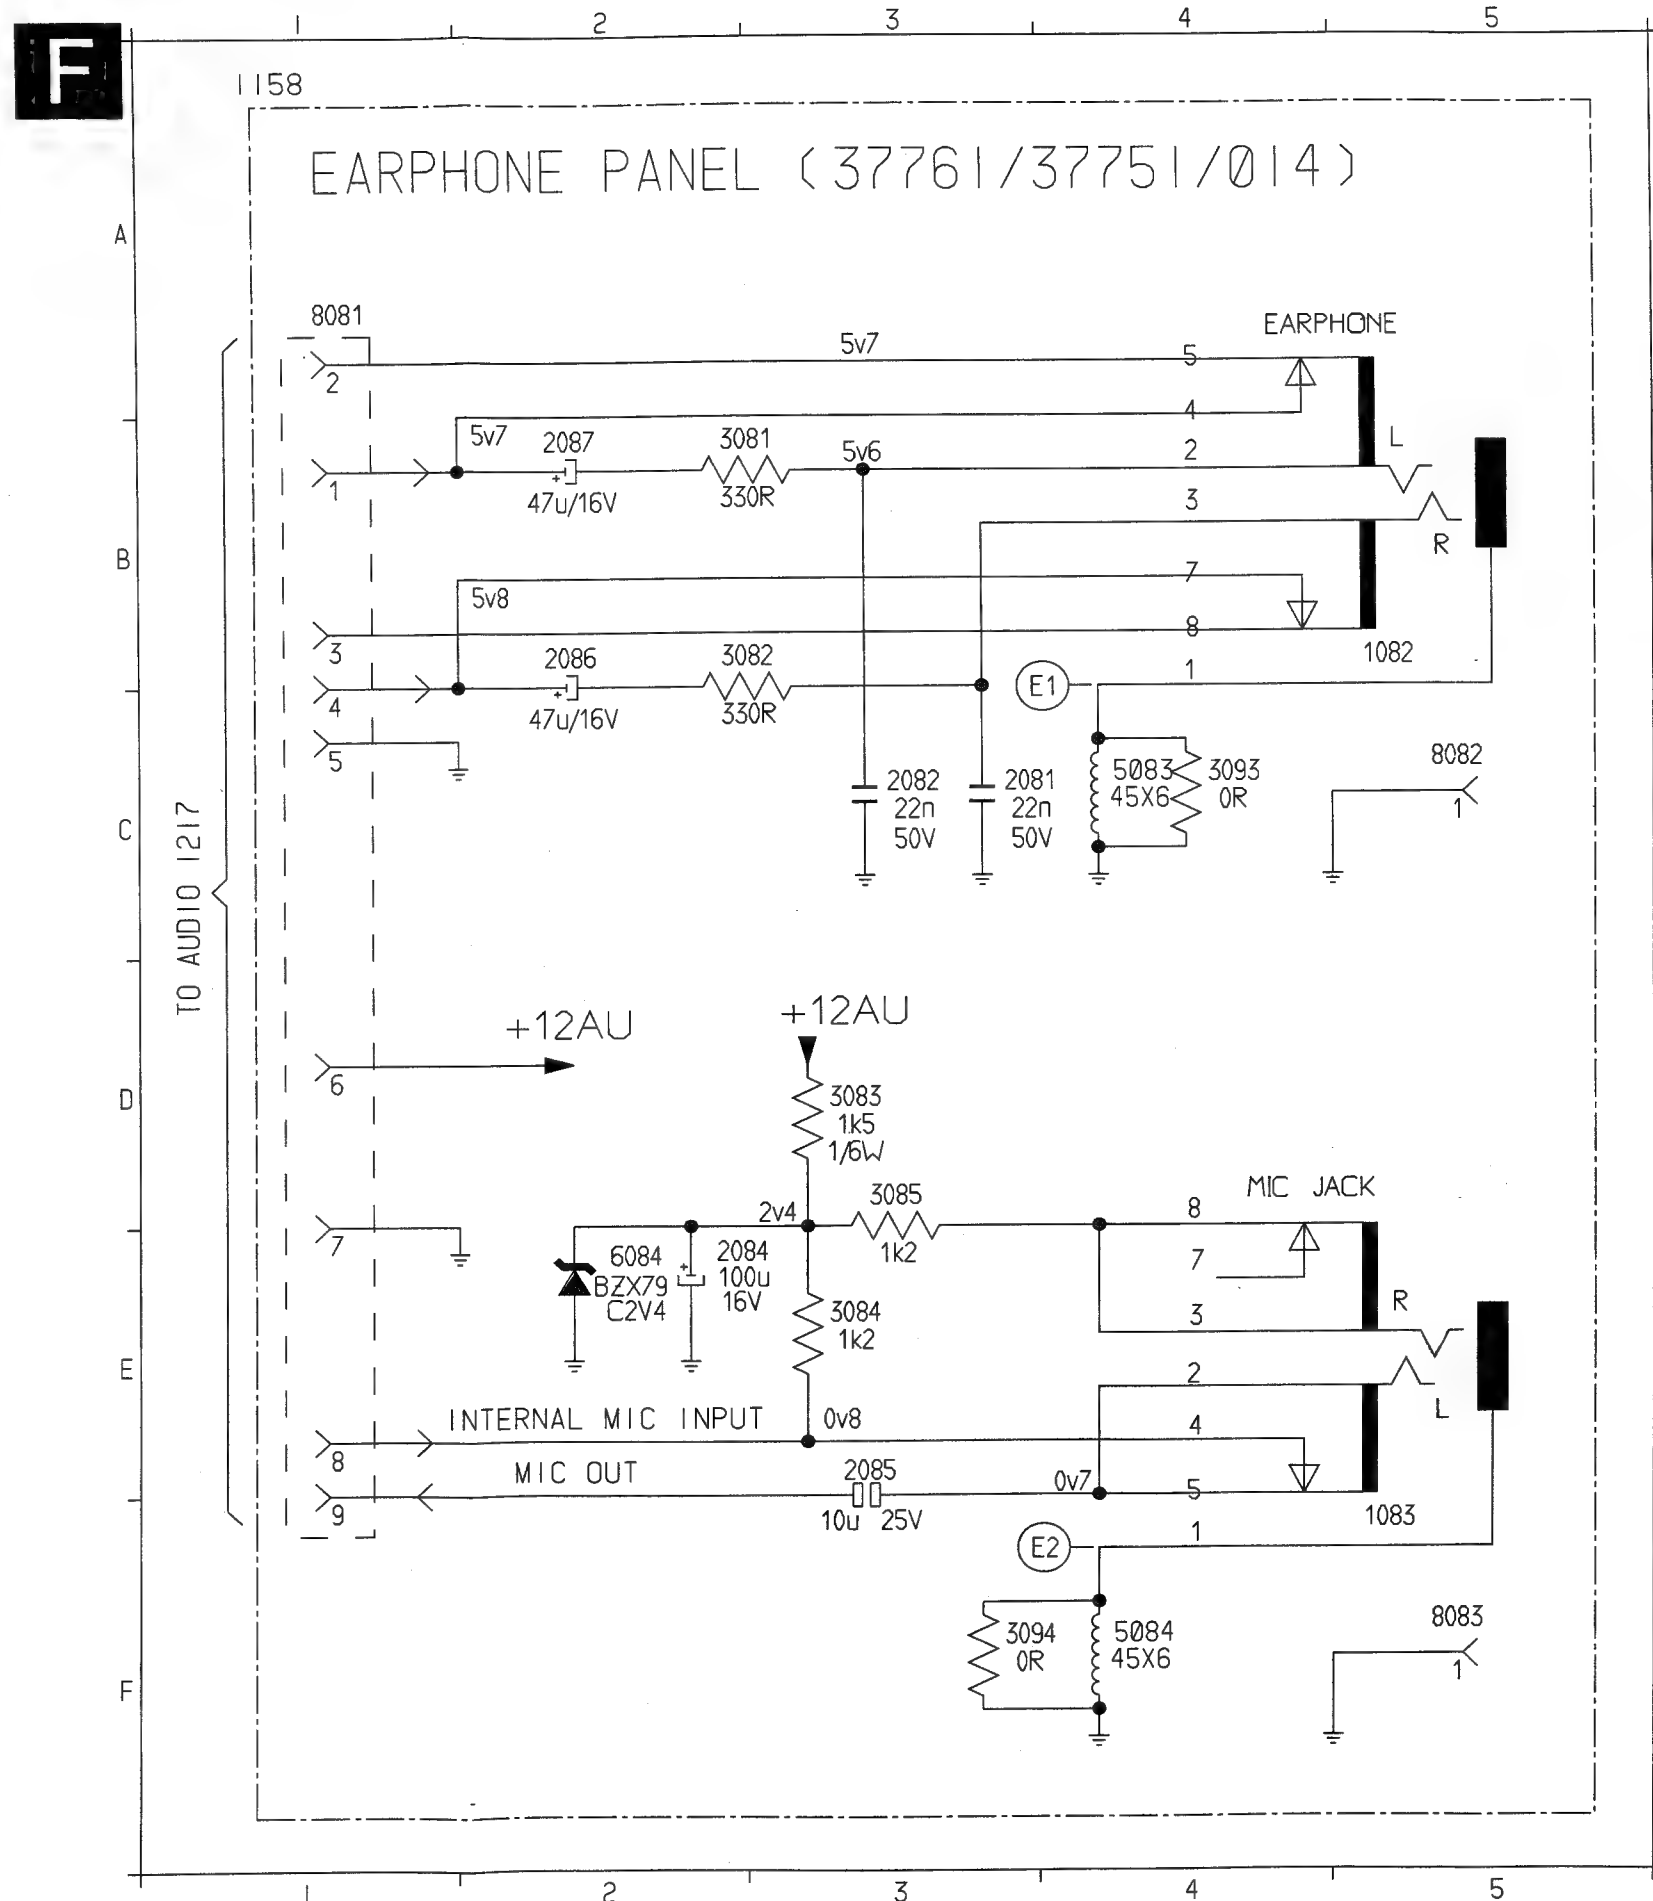


Rotary Schematic Diagram

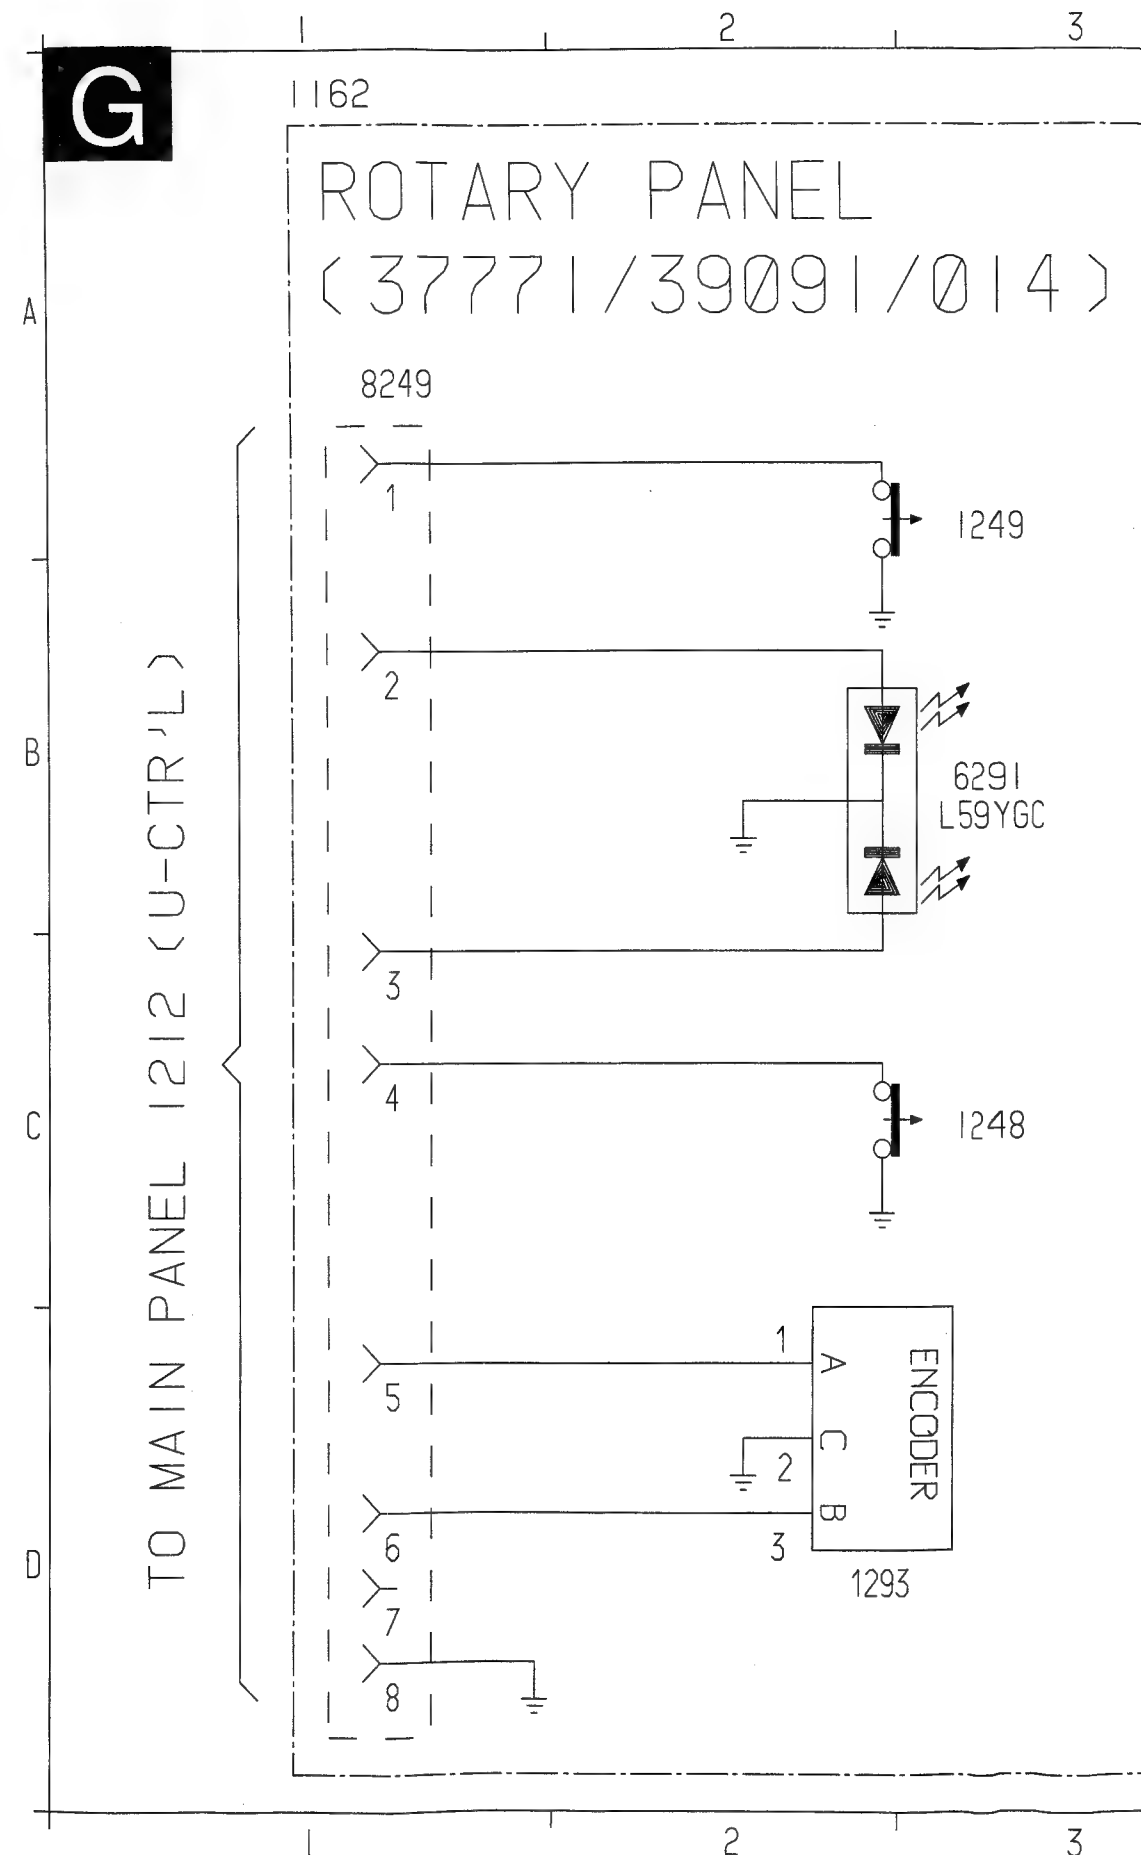

Rotary Schematic Diagram


Power Switch Schematic Diagram

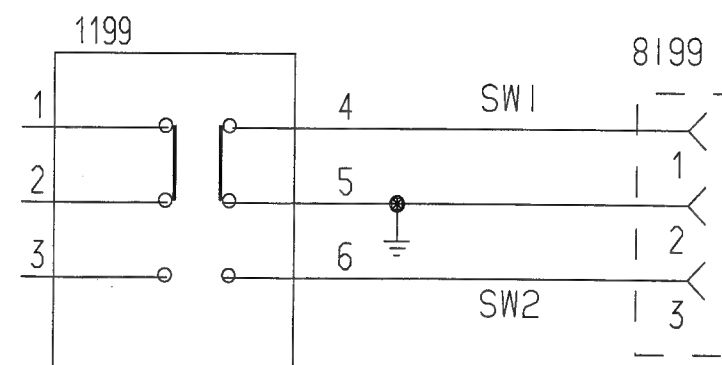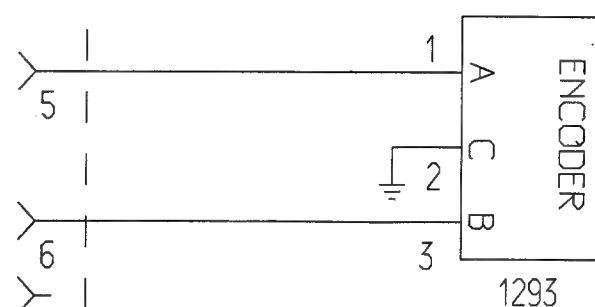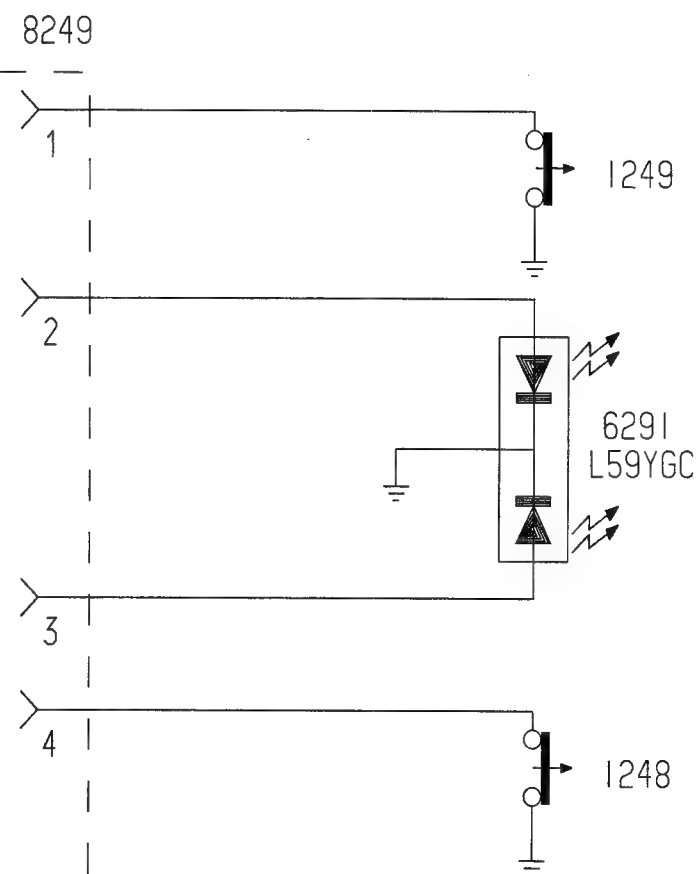


TO MAIN PANEL 1213 (U-CTR'L)

1199	B	4
1248	C	3
1249	A	3
1293	D	2
6291	B	3
8199	C	6
8199	C	6
8199	B	6
8249	B	1
8249	A	1
8249	D	1
8249	D	1
8249	D	1
8249	C	1
8249	C	1
8249	B	1

Rotary Panel C.B.A. (G)

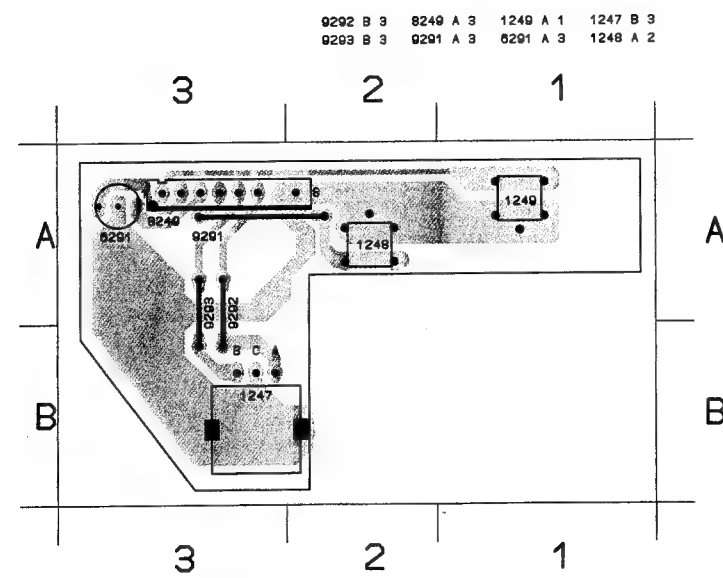

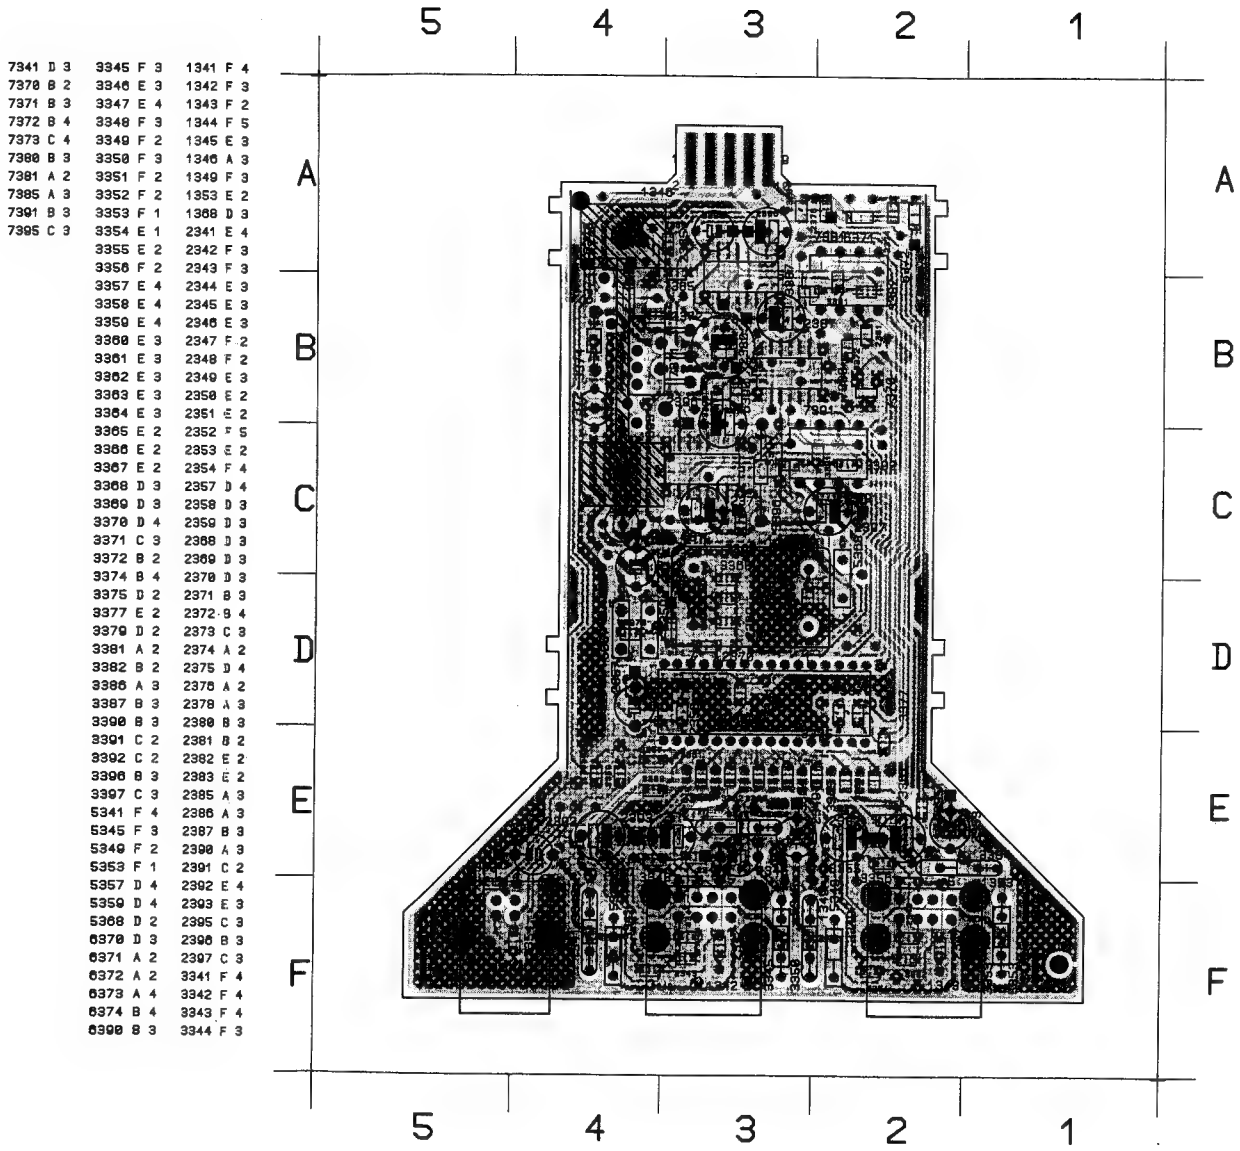

Warning

All ICs and many other semiconductors are susceptible to electrostatic discharges (ESD). Careless handling during repair can reduce life drastically. When repairing, make sure that you are connected with the same potential as the mass of the unit via a wrist wrap with resistance. Keep components and tools also at the same potential.

1. Servicing of SMDs (Surface Mounted Devices)**1.1 General cautions on handling and storage**

- Oxidation on the terminals of SMDs results in poor soldering. Do not handle SMDs with bare hands.
- Avoid using storage places that are sensitive to oxidation such as places with sulphur or chlorine gas, direct sunlight, high temperatures or a high degree of humidity. The capacitance or resistance value of the SMDs may be affected by this.
- Rough handling of circuit boards containing SMDs may cause damage to the components as well as the circuit boards. Circuit boards containing SMDs should never be bent or flexed. Different circuit board materials expand and contract at different rates when heated or cooled and the components and/or solder connections may be damaged due to the stress. Never rub or scrape chip components as this may cause the value of the component to change. Similarly, do not slide the circuit board across any surface.

1.2 Removal of SMDs

- Heat the solder (for 2-3 seconds) at each terminal of the chip. By using a solder wick and a slight horizontal force, small components can be removed with the soldering iron. They can also be removed with a solder sucker (see Fig. 4.1A)

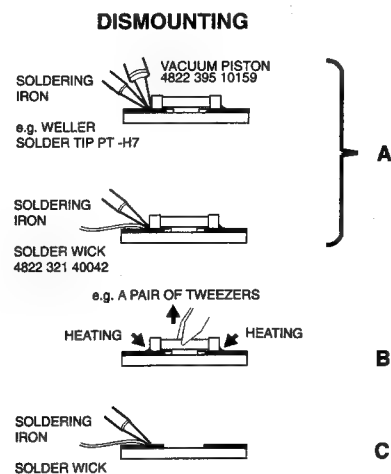


Fig. 4.1

- While holding the SMD with a pair of tweezers, take it off gently using the soldering iron's heat applied to each terminal (see Fig. 4.1 B).
- Remove the excess solder on the solder lands by means of a solder wick or a solder sucker (see Fig. 4.1C).

1.3 Caution on removal

- When handling the soldering iron, use suitable pressure and be careful.
- When removing the chip, do not use undue force with the pair of tweezers.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250 °C).
- The chip, once removed, must never be reused.

1.4 Attachment of SMDs

- Locate the SMD on the solder lands by means of tweezers and solder the component on one side. Ensure that the component is positioned correctly on the solder lands (see Fig. 4.2A).
- Next complete the soldering of the terminals of the component (see Fig. 4.2B).

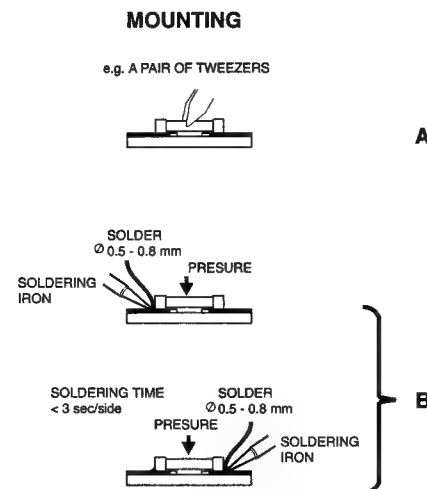


Fig. 4.2

2. Caution when attaching SMDs

- When soldering the SMD terminals, do not touch them directly with the soldering iron. The soldering should be done as quickly as possible, care must be taken to avoid damage to the terminals of the SMDs themselves.
- Keep the SMD's body in contact with the printed board when soldering.
- The soldering iron to be used (approx. 30 W) should preferably be equipped with a thermal control (soldering temperature: 225 to 250 °C).
- Soldering should not be done outside the solder land.
- Soldering flux (of rosin) may be used, but should not be acidic.
- After soldering, let the SMD cool down gradually at room temperature.
- The quantity of solder must be proportional to the size of the solder land. If the quantity is too great, the SMD might crack or the solder lands might be torn loose from the printed board (see Fig. 4.3).



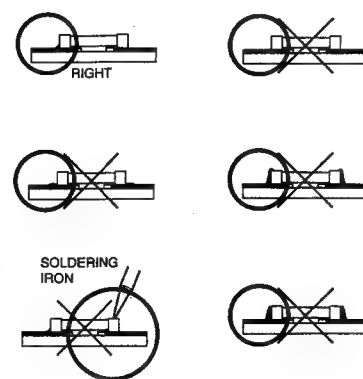
EXAMPLES

Fig. 4.3

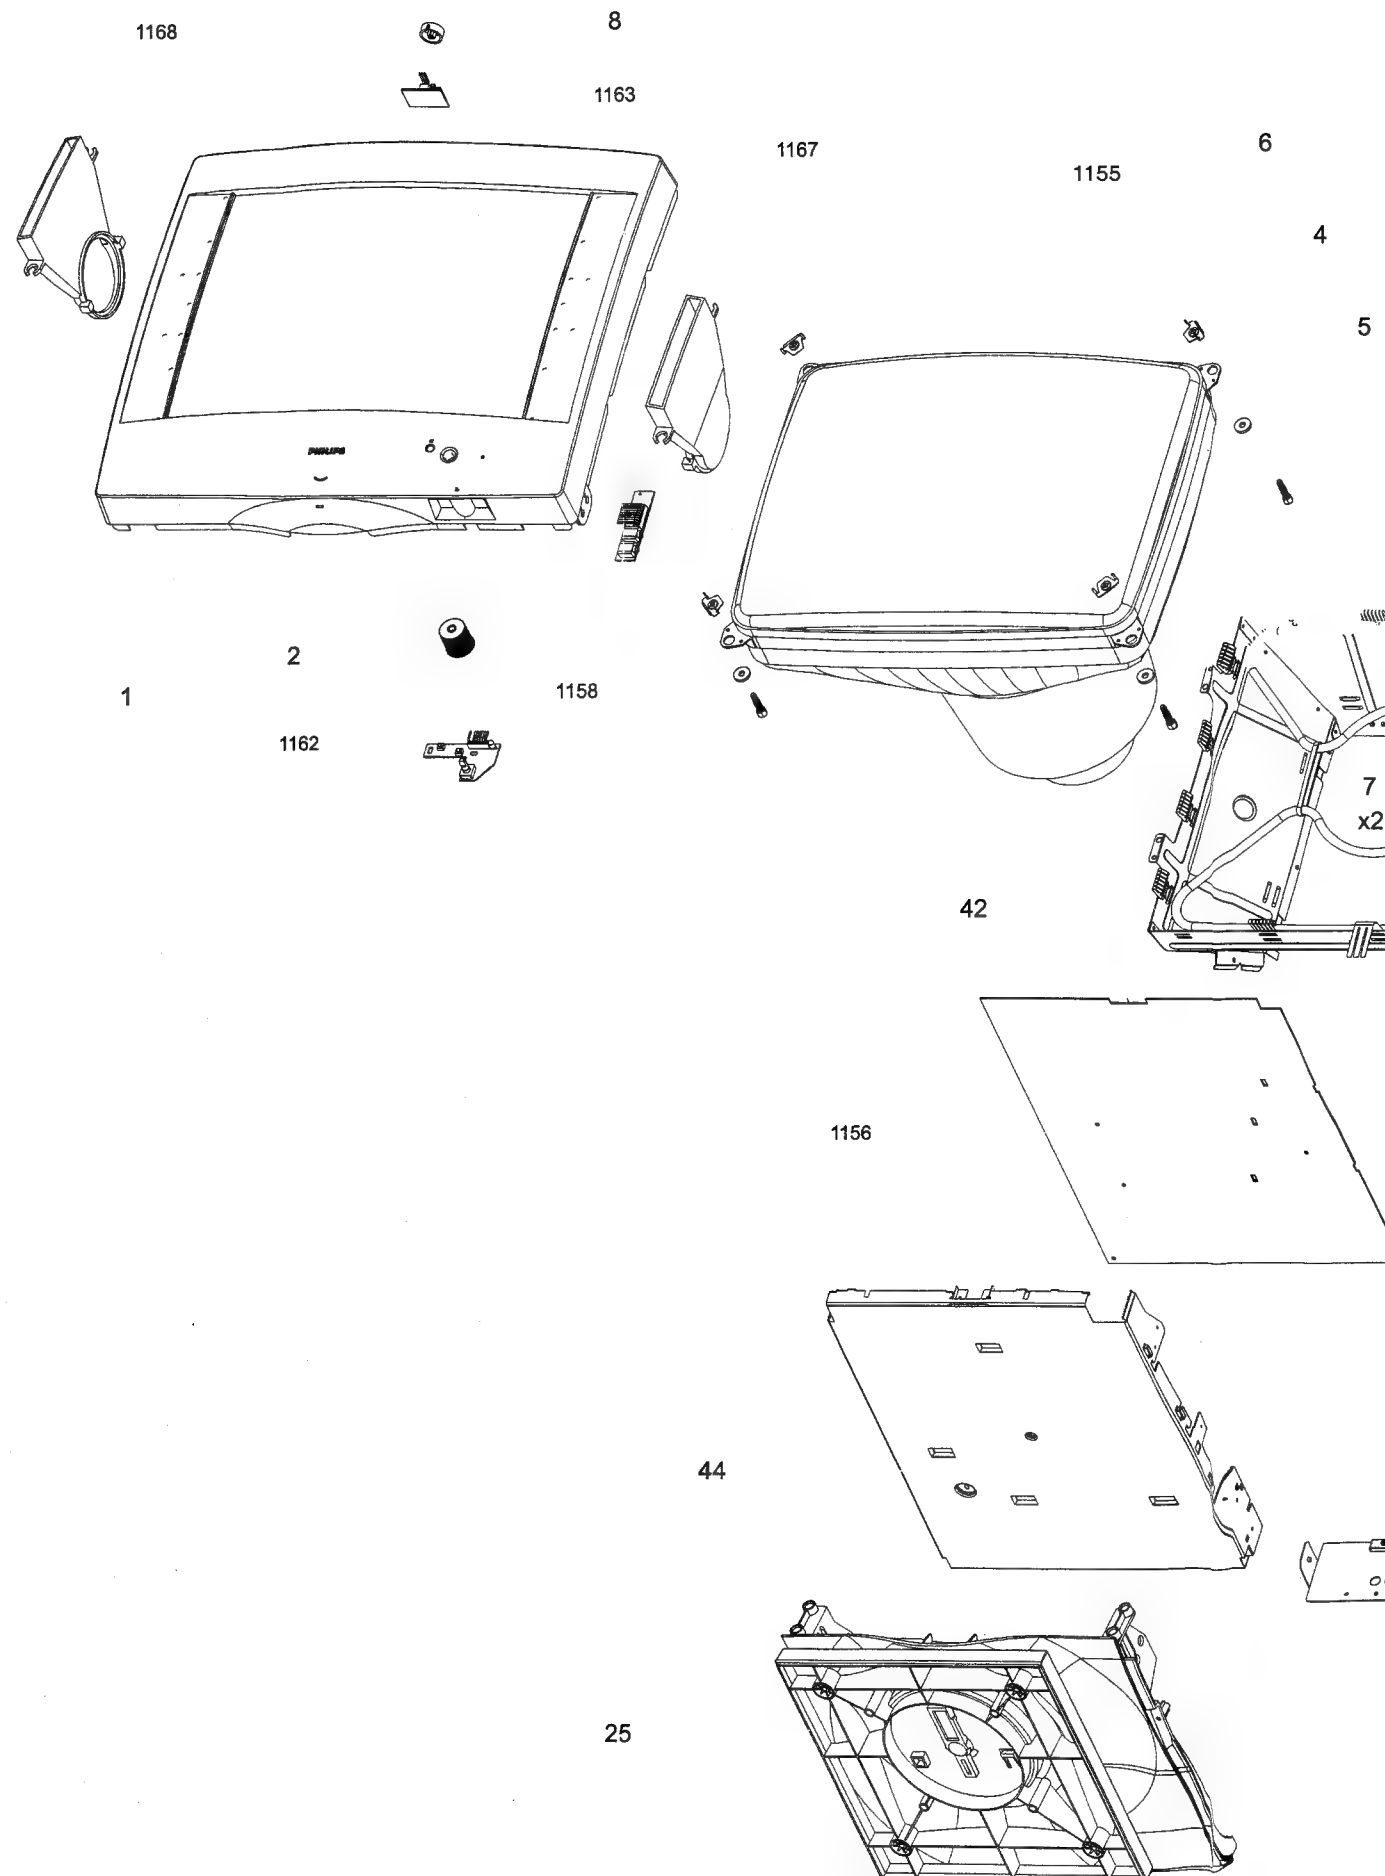

Exploded View

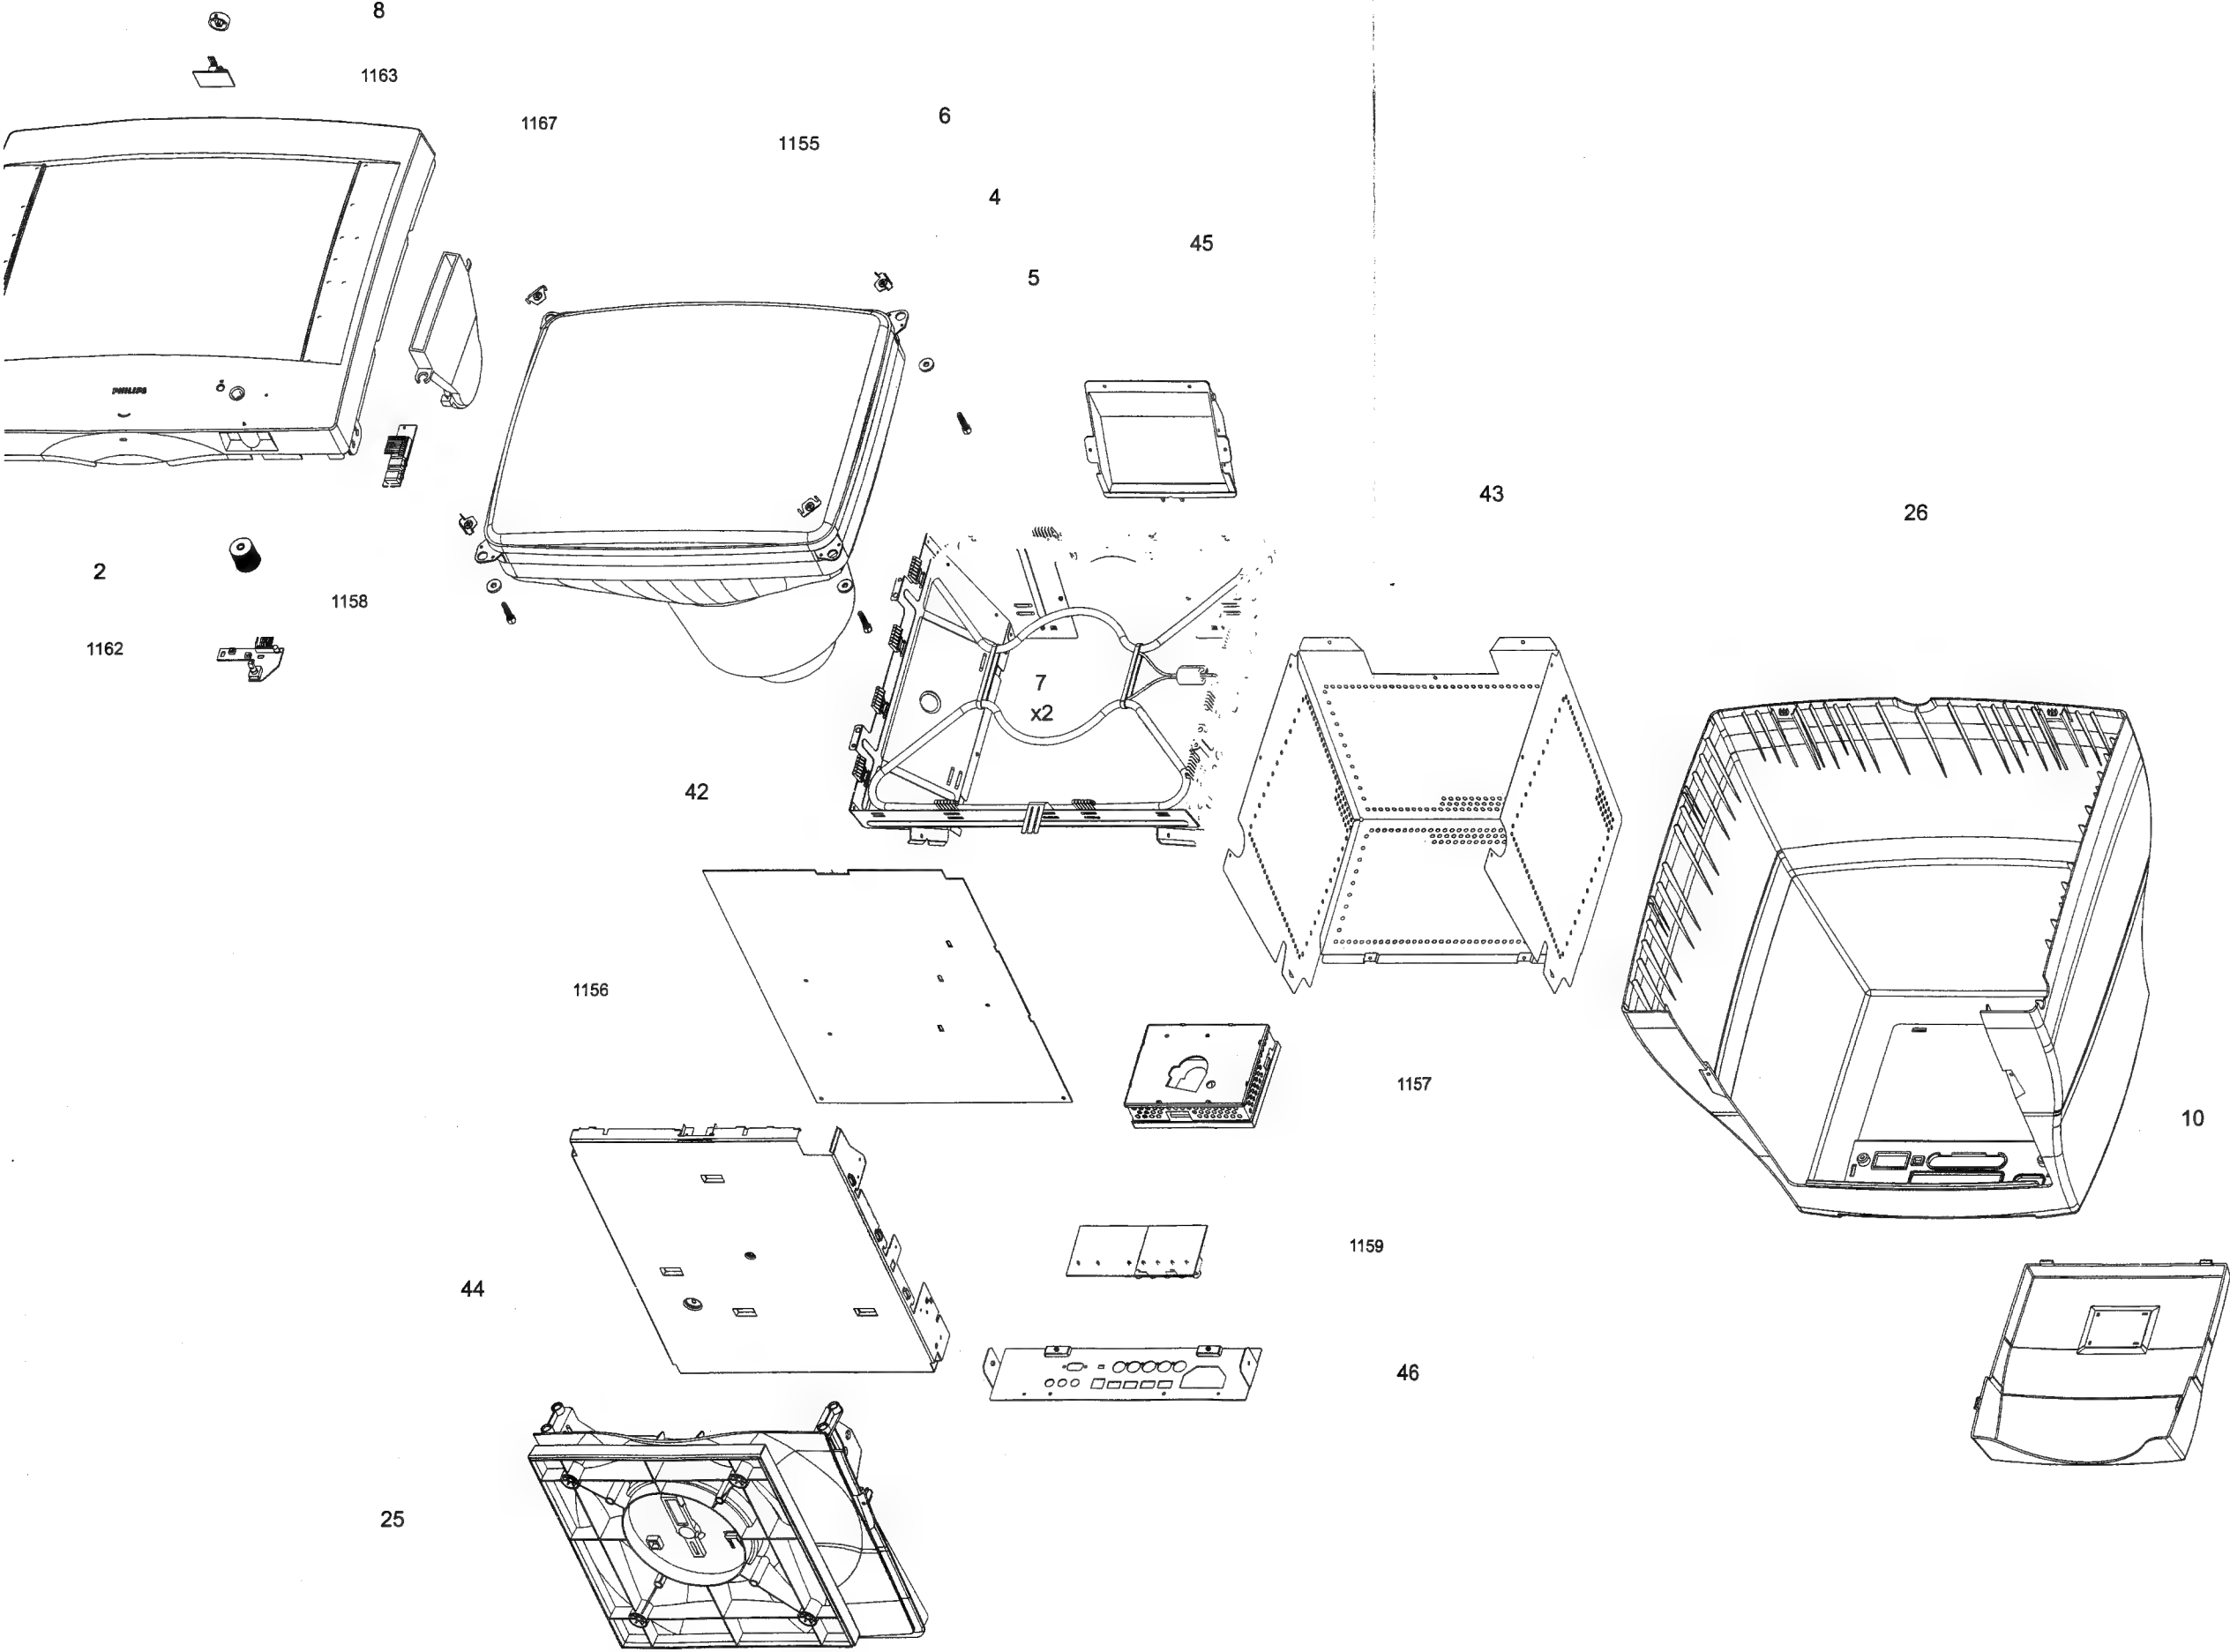

Spare parts list

19A580BQ/74C

29

Parts indicated on exploded view: Model: 19A580BQ/74C

1	3138 107 94230	FRONT CABINET ASSY
	3138 104 39310	LENS
	3138 104 39320	FUNCTION KNOB
	4822 816 11141	SPEAKER PANEL (R)
2	3138 104 38260	LOCKER
3	3138 104 39300	ROTARY KNOB
4	3138 101 63950	CRT MOUNTING WASHER
5	3138 100 41180	SCREW-CRT (TAP TITE SCREW W/WASHER)
6	3138 101 64480	PLATE-CRT
8	3138 104 39380	POWER KNOB
10	3138 107 94440	CABLE COVER ASSY
	3138 104 39330	CABLE COVER
	3138 104 40990	NAME PLATE
25	3138 107 94240	PEDESTAL ASSY
	3138 104 39280	BOTTOM
	3138 104 38270	SLIDER
	3138 104 39290	BASE - PEDESTAL
26	3138 104 39270	BACK COVER
1155A	4822 131 11275	CRT M46LLQ683X01 (S)
1156	3138 128 62000	MAIN PCB ASSY
1157	3138 128 62480	VIDEO PCB ASSY
1158	3138 128 59270	EARPHONE PCB ASSY
1162	3138 128 59310	ENCODER PCB ASSY
1163	3138 128 59320	DC POWER SWITCH PCB ASSY
1167	3138 128 63030	SPEAKER ASSY
1168	3138 128 63030	SPEAKER ASSY

Various

1166A	3138 128 77960	DEGAUSSING COIL ASSY
	4822 701 20292	TAPPING SCREW WITH WASHER
	3138 105 35110	D.F.U
	3138 105 35200	QUICK SET UP GUIDE
	4822 600 10409	P.E. BAG (for DFU)
	3138 106 51130	CARTON
	3138 106 51100	CUSHION TOP-L
	3138 106 51110	CUSHION TOP-R
	3138 106 51120	CUSHION BOTTOM
	4822 701 13753	P.E. BAG (for SET)

Accessories

	4822 320 12215	AUDIO CABLE
	4822 320 12216	MICROPHONE CABLE
	4822 265 11089	VGA ADAPTOR HD15/DB15 (MAC ADAPTOR)
	3138 117 01000	CD-ROM COLORIFIC
1151A	4822 321 11283	MAINS CORD
1152	4822 320 12217	VF CABLE

1156 Main panel

Various

1156	3138 128 62000	MAIN PCB ASSY 3774
	4822 492 71337	SPRING (FUSE HOLDER)
	4822 701 20292	TAPPING SCREW WITH WASHER
	5322 390 20011	VET SILIC.P4 20GR
1101A	4822 070 34002	FUSE, 218004.(4A)

1102A	4822 280 70378	RELAY 2P 12V/60MA OMI-SS212 B
1109	3138 128 78430	AC INLET ASSY 2 P.
1114	4822 265 30891	12.000 000 MHz
1202	4822 242 10836	2P MALE
1203	4822 267 10703	14P MALE (62511B)
1211	4822 267 10696	7P WAFER (63576)
1212	4822 267 10697	3P MALE (61143B)
1213	4822 267 10698	8P FEMALE
1215	4822 267 10704	9P WAFER (63578)
1217	4822 267 10699	CONNECTOR 2P MALE
1218	4822 265 11118	R.C.A. JACK
1221	4822 265 11175	TRANSISTORS
	4822 492 62076	INSULATION PLATE
	4822 466 93161	INSULATING PLATE
	4822 466 92891	VET SILIC.P4 20GR
	5322 390 20011	
1263	3138 128 63080	EEPROM ASSEMBLY (7201)
1504	4822 265 31231	3 P MALE
-II-		
2104	4822 121 70446	220nF 20% 250V
2105	4822 126 14088	2.2nF 20% 250V
2106	4822 126 14088	2.2nF 20% 250V
2107	5322 121 44212	1µF 10% 275B
2111	4822 121 43641	470nF 5% 400V
2112	4822 121 43699	220nF 100V
2113	4822 121 43699	220nF 100V
2114	4822 121 43696	100nF 100V
2115	4822 121 43696	100nF 100V
2116	5322 122 32531	100pF 5% 50V
2117	4822 126 10453	50V
2118	4822 122 30057	2.7nF 10% 100V
2119	4822 124 22669	1µF 20% 50V
2120	4822 124 22669	1µF 20% 50V
2121	4822 121 43696	100nF 100V
2122	4822 126 13469	330pF 10% Y5B 2KV
2123	4822 124 11517	450V 100U 20%
2124	4822 121 43696	100nF 100V
2125	4822 121 70357	22nF 10% 630V
2126	4822 121 70386	47nF 10% 250V
2127	4822 124 81186	47U 20% 20%
2128	4822 126 13196	CER2 SMD 25V 100N PM10 R
2129	4822 124 12112	1000µF 20% 10V
2130	4822 124 40849	330µF 20% 16V
2132	4822 124 12112	1000µF 20% 10V
2134	4822 124 12113	3300µF 20% 10V
2138A	4822 126 14088	2.2nF 20% 250V
2141	4822 124 22669	1µF 20% 50V
2142	4822 126 13606	10N 2% 100V
2143	4822 124 40239	0.47µF 20% 63V
2146	4822 126 13196	CER2 SMD 25V 100N PM10 R
2147	5322 122 32331	1nF 10% 100V
2148	4822 121 43696	100nF 100V
2149	4822 121 43913	470nF 10% 100V
2150	5322 122 32311	470pF 10% 100V
2151	5322 122 32311	470pF 10% 100V
2154	4822 124 42145	100µF 20% 25V
2157	4822 121 43908	47nF 10% 250V
2159	4822 121 43699	220nF 100V
2160	4822 126 13196	CER2 SMD 25V 100N PM10 R
2161	4822 122 33342	33nF 10% 63V
2163	4822 121 43908	47nF 10% 250V
2164	4822 121 43364	10nF 10% 400V
2165	4822 121 43699	220nF 100V
2166	4822 121 43696	100nF 100V
2167	4822 124 42359	47µF 100V
2168	4822 124 42149	220µF 20% 25V
2169	4822 124 42145	100µF 20% 25V
2170	4822 126 11103	10nF 5% 50V
2171	4822 121 43696	100nF 100V
2172A	4822 126 14088	2.2nF 20% 250V
2173	4822 126 13196	CER2 SMD 25V 100N PM10 R
2181	4822 124 11941	100µF 20% 250V
2182	4822 124 11941	100µF 20% 250V
2185	4822 124 12034	220µF 20% 100V
2186	4822 122 32899	100pF 10%B 500V
2187	4822 124 11942	2200µF 20% 25V
2188	4822 122 32899	100pF 10%B 500V

2189	4822 124 11943	1000µF 20% 25V
2190	4822 122 32899	100pF 10%B 500V
2191	4822 124 81285	2200µF 20% 16V
2192	4822 124 11942	2200µF 20% 25V
2193	4822 124 81131	330µF 20% 16V
2194	4822 124 42199	22µF 20% 50V
2195	4822 124 40207	100µF 20% 25V
2196	4822 124 22669	1µF 20% 50V
2197	5322 122 31866	6.8nF 10% 63V
2198	5322 122 32336	560pF 10% 100V
2201	4822 121 43696	100nF 100V
2202	5322 122 32143	22pF 100V
2203	5322 122 32143	22pF 100V
2214	4822 124 23539	10µF 20% 50V
2218	5322 124 41817	220µF 16V
2219	5322 122 32659	33pF 5% 50V
2220	5322 122 32659	33pF 5% 50V
2221	4822 124 22681	47µF 20% 16V
2222	4822 122 33575	220pF 5% 50V
2233	4822 124 23539	10µF 20% 50V
2234	5322 122 32658	22pF 5% 50V
2236	5322 122 32658	22pF 5% 50V
2239	4822 124 22681	47µF 20% 16V
2244	4822 124 22686	10µF 16V
2245	4822 126 13196	CER2 SMD 25V 100N PM10 R
2252	4822 122 33177	10nF 20% 50V
2253	4822 121 43699	220nF 100V
2254	4822 122 33177	10nF 20% 50V
2277	4822 124 23441	10µF 20% 50V
2281	5322 126 10184	680P 5% 50V.
2282	5322 126 10184	680P 5% 50V.
2283	4822 121 43913	470nF 10% 100V
2284	4822 121 43913	470nF 10% 100V
2285	4822 124 22678	100µF 20% 16V
2286	4822 124 22686	10µF 16V
2287	4822 122 33342	33nF 10% 63V
2288	4822 122 33342	33nF 10% 63V
2289	4822 122 32646	5.6nF 10% 50V
2290	4822 122 32646	5.6nF 10% 50V
2291	4822 124 12072	2.2µF 20% 50V
2292	4822 124 40763	2.2µF 100 V
2293	5322 122 32052	680pF 10% 100V
2294	5322 122 32052	680pF 10% 100V
2295	4822 121 43696	100nF 100V
2296	4822 121 43696	100nF 100V
2297	4822 124 42172	1000µF 16V
2305	4822 124 22681	47µF 20% 16V
2310	5322 122 32452	47pF 5% 63V
2311	5322 122 32452	47pF 5% 63V
2316	4822 126 13561	220nF 10% 16V
2317	4822 126 13196	CER2 SMD 25V 100N PM10 R
2325	4822 124 80132	47µF 20% 25V
2326	4822 124 42136	10µF 25V
2331	4822 126 13196	CER2 SMD 25V 100N PM10 R
2332	5322 122 32531	100pF 5% 50V
2333	5322 122 32531	100pF 5% 50V
2401	4822 124 22678	100µF 20% 16V
2403	4822 121 10705	47nF 5% 100V
2404	4822 121 10705	47nF 5% 100V
2405	4822 121 43513	100nF 100V
2406	4822 124 23539	10µF 20% 50V
2407	4822 121 43696	100nF 100V
2408	5322 122 32531	100pF 5% 50V
2409	4822 121 43695	47nF 10% 100V
2410	4822 121 70439	2.2nF 5% 100V
2411	4822 126 13606	10N 2% 100V
2412	4822 126 12104	12nF 5% 63V
2416	5322 122 32654	22nF 10% 63V
2425	4822 124 23539	10µF 20% 50V
2430	5322 122 32531	100pF 5% 50V
2431	4822 126 13196	CER2 SMD 25V 100N PM10 R
2432	4822 124 22669	1µF 20% 50V
2433	4822 124 40242	1µF 20% 63V
2434	4822 124 23539	10µF 20% 50V
2437	4822 122 33177	10nF 20% 50V
2438	4822 124 22669	1µF 20% 50V
2439	4822 124 40242	1µF 20% 63V
2440	4822 124 40246	4.7µF 20% 63V
2443	4822 124 23539	10µF 20% 50V
2444	4822 124 40242	1µF 20% 63V
2450	4822 124 40246	4.7µF 20% 63V
2453	4822 124 23441	10µF 20% 50V
2456	4822 124 23539	10µF 20% 50V
2457	4822 124 23539	10µF 20% 50V
2460	4822 124 23539	10µF 20% 50V
2467	4822 124 80132	47µF 20% 25V
2468	4822 122 33177	10nF 20% 50V
2472	4822 126 13196	CER2 SMD 25V 100N PM10 R
2473	4822 121 43916	330nF 10% 250V
2474	4822 124 22681	47µF 20% 16V

2477	4822 124 23539	10µF 20% 50V
2480	4822 124 80132	47µF 20% 25V
2486	5322 122 32448	10pF 5% 50V
2487	5322 122 32452	47pF 5% 63V
2488	5322 126 10184	680P 5% 50V.
2489	5322 126 10184	680P 5% 50V.
2490	4822 124 40207	100µF 20% 25V
2491	4822 124 23539	10µF 20% 50V
2492	5322 122 32654	22nF 10% 63V
2493	4822 124 80132	47µF 20% 25V
2501	4822 124 42144	470µF 63V
2502	4822 124 22336	100µF 20% 40V
2503	4822 126 14106	220pF 5% 50V
2504	4822 121 10706	22nF 5% 100V
2509	4822 121 43513	100nF 100V
2510	4822 124 42144	470µF 63V
2511	5322 116 80853	560pF 5% 63V
2513	5322 116 80853	560pF 5% 63V
2519	4822 124 23539	10µF 20% 50V
2521	4822 124 22681	47µF 20% 16V
2526	4822 121 70444	47nF 250V
2527	4822 124 22675	1µF 20% 160V
2529	4822 126 13035	220pF 10% 2KV
2530	4822 126 13035	220pF 10% 2KV
2531	4822 121 43364	10nF 10% 400V
2532	4822 121 70147	3.9nF 5% 1.6KV
2536	4822 124 22681	47µF 20% 16V
2537	4822 121 43918	100nF 10% 400V
2538	4822 124 80834	100µF 20% 250V
2539	4822 126 13249	150pF 10% Y5P 500V
2541	4822 124 22681	47µF 20% 16V
2542	4822 124 22681	47µF 20% 16V
2554	4822 121 42004	10nF 10% 400V
2555	4822 124 80276	10µF 20% 25V
2556	4822 121 43696	100nF 100V
2557	4822 124 42145	100µF 20% 25V
2558	4822 124 42145	100µF 20% 25V
2559	4822 126 13196	CER2 SMD 25V 100N PM10 R
2581	4822 124 23539	10µF 20% 50V
2582	4822 126 13196	CER2 SMD 25V 100N PM10 R
2583	4822 124 22681	47µF 20% 16V
2590	4822 126 13196	CER2 SMD 25V 100N PM10 R
2593	4822 124 80132	47µF 20% 25V
2595	4822 124 80132	47µF 20% 25V
2596	4822 124 80276	10µF 20% 25V
2601	4822 124 42199	22µF 20% 50V
2602	4822 121 43696	100nF 100V
2603	4822 124 22669	1µF 20% 50V
2604	4822 126 10453	50V
2605	4822 121 70162	10nF 5% 400V
2606	4822 122 33177	10µF 20% 50V
2607	5322 122 32531	100pF 5% 50V
2608	5322 122 32331	1nF 10% 100V
2609	4822 126 10453	50V
2611	4822 126 13196	CER2 SMD 25V 100N PM10 R
2614	4822 122 33177	10nF 20% 50V
2616	4822 121 43697	330nF 10% 100V
2618	4822 124 42357	33µF 25V
2623	4822 124 22681	47µF 20% 16V
2627	4822 124 42161	33µF 20% 250V
2630	4822 121 40336	47nF 10% 250V
2631	4822 126 11254	330pF 10% 2KV
2632	4822 124 42161	33µF 20% 250V
2633	4822 121 70492	2.2nF 5% 630V
2634	4822 121 70492	2.2nF 5% 630V
2636	4822 124 80132	47µF 20% 25V
2639	4822 121 70439	2.2nF 5% 100V
2641	4822 121 10706	22nF 5% 100V
2642	4822 121 70659	1.8µF 5% 100V
2645	4822 126 13154	1nF 10% 1KV
2646	4822 121 40336	47nF 10% 250V
2648	4822 124 41659	4.7µF 20% 25V
2651	4822 122 50117	100µF 2KV
2652	4822 126 12095	220µF 10% 2KV
2653	4822 126 13134	1nF 10% 1KV
2654	4822 126 13134	1nF 10% 1KV
2656	4822 126 12651	10nF 20% 2K
2657	4822 126 12651	10nF 20% 2K
2660	4822 126 13196	CER2 SMD 25V 100N PM10 R
2661	5322 122 32531	100µF 5% 50V
2662	4822 124 80132	47µF 20% 25V
2665	4822 124 41659	4.7µF 20% 25V
2671	4822 121 10707	1.2µF 5% 400V
2672	4822 121 70203	680F 250V
2673	4822 121 43681	330F 250V
2674	4822 121 70411	220F 5% 250V
2675	4822 121 70598	82nF 5% 400V
2681	4822 121 70241	120µF 5% 250V
2682	4822 121 70598	82nF 5% 400V

2683	4822 121 70598	82nF 5% 400V	3196	4822 051 20682	6k8 5% 0.1W	3323	4822 051 20471	470Ω 5% 0.1W	3490	4822 051 20471	470Ω 5% 0.1W
2901	4822 121 40336	47nF 10% 250V	3197	4822 116 80678	10k 1%	3324	4822 117 11503	220Ω 1% 0.1W	3491	4822 050 24709	47Ω 1% 0.6W
			3201	4822 050 21003	10k 1% 0.6W	3325	4822 050 24708	407 1% 0.6W	3492	4822 111 50521	100k 5%
			3202	4822 050 21003	10k 1% 0.6W	3326	4822 051 20393	39k 5% 0.1W	3493	4822 051 20224	220k 5% 0.1W
			3203	4822 050 23302	3k3 1% 0.6W	3327	5322 100 11544	220k 30%lin 0.1W	3495	4822 117 11383	12k 1% 0.1W
						3328	4822 117 10833	10k 1% 0.1W			
3080	4822 051 20008	0Ω JUMP. (SMD)	3204	4822 051 20332	3k3 5% 0.1W	3329	4822 117 10833	10k 1% 0.1W	3496	4822 117 10833	10k 1% 0.1W
3081	4822 051 20008	0Ω JUMP. (SMD)	3205	4822 117 10833	10k 1% 0.1W	3330	4822 051 20393	39k 5% 0.1W	3497	4822 050 26803	68k 1% 0.6W
3082	4822 051 20008	0Ω JUMP. (SMD)	3206	4822 050 21001	100Ω 1% 0.6W	3332	4822 117 10834	47k 1% 0.1W	3498	4822 051 20102	1k 5% 0.1W
3083	4822 051 20008	0Ω JUMP. (SMD)	3207	4822 050 21001	100Ω 1% 0.6W	3333	4822 117 10834	47k 1% 0.1W	3499	4822 051 20008	0Ω JUMP. (SMD)
3084	4822 051 20008	0Ω JUMP. (SMD)	3212	4822 050 24702	4k7 1% 0.6W				3501	4822 052 11228	202 5% 0.5W
3085	4822 051 20008	0Ω JUMP. (SMD)	3213	4822 050 21001	100Ω 1% 0.6W	3334	4822 051 20101	100Ω 5% 0.1W	3502	4822 050 22202	2k2 1% 0.6W
3086	4822 051 20008	0Ω JUMP. (SMD)	3214	4822 051 20102	1k 5% 0.1W	3335	4822 051 20101	100Ω 5% 0.1W	3503	4822 050 24701	470Ω 1% 0.6W
3087	4822 051 20008	0Ω JUMP. (SMD)	3215	4822 117 11449	2k2 1% 0.1W	3336	4822 051 20101	100Ω 5% 0.1W	3504	4822 050 24701	470Ω 1% 0.6W
3088	4822 051 20008	0Ω JUMP. (SMD)	3216	4822 051 20472	4k7 5% 0.1W	3401	4822 050 24701	470Ω 1% 0.6W	3505	4822 050 22202	2k2 1% 0.6W
3089	4822 051 20008	0Ω JUMP. (SMD)	3220	4822 117 10834	47k 1% 0.1W	3402	4822 051 20472	4k7 5% 0.1W	3506	4822 050 21808	102k 1% 0.6W
						3403	4822 050 24702	4k7 1% 0.6W			
3090	4822 051 20008	0Ω JUMP. (SMD)	3221	4822 050 22201	220Ω 1% 0.6W	3404	4822 051 20472	4k7 5% 0.1W	3507	4822 050 21808	102k 1% 0.6W
3092	4822 051 20008	0Ω JUMP. (SMD)	3222	4822 050 22201	220Ω 1% 0.6W	3405	4822 117 11449	2k2 1% 0.1W	3508	4822 050 24701	470Ω 1% 0.6W
3093	4822 051 20008	0Ω JUMP. (SMD)	3223	4822 050 21003	10k 1% 0.6W	3406	4822 050 23301	330Ω 1% 0.6W	3509	4822 050 23309	33Ω 1% 0.6W
3101	4822 053 21514	510k 5% 0.5W	3224	4822 050 21003	10k 1% 0.6W	3407	4822 051 53904	390k 1% 0.125W	3510	4822 052 11228	202 5% 0.5W
3102	4822 116 30469	5Ω 15%	3225	4822 050 21003	10k 1% 0.6W				3511	4822 051 20223	22k 5% 0.1W
3106	4822 050 21205	1M 2 1% 0.6W	3226	4822 050 21003	10k 1% 0.6W	3408	4822 050 24701	470Ω 1% 0.6W	3512	4822 051 20332	3k3 5% 0.1W
3107	4822 050 23604	360k 1% 0.6W	3227	4822 050 21003	10k 1% 0.6W	3409	4822 050 21203	12k 1% 0.6W	3513	4822 050 13302	3k3 1% 0.4W
3108	4822 116 52271	33k 5% 0.5W	3228	4822 050 24702	4k7 1% 0.6W	3410	4822 050 21242	1k24 1% 0.6W	3517	4822 051 20472	4k7 5% 0.1W
3109	4822 051 53904	390k 1% 0.125W	3229	4822 051 20102	1k 5% 0.1W	3411	4822 050 27501	750Ω 1% 0.6W	3518	4822 051 20223	22k 5% 0.1W
3110	4822 051 53904	390k 1% 0.125W	3230	4822 050 21001	100Ω 1% 0.6W	3412	4822 050 28202	8k2 1% 0.6W	3519	4822 050 22203	22k 1% 0.6W
						3414	4822 050 12203	22k 1% 0.4W			
3111	4822 050 13304	330k 1% 0.4W	3231	4822 050 21001	100Ω 1% 0.6W	3415	4822 117 11449	2k2 1% 0.1W	3520	4822 052 10478	407 5% 0.33W
3112	4822 051 20105	1M 5% 0.1W	3232	4822 117 11449	2k2 1% 0.1W	3416	4822 117 11383	12k 1% 0.1W	3521	4822 117 11449	2k2 1% 0.1W
3113	4822 050 24708	407 1% 0.6W	3233	4822 050 21002	1k 1% 0.6W	3417	4822 111 50522	33k 5% 1/6W	3522	4822 050 24701	470Ω 1% 0.6W
3114	4822 050 23902	3k9 1% 0.6W	3234	4822 051 20332	3k3 5% 0.1W	3423	4822 117 11449	2k2 1% 0.1W	3523	4822 117 10833	10k 1% 0.1W
3115	4822 116 52207	1k2 5% 0.5W	3235	4822 051 20101	100Ω 5% 0.1W				3524	4822 050 24701	470Ω 1% 0.6W
3116	4822 117 12179	0Ω 5% 1W	3236	4822 051 20332	3k3 5% 0.1W	3424	4822 052 10478	407 5% 0.33W	3526	4822 050 21803	18k 1% 0.6W
3117	4822 050 24703	47k 1% 0.6W	3237	4822 050 21001	100Ω 1% 0.6W	3425	4822 050 21203	12k 1% 0.6W	3527	4822 052 11101	100Ω 5% 0.5W
3118	4822 050 28202	8k2 1% 0.6W	3238	4822 051 20472	4k7 5% 0.1W	3426	4822 050 12703	27k 1% 0.4W	3528	4822 117 12669	1k 5% 7W
3119	4822 050 12702	2k7 1% 0.4W	3239	4822 052 10478	407 5% 0.33W	3427	4822 050 23902	3k9 1% 0.6W	3531	4822 053 12108	1Ω 5% 3W
3120	4822 050 22003	20k 1% 0.6W	3240	4822 050 21001	100Ω 1% 0.6W	3428	4822 117 12602	750k 5% 0.1W	3532	4822 050 26809	68Ω 1% 0.6W
						3429	4822 117 10833	10k 1% 0.1W			
3121	4822 052 11279	27Ω 5% 0.5W	3241	4822 050 21001	100Ω 1% 0.6W	3430	4822 117 11449	2k2 1% 0.1W	3533	4822 050 21501	150Ω 1% 0.6W
3122	4822 050 22203	22k 1% 0.6W	3242	4822 050 21001	100Ω 1% 0.6W	3431	4822 051 20104	100k 5% 0.1W	3540	4822 052 10828	802 5% 0.33W
3124	4822 117 12669	1k 5% 7W	3243	4822 050 21001	100Ω 1% 0.6W	3432	4822 051 20563	56k 5% 0.1W	3541	4822 050 24709	47Ω 1% 0.6W
3125	4822 052 10133	13k 5% 0.33W	3244	4822 051 20822	8k2 5% 0.1W	3433	4822 051 20563	56k 5% 0.1W	3542	4822 050 21003	10k 1% 0.6W
3126	4822 050 12203	22k 1% 0.4W	3245	4822 050 22203	22k 1% 0.6W				3543	4822 050 21202	1k2 1% 0.6W
3127	4822 050 24704	470k 1% 0.6W	3246	4822 051 20683	68k 5% 0.1W	3434	4822 116 82046	2k2 5% 1/6W	3544	4822 052 11108	1Ω 5% 0.5W
3128	4822 050 24704	470k 1% 0.6W	3247	4822 050 21001	100Ω 1% 0.6W	3435	4822 051 20561	560Ω 5% 0.1W	3545	4822 117 10442	10Ω 5%
3129	4822 050 29104	910k 1% 0.6W	3248	4822 051 20472	4k7 5% 0.1W	3436	4822 051 20563	56k 5% 0.1W	3546	4822 117 12941	33Ω 5% 7W
3130	4822 050 29104	910k 1% 0.6W	3249	4822 051 20472	4k7 5% 0.1W	3437	4822 117 11449	2k2 1% 0.1W	3548	4822 052 10108	1Ω 5% 0.33W
3136	4822 050 21004	100k 1% 0.6W	3250	4822 050 21003	10k 1% 0.6W	3438	4822 050 13903	39k 1% 0.4W	3549	4822 052 10108	1Ω 5% 0.33W
						3439	4822 050 23903	39k 1% 0.6W			
3137	4822 050 24708	407 1% 0.6W	3251	4822 050 24702	4k7 1% 0.6W	3440	4822 050 25603	56k 1% 0.6W	3550	4822 050 22201	220Ω 1% 0.6W
			3252	4822 050 21001	100Ω 1% 0.6W	3441	4822 117 10833	10k 1% 0.1W	3551	4822 100 11141	10k 30%lin 0.1W
			3253	4822 050 24702	4k7 1% 0.6W	3442	4822 050 13903	39k 1% 0.4W	3552	4822 050 26801	680Ω 1% 0.6W
			3254	4822 050 21001	100Ω 1% 0.6W	3443	4822 050 21204	120k 1% 0.6W	3554	4822 117 12942	150Ω 5% 7W
			3255	4822 050 11503	15k 1% 0.4W				3555	4822 051 20562	56k 5% 0.1W
3139	4822 050 11002	1k 1% 0.4W	3256	4822 050 24702	4k7 1% 0.6W	3444	4822 117 10965	18k 1% 0.1W	3556	4822 117 10442	10Ω 5%
3140	4822 050 23301	330Ω 1% 0.6W	3257	4822 051 20271	270Ω 5% 0.1W	3445	4822 117 10833	10k 1% 0.1W	3557	4822 117 10753	12Ω 5% 0.5W
3141	4822 050 21501	150Ω 1% 0.6W	3258	4822 051 20121	120Ω 5% 0.1W	3446	4822 117 10833	10k 1% 0.1W	3558	4822 052 11279	27Ω 5% 0.5W
3142	4822 050 11002	1k 1% 0.4W	3259	4822 051 20332	3k3 5% 0.1W	3447	4822 050 22202	2k2 1% 0.6W	3559	4822 050 24701	470Ω 1% 0.6W
3143	4822 050 23901	390Ω 1% 0.6W	3260	4822 050 22203	22k 1% 0.6W	3448	4822 051 20302	3k 5% 0.1W	3560	4822 052 11279	27Ω 5% 0.5W
3144	4822 116 52289	5k6 5% 0.5W				3449	4822 117 10833	10k 1% 0.1W			
3145	4822 050 15601	560Ω 1% 0.4W	3261	4822 050 21001	100Ω 1% 0.6W	3450	4822 050 21002	1k 1% 0.6W	3562	4822 050 21203	12k 1% 0.6W
3146	4822 050 21003	10k 1% 0.6W	3262	4822 050 21001	100Ω 1% 0.6W	3451	4822 051 20393	39k 5% 0.1W	3563	4822 117 11383	12k 1% 0.1W
3147	4822 050 24702	4k7 1% 0.6W	3263	4822 050 21001	100Ω 1% 0.6W	3452	4822 117 10833	10k 1% 0.1W	3564	4822 051 20102	1k 5% 0.1W
3148	4822 117 10833	10k 1% 0.1W	3264	4822 050 21001	100Ω 1% 0.6W	3453	4822 050 21803	18k 1% 0.6W	3566	4822 117 11383	12k 1% 0.1W
			3281	4822 050 16802	6k8 1% 0.4W				3567	4822 051 20101	100Ω 5% 0.1W
3149	4822 117 10833	10k 1% 0.1W	3282	4822 050 16802	6k8 1% 0.4W	3454	4822 117 10833	10k 1% 0.1W	3568	4822 051 20101	100Ω 5% 0.1W
3150	4822 050 21004	100k 1% 0.6W	3283	4822 051 20822	8k2 5% 0.1W	3455	4822 051 20393	39k 5% 0.1W	3569	4822 051 20101	100Ω 5% 0.1W
3151	4822 050 24703	47k 1% 0.6W	3284	4822 050 28202	8k2 1% 0.6W	3456	4822 051 20124	120k 5% 0.1W	3570	4822 051 20101	100Ω 5% 0.1W
3152	4822 050 22709	27Ω 1% 0.6W	3285	4822 051 20101	100Ω 5% 0.1W	3457	4822 050 21803	18k 1% 0.6W	3571	4822 051 20101	100Ω 5% 0.1W
3153	4822 116 81849	220k 5%	3286	4822 051 20101	100Ω 5% 0.1W	3458	4822 117 10833	10k 1% 0.1W	3572	4822 051 20101	100Ω 5% 0.1W
3154	4822 116 52271	33k 5% 0.5W				3459	4822 051 20682	6k8 5% 0.1W			
3155	4822 050 11002	1k 1% 0.4W	3287	4822 050 12703	27k 1% 0.4W	3460	4822 050 21202	1k2 1% 0.6W	3573	4822 051 20101	100Ω 5% 0.1W
3156	4822 117 1267										

31

PCS 90 021

5322 390 20011 3138 128 78420	VET SILIC.P4 20GR CRT SOCKET	2774 4822 126 14102 2776 4822 126 13196	2KV 10nF 20% 2KV CER2 SMD 25V 100N PM10 R	3788 4822 117 10833 3789 4822 117 10834 3790 4822 051 20229 3791 4822 050 13302	10k 1% 0.1W 47k 1% 0.1W 22Ω 5% 0.1W 3k3 1% 0.4W	1158 3138 128 59270 1032 4822 267 31526 1033 4822 267 31526	EARPHONE PCB ASSY CON BM PHONE H 01P F 3.5 ST B CON BM PHONE H 01P F 3.5 ST B
-II-							
1702 4822 265 41419 1705 4822 267 10702 1706 4822 255 10379	6P 14P MALE (63461B) HPS0720-011100	2777 4822 252 60127 2778 4822 122 33177 2779 4822 252 60127 2780 4822 252 60127 2781 4822 122 33177	DSP-201M-C04F 10nF 20% 50V DSP-201M-C04F DSP-201M-C04F 10nF 20% 50V	3792 4822 117 11139 3793 4822 051 20105 3794 4822 051 20561 3795 4822 051 20182 3796 4822 051 20562 3797 4822 051 20332 3798 4822 051 20102 3799 4822 051 20101 3800 4822 051 20479 3801 4822 051 20101	1k5 1% 0.1W 1M 5% 0.1W 560Ω 5% 0.1W 1k8 5% 0.1W 5k6 5% 0.1W 3k3 5% 0.1W 1k 5% 0.1W 100Ω 5% 0.1W 47Ω 5% 0.1W 100Ω 5% 0.1W	2081 5322 122 32654 2082 5322 122 32654 2084 4822 124 22678 2085 4822 124 23441 2086 4822 124 22681 2087 4822 124 22681	22nF 10% 63V 22nF 10% 63V 100μF 20% 16V 10μF 20% 50V 47μF 20% 16V 47μF 20% 16V
-II-							
2701 4822 126 13196 2702 4822 126 13196 2703 4822 126 13196 2704 4822 126 13196 2707 4822 126 13196 2708 4822 126 13196 2709 4822 126 13196 2711 4822 126 13196	CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R	2782 4822 126 13196 2787 4822 126 13196 2788 4822 126 13196 2789 4822 126 13196 2791 5322 124 40641 2792 5322 124 40641 2793 5322 124 40641	CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R CER2 SMD 25V 100N PM10 R 10μF 20% 100V 10μF 20% 100V 10μF 20% 100V	3802 4822 051 20101 3803 4822 116 82778 3804 4822 051 20102 3806 4822 051 20102 3807 4822 051 20102 3808 4822 051 20102 3811 4822 050 21502 3812 4822 116 80548 3814 4822 117 10353 3815 4822 051 20101	100Ω 5% 0.1W 407 5% 1/6W 1k 5% 0.1W 1k 5% 0.1W 1k 5% 0.1W 1k 5% 0.1W 1k5 1% 0.6W 15k 5% 0.5W 150Ω 1% 0.1W 100Ω 5% 0.1W	3081 4822 051 20331 3082 4822 051 20331 3083 4822 050 21502 3084 4822 051 20122 3085 4822 051 20122	330Ω 5% 0.1W 330Ω 5% 0.1W 1k5 1% 0.6W 1k2 5% 0.1W 1k2 5% 0.1W
2712 4822 122 33216 2713 4822 126 13196	270pF 5% 50V CER2 SMD 25V 100N PM10 R	2794 4822 126 13196	10μF 20% 100V	3816 4822 051 20271 3829 4822 051 20101 3831 4822 051 20101 3832 4822 051 20101	270Ω 5% 0.1W 100Ω 5% 0.1W 100Ω 5% 0.1W 100Ω 5% 0.1W	6084 4822 130 31253	BZX79-C2V4
1159 Terminal+Panel ASS'Y							
Various							
2714 4822 124 42171 2715 4822 122 32504 2716 4822 126 13196	22μF 25V 15pF 2% 63V CER2 SMD 25V 100N PM10 R	3701 4822 051 20759 3702 4822 051 20759 3703 4822 051 20759 3712 4822 051 20471 3713 4822 051 20471 3714 4822 051 20471 3715 4822 117 11503 3716 4822 117 11503 3717 4822 117 11503 3718 4822 117 11503	75Ω 5% 0.1W 75Ω 5% 0.1W 75Ω 5% 0.1W 470Ω 5% 0.1W 470Ω 5% 0.1W 470Ω 5% 0.1W 220Ω 1% 0.1W 220Ω 1% 0.1W 220Ω 1% 0.1W 220Ω 1% 0.1W	5702 4822 152 20596 5703 4822 157 53519 5704 4822 152 20596 5705 4822 152 20596 5706 3138 128 78040 5707 3138 128 78040 5708 3138 128 78040 5709 4822 157 53189	IND FXD SP0305 A 4U7 PM10 B IND FXD SP0406 A 100U PM10 B IND FXD SP0305 A 4U7 PM10 B IND FXD SP0305 A 4U7 PM10 B IND FXD SP0305 A 4U7 PM10 B COIL 0.15μH 10% COIL 0.15μH 10% COIL 0.15μH 10% CHOKO COIL 5.0μH PM10 IND FXD SP0305 A 4U7 PM10 B IND FXD SP0305 A 4U7 PM10 B	1288 3138 128 59280 1001 4822 277 21595 1009 4822 265 10782	TERMINAL PCB ASSY SWI SLI B 881 BM M 6P M2.50 RED B 15P F 0.85
2718 5322 122 32966 2719 5322 122 32448 2720 4822 124 81071 2721 4822 121 42004 2722 4822 126 14122 2723 4822 124 80606 2724 4822 122 33216	39pF 5% 50V 10pF 5% 50V 22μF 20% 160V 10nF 10% 400V 6.8nF 10% 50V 1μF 20% 160V 270pF 5% 50V	3719 4822 051 20331 3721 4822 051 20479 3722 4822 051 20479 3723 4822 051 20479 3724 4822 117 11503 3725 4822 051 20101 3726 4822 051 20101 3727 4822 051 20332 3728 4822 050 21009 3729 4822 051 20332	330Ω 5% 0.1W 47Ω 5% 0.1W 47Ω 5% 0.1W 47Ω 5% 0.1W 220Ω 1% 0.1W 100Ω 5% 0.1W 100Ω 5% 0.1W 3k3 5% 0.1W 10k 1% 0.6W 3k3 5% 0.1W	5712 4822 152 20596 5713 4822 152 20596 5714 4822 152 20596 5715 4822 152 20596 5716 3138 128 78040 5717 3138 128 78040 5718 3138 128 78040 5719 4822 157 53189	IND FXD SP0305 A 4U7 PM10 B IND FXD SP		



6001 4822 130 31631 BYV10-20
6002 5322 130 34337 BAV99
6003 5322 130 34337 BAV99
6004 5322 130 34337 BAV99
6005 5322 130 34337 BAV99



7001 4822 209 16095 BA7657F

1162 Encoder panel

Various

1162 3138 128 59310 ENCODER PCB
ASSY
1247 4822 273 10344 ROT. ENCODER
20P
1248 4822 276 13249 SWI TACT B
1249 4822 276 13249 SWI TACT B



6291 4822 130 83789 L-59GYC

1163 Power switch panel

Various

1163 3138 128 59320 DC POWER
SWITCH PCB
ASSY
1199 4822 276 13886 SWITCH 2P
PUSH BUTTON

1167 Speaker ass'y

Various

1167 3138 128 63030 SPEAKER ASSY
3138 104 41490 SPEAKER HORN
4822 701 14688 RUBBER
SUPPORT-SPEA
KER
3138 101 31440 SPEAKER
SPRING



5001 4822 240 10265 8 OHM/2.5W

1168 Speaker ass'y

Various

1168 3138 128 63030 SPEAKER ASSY
3138 104 41490 SPEAKER HORN
4822 701 14688 RUBBER
SUPPORT-SPEA
KER
3138 101 31440 SPEAKER
SPRING



5001 4822 240 10265 8 OHM/2.5W

1169 Microphone ass'y

Various

1169 3138 128 63200 MIC PHONE
ASSY
4822 242 30337 WM-55A103
3138 128 78440 3P CONNECTOR

Quick Reference for 17" and 19" Monitors

Major Difference Between 19A580BQ/74C And 17A580BQ/74C

ITEM \ MODEL 12 NC	19A580BQ/74C	17A580BQ/74C
1	3138 107 94230 (Front Cabinet Assy)	3138 107 94670 (Front Cabinet Assy)
	3138 104 39260(Front Cabinet)	3138 104 40530 (Front Cabinet)
	3138 104 39310(LENS)	3138 104 40590(LENS)
	3138 104 39320(Function Knob)	3138 104 40580(Function Knob)
	x	3138 104 40600(Speaker-Grille)
	3138 104 39350(Speaker-Panel - R)	x
	3138 104 39340(Speaker Panel -L)	x
2	3138 104 39300(Rotary Knob)	3138 104 40720(Rotary Knob)
8	3138 104 39380(Power Knob)	3138 104 40710(Power Knob)
10	3138 107 94440(Cable Cover Assy)	3138 107 94730(Cable Cover Assy)
	3138 104 39330(Cable Cover)	3138 104 40610(Cable Cover)
	3138 106 49960(P.E. BAG)	3138 106 32610(P.E. BAG)
25	3138 107 94240(Pedestal Assy)	3138 107 94680(Bottom Plate Assy)
	3138 104 39280(Bottom)	3138 104 40550(Bottom)
	3138 104 39290(Base - Pedestal)	3138 104 40560(Base - Pedestal)
26	3138 104 39270(Back Cover)	3138 107 94960(Back Cover Assy)
	x	3138 104 40541(Back Cover)
	x	3138 104 41711(USB Cover)
27	3138 104 40950(USB Cover)	x
125	3138 105 35110(D.F.U.)	3138 105 35190(D.F.U.)
450	3138 106 51130(Carton)	3138 106 51790(Carton)
451	3138 106 51100(Cushion-Top-L)	3138 106 51340(Cushion-Top-L)
452	3138 106 51110(Cushion-Top-R)	3138 106 51350(Cushion-Top-R)
453	3138 106 51120(Cushion-Bottom)	3138 106 51360(Cushion-Bottom)
454	3138 106 38440(P.E. BAG for SET)	3138 106 39690(P.E. BAG for SET)
1155	4822 131 11275 M46LLQ 683X01(S)	4822 131 11277 M41KSX 683X24 (T)
1156	3138 128 62000(Main PCB Assy)	3138 128 62450(Main PCB Assy)
1158	3138 128 59270(Earphone PCB Assy)	3138 128 63380(Earphone PCB Assy)
1166	3138 128 77960(Degaussing Coil Assy)	3138 128 77930(Degaussing PCB Assy)
8160	x	3138 128 72740(Rotation Coil)

Difference List Between 3138 128 59270 And 3138 128 63380

ITEM \ 12 NC	3138 128 59270(Earphone PCB Assy)	3138 128 63380(Earphone PCB Assy)
2081	5322 122 32654(22n/50v)	x
2082	5322 122 32654(22n/50v)	x

Difference List

Difference List Between 3138 128 62000 And 3138 128 62450

ITEM	MODEL 12 NC	17A580BQ/74C	17A580BQ/00C
125		3138 105 35190 D.F.U.	3138 105 35180 D.F.U.
126		3138 105 35210 QUICK SET UP GUIDE	3138 105 35200 QUICK SET UP GUIDE
127		x	3138 105 35330 QUICK SET UP GUIDE
128		3138 106 32610 P.E. BAG	3138 106 33440 P.E. BAG
450		3138 106 51790 CARTON	3138 106 51400 CARTON

Difference List

ITEM	MODEL 12 NC	19A580BQ/74C	19A580BQ/00C
125		3138 105 35110 D.F.U.	3138 105 35260 D.F.U.
126		3138 105 35210 QUICK SET UP GUIDE	3138 105 35200 QUICK SET UP GUIDE
127		x	3138 105 35330 QUICK SET UP GUIDE
450		3138 106 51130 CARTON	3138 106 51800 CARTON
1151		3138 128 75240 MAINS CORD	3138 128 75250 MAINS CORD

ITEM	MODEL 12 NC	19A580BQ/74C Main PCB Assy (3138 128 62000)	17A580BQ/74C Main PCB Assy (3138 128 62450)
1263		3138 128 63080(Eeprom Assy)	3138 128 63320(Eeprom Assy)
2603		4822 124 22669(1u/50v)	4822 124 23539(10u/50v)
2674		4822 121 70411(220n/250v)	4822 121 10708(180n/250v)
2681		4822 121 70241(120n/250v)	4822 121 70598(82n/400v)
3175		4822 050 24703(47 k)	4822 050 23904(39k)
3214		4822 051 20102(1 k)	4822 117 10833(10k)
3239		4822 052 10478(4R7)	4822 152 20596(4u7)
3245		4822 050 22203(22 k)	4822 050 21003(10k)
3481		4822 050 26203(62 k)	4822 050 25603(56k)
3501		4822 052 11228(2R2)	4822 052 11108(1 R)
3510		4822 052 11228(2R2)	4822 052 11108(1 R)
3556		4822 117 10442(10 R)	4822 117 12834(22 R)
3562		4822 050 21203(12 k)	4822 050 28202(8K2)
3563		4822 117 11383(12 k)	4822 051 20273(27 K)
3564		4822 051 20102(1 k)	4822 051 20562(5K6)
3566		4822 117 11383(12 k)	4822 117 10834(47 K)
3665		4822 117 10833(10 k)	4822 117 11383(12 K)
5101		3138 118 74160 (Line Filter 14 mH Min)	x
5101		x	3138 178 70890 (Line Filter 15 mH Min)
5102		3138 118 74160 (Line Filter 14 mH Min)	x

CM5800 BRIEF

A. GENERAL

The CM5800 is a Digitally Controlled Autoscan Color Display Monitor with 19" Low Emission CRT which is specially designed for low cost and high performance. This monitor can operate at horizontal scan frequencies from 30 to 95 kHz and vertical scan frequencies from 47 to 160 Hz.

This monitor is equipped with an embedded microcontroller which can preset the required modes. The CM5800 provides many functions, such as digitally adjustable picture, DDC1/2B, power management, low emission, high immunity, etc.

This monitor complies with MPRII low emission standard and also fulfills TCO'91 automatic power saving requirements. To reduce power consumption to less than 15 watts in standby or suspend mode and less than 5 watts in off mode, the monitor also complies with the energy star computer program initiated by the EPA.

B. DESCRIPTION OF CM5800

This description mainly introduces the functions, including power supply / power saving management, horizontal / vertical deflection, video amplifier, microcontroller, etc.

1. POWER SUPPLY / POWER SAVING MANAGEMENT

POWER SUPPLY:

This monitor is designed with an off-line flyback switch mode power supply which can operate with input from 90 VAC to 270 VAC. The power supply uses an IC (L4990) for current mode pwm controller and drives the mosfet switch directly. The control scheme transforms a switching converter from a voltage source into a multi-output voltage. The control concept exhibits many desirable properties such as inherent over-load protection, stable and fast system response.

The maximum power consumption is up to 130 watts. A power limiting circuit is added for safety reasons.

Secondary feedback via an optocoupler is used to obtain a stable output voltage. The secondary feedback supplies all necessary voltages for deflection and video. Voltage stabilizer IC is used to supply the small signals and microcontroller/EPROM.

POWER SAVING MANAGEMENT:

This monitor can reduce power consumption while no sync pulses are detected by microcontroller and automatically recover to normal power when sync signals are detected by microcontroller.

During power saving mode, the second power supply still delivers 5V to μ c (CPU).

The consumed power is less than 15 watts during standby / suspend modes, and less than 5 watts during off mode.

2. HORIZONTAL / VERTICAL DEFLECTION

HORIZONTAL DEFLECTION:

SYNC PROCESSING PART:

The heart of horizontal/vertical deflection controller is TDA4858 which can offer complete and efficient small signal sync processing for autosync monitors. This device is fully dc controllable and can be used in applications with a microcontroller as well as stand-alone with potentiometer control.

This controller provides sync processing, which can accept separate , composite (H+V) and sync-on-video input signals. A very short setting time after mode change for protection of external power components has been taken.

The TDA4858 provides extensive functions like a flexible smps block and a geometry control with facilities ,leading to excellent picture quality. This device also can directly drive the vertical deflection output stage ,the line driver stage , the E/W output stage and the EHT stage. All controls are dc and tracked with the incoming frequencies.

DEFLECTION PART:

The horizontal deflection is built around the buck converter which makes it possible to combine H-deflection and EHT generator and allows size and e/w correction without influencing EHT.

The flyback pulse from the buck converter is used by the line output.

Transformer (LOT) generates the required 26.0kV anode voltage.

The adjustable focus (G3) and screen (G2) voltages are internally derived from the anode voltage. Other secondary windings are used to generate the voltages for G1 and horizontal raster DC shift. For 19 inch monitor also provides dynamic focus on G4 to get a good focus performance.(G4 also adjustable).

To guarantee constant EHT over the whole frequency range , the B+ is made tracked with H-frequency by means of a step down converter.

The horizontal size and east/west correction are obtained by varying the voltage of buck converter of the lower deflection a circuit.

Five-capacitors switch and dc controlled linearity coil are designed for optimal screen linearity.

For safety reasons ,x-ray protection circuit is included ,and the control information sensing by TDA4858 will shut down the h-deflection (and thereby EHT generator) if the anode voltage exceeds a certain value.

This circuit is also used for beam current overload protection . Shut down the deflection in case the total beam current exceeds a certain limit to protect both CRT and LOT.

VERTICAL DEFLECTION:

The majority of vertical deflection functions is integrated by two ICs ; TDA4858 and TDA8172.

The TDA4858 takes care of sync polarity correction ,automatic catching and holding of the vertical oscillator ,generation of sawtooth drive current for vertical output and vertical s-correction ,and generation of a correct V-blanking pulse for video blanking during vertical retrace lines.

The TDA8172 which is a dc-coupled vertical deflection booster with differential input signals is suitable for color monitor. The output stage has thermal and soar protection ,and high linear sawtooth signal amplification to obtain the required vertical deflection current.

To obtain a fast vertical retrace for non-VGA mode an external flyback supply is used.

CM5800 BRIEF

3. VIDEO AMPLIFIER

The heart of the video circuit is TDA4885. This controller can drive the hybrid post-amp. CR6927 by buffer stage. The video DC level and gain at the cathode will be controlled by the software.

The red, green and blue video signals are amplified and inverted by the preamplifier to output stage and AC coupled to the CRT cathodes.

Three cut-off adjustments are provided to set the video black level at cathode for all three guns. Also three individual gain adjustments are provided to adjust the white point at maximum swing. Both cut-off and gain controls are digital type controlled by microprocessor. For limiting the beam current and preventing local doming, the beam current limit will automatically reduce the video swing in case the maximum beam current is exceeded (ABL adjustment: R3647).

Brightness control, which is controlled by TDA4885, reduces power consumption in video amplifier. To suppress the vertical retrace lines during vertical retrace, a vertical blanking pulse is added to grid 1.

A spot-killer circuit is also added to prevent CRT spot burn-in when the set is switched off.

DDC 1/2B:

Via SDA, data about the monitor, including the serial number, production codes, CRT type and applicable timings are stored in the EEPROM (24IC21). To avoid picture interference, the reading and writing processes are executed during vertical blanking which is informed by the vertical sync.

4. MICROCONTROLLER

GENERAL DESCRIPTION:

The Philips P87C380 microprocessor is used to control the monitor. The preset data are stored in EEPROM ST24W08.

HARDWARE DEFINITION:

A. KEYBOARD

There are 3 key pads and one rotary encoder at the front of monitor for the OSD control.

- OSD function key:

Push it to confirm entrance or exit from the OSD window

- Encoder:

To select or adjust the parameters which are chosen from OSD.

- Brightness key:

Push it, the OSD shows the window, then adjust with the encoder.

- Contrast key:

Push it, the OSD shows the window, then adjust with the encoder.

B. OSD WILL DISAPPEAR AND SAVE AUTOMATICALLY AFTER NON-OPERATION

C. SOFTWARE WILL CONTROL THE DPMS ACCORDING TO THE SYNC STATUS.

D. VIDEO PRESET MODES

Preset video resolution and sync. Polarities

Resolution modes	H frequency	V frequency	H	V
720 x 400	31.469K	70.087Hz (VGA)	-	+
640 x 480	31.469K	59.940Hz (VESA/60)	-	-
640 x 480	37.500K	75.000Hz (VESA/75)	-	-
640 x 480	43.269K	85.008Hz (VESA/85)	-	-
800 x 600	37.879K	60.317Hz (VESA/60)	+	+
800 x 600	46.875K	75.000Hz (VESA/75)	+	+
800 x 600	53.674K	85.061Hz (VESA/85)	+	+
1024 x 768	48.363K	60.004Hz (VESA/60)	-	-
1024 x 768	60.023K	75.029Hz (VESA/75)	+	+
1024 x 768	68.677K	84.997Hz (VESA/85)	+	+
1280 x 1024	63.981K	60.020Hz (VESA/60)	+	+
1280 x 1024	80.000K	75.000Hz (VESA/75)	+	+
1280 x 1024	91.146K	85.024Hz (VESA/85)	+	+
1600 x 1200	75.000K	60.000Hz (VESA/60)	+	+
1600 x 1200	93.750K	75.000Hz (VESA/75)	+	+

Service Information

Service information 4822 727 21038 is herewith cancelled.


This [DDC Module (DDC cable)= 4822 320 12004(=4822 724 27550)] and [DDC V2(DDCV2N.EXE) software(3.5" disk)=4822 711 00024(= 4822 724 27560)] are used for "BU Monitor - Chungli product range" which incorporates a DDC1/DDC2B function that allows bi-directional communication between the monitor and PC system for optimal video configuration. [July 01 1997, Revision 2.0], which upgrades the software and service information(4822 727 21027 & 4822 727 21038) , is fully compatible with previous one.

Additional information :

Additional information about DDC (Display Data Channel) may be obtained from Video Electronics Standards Association (VESA). Extended Display Identification (EDID) information may be also be obtained from VESA.

Pin assignment


The 15-pin D-sub connector (male) of the signal cable (3 rows) for DDC feature :

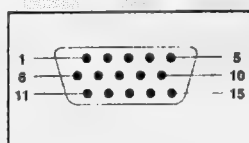

Pin No.	Assignment	Pin No.	Assignment
1	Red video input	9	No pin
2	Green video input	10	Logic ground
3	Blue video input	11	Identical output connected to pin 10
4	Identical output connected to pin 10	12	Serial data line (SDA)
5	Ground	13	H.sync
6	Red video ground	14	V. sync (VCLK for DDC)
7	Green video ground	15	Data clock (SCL)
8	Blue video ground		

Connection

(Rear of the monitor)

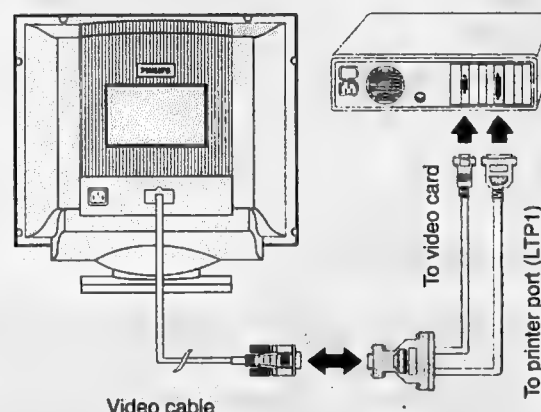

DDC data re-programming

1. General

In case the DDC data memory IC, replaced due to a defect the data contents of this IC have to be re-programmed via a PC.

In case of replacement of the video board it is advised to re-soldered DDC IC from the old board onto the new board, in this case the IC dose not need to be re-programmed.

2. DDCV2N.EXE can be used for :

EDID Structure Version/Revision
Version : 1
Revision : 0 (text file)

and

Version : 1
Revision : 1 (hex file)

INSTRUCTIONS

DDC Reprogramming Instruction (for PHILIPS Branded models)

System Requirements

DDC Module (DDC cable), P/N = 4822 320 12004

An Intel 386 (or above) PC or compatible

DOS 6.0 or above

DDCV2N.EXE software

Procedure

Connect DDC Cable as shown in cover page.

Insert diskette in Drive a: Select Run "DDCV2N.EXE" under DOS or Win.

Press "Enter" at the introduction screen

Menu Configuration:

File	R/W	Setup	Quit
Load EDID	Write EDID to EEPROM	Options	
Load txt file (V1.0)	Read From EEPROM	Barcode format	
Save EDID	Edit EDID Code		
Save txt File	Auto Scan		
Convert EDID Code			
Os shell			
Exit			

General :

1. How to change drive

Use arrow keys to highlight "Options" under the Setup menu, Press "Enter".

Press "F2", then Press "ESC", fill in "A" or "C".

[(If your .HEX files for different Model numbers in drive "A", then fill in "A").,

(If your .HEX files for different Model numbers in drive "C", then fill in "C").

Normally, to read DDC data from EEPROM of Monitor is enough.]

Press "Enter", then Press "ESC"

2. How to select .HEX files for different Model numbers

example:

Use arrow keys to highlight "Load EDID" under the File menu, Press "Enter"

Bring up BRANDED\ Press "Enter"

Bring up

 ..\

21B772BE\

CM58\

← select, Press "Enter"

Bring up

 ..\

19A74C.HEX

19A00C.HEX

← at this highlight area, Press "Enter", then go back to last screen

← select for 19A580BQ/74C

← select for 19A580BQ/00C

How to write DDC hex files to Monitor

Use arrow keys to highlight **"Options"** under the Setup menu, Press **"Enter"**

Tab down to ID Serial Number, Use down arrow key to place the asterisk (*) beside "store in DEC with LSB first". Press **"control/enter"** to save.
(Ensure the top asterisk (*) is beside in store in HEX with LSB first.)

Use arrow keys to highlight **"Load EDID"** under the file menu, Press **"Enter"**.

Use arrow keys to highlight **"BRANDED"**, Press **"Enter"**.

Use arrow keys to highlight **"the model list under subdirectly"**, Press **"Enter"**.

Use arrow keys to highlight **"Write EDID to EEPROM"** under the R/W menu, Press **"Enter"**.

Use arrow keys to highlight **"Read from EEPROM"** under the R/W menu, Press **"Enter"**.

Use arrow keys to highlight **"Edit EDID Code"** under the R/W menu, Press **"Enter"**.

Verify the ID Serial number on the screen matches the serial number of the unit.

Verify EDID Structure Version is "Version :1, Revision :1"

Press **"ESC"**

Use arrow keys to highlight **"Quit"**, Press **"Enter"**.

Menu Configuration:

File	R/W	Setup	Quit
Load EDID	Write EDID to EEPROM	Options	
Load txt file (V1.0)	Read From EEPROM	Barcode format	
Save EDID	Edit EDID Code		
Save txt File	Auto Scan		
Convert EDID Code			
Os shell			
Exit			

Remark: ID product code and ID Serial Number setting are for "PHILIPS" & "STENCIL" DDC TEXT

INSTRUCTIONS

How to change the Year, Week & Serial number of Monitor (for BRANDED models)

Use arrow keys to highlight **"Barcode format"**, under the Setup menu, Press **"Enter"**.

Bring up :

Barcode example : 9741222266
Barcode format : YYWWSSSSSS

Fill in 9741222266, press "Enter"

Fill in yywwssssss, press "Enter"

continue :

Barcode example : 9741222266
Barcode format : YYWWSSSSSS

Manufacture Year : 1997
Manufacture Week : 41
Serial no. : 222266

EDID [16] Week : 29
EDID [17] Year : 07 [Year-1990]
EDID [12..15] S/N. : 0003643a

data correct ? (Y/N) Y

Fill in "Y", don't press "Enter"

There is a description at the lower of the screen for Barcode format as below.

Barcode format : Y,W,S,X,- (year,week,s/no,ignore,fixed)

Y stands for "year".

W stands for "week"

S stands for "s/no (serial number)".

X stands for "ignore". Allow user to fill in any 'character' or 'numeric'.

- stands for "fixed". User have to fill in Special 'character' or 'numeric' for "AutoScan" if user fill in '-' at "Barcode format :".

Use arrow keys to highlight **"Auto Scan"** under the R/W menu, Press **"Enter"**.

Bring up:

Auto Scan

◆◆△△□□□□□□

← year, week, serial number can be changed

□ SerialNumber

◆ YearCode

△ WeekCode

* don't care

Fill in "Barcode data (for instance: 9741222266)" beside Auto Scan, press **"Enter"**

9745000240

9640001000

Press **"ESC"** **"ESC"**, return to R/W menu.

How to change the serial number of Monitor (for PCEC models)

Use arrow keys to highlight **"Barcode format"**, under the Setup menu, Press **"Enter"**.

Bring up : Barcode example : 5800C12345678
Barcode format : XXXXXSSSSSSSS

Fill in 5800C12345678, press "Enter"
Fill in xxxxxxxxsssss, press "Enter"

continued : Barcode example : 5800C12345678
Barcode format : XXXXXSSSSSSSS

Manufacture Year : 1997
Manufacture Week : 40
Serial no. : 12345678
Serial no. ASCII : 5800C12345678

(can be changed), press "Enter"
(can be changed), press "Enter"

Fill in 5800C12345678, press "Enter"

data correct ? (Y/N) Y

Fill in "Y", don't press "Enter"

There is a description at the lower of the screen for Barcode format as below.

Barcode format : Y,W,S,X,- (year,week,s/no,ignore,fixed)

Y stands for "year".
W stands for "week"
S stands for "s/no (serial number)".
X stands for "ignore". Allow user to fill in any 'character' or 'numeric'.
- stands for "fixed". User have to fill in Special 'character' or 'numeric' for "AutoScan" if user fill in '-' at "Barcode format :".

Use arrow keys to highlight **"Auto Scan"** under the R/W menu, Press **"Enter"**.

Bring up: Auto Scan

← year, week, serial number can be changed

- ☐ SerialNumber
- ☒ YearCode
- ☐ WeekCode
- ☒ don't care

Fill in "Barcode data (for instance: 5800C12345678)" beside Auto Scan, press **"Enter"**

5800J28256153
58008H75602720

Press **"ESC"** **"ESC"**, return to R/W menu.

For the original DDC TEXT file:

Use arrow keys to highlight **"Load txt file (V1.0)"** under the File menu, Press **"Enter"**

1. Data text file editing options

The data text file can be edited by the DOS-editor.

2. Re-programming instructions

- Turn on PC and monitor
- Connect the module to the PC and monitor, see connection figure on front page.
- Insert the floppy disk into drive A: and follow the following routine:
- Type "DDC" and then press "ENTER". On the screen it will show: "Adaptor check...", then the screen will display "main menu".
- Use the arrow keys to highlighting items 1, 2, 3, 4, 0 :

Step 1 - Select item "1", which appear as a highlight, and press

"ENTER" to convert a text data into EDID data.

- Enter the text file name with directory path eg. "a:\CM0200\BND14PHL.TXT" and press "ENTER".
The available text file on the floppy will now be converted into a binary file that can be downloaded into the memory IC.
- Press "ENTER" to continue, the program will return to main menu.

Step 2 - Select item "2", under the main menu , and press

"ENTER" to write a complete EDID data file to EEPROM. Now, the data will be loaded into the memory IC.

- Press "ENTER" to continue, the program will return to main menu.

Step 3 - Select item "3", under the main menu, and press

"ENTER" to verify that EDID downloading is successful. This function also can be used to view current DDC data in monitor.

- Press "ENTER" and follow the indication on the screen to return main menu.

Step 4 - Select item "4", under the main menu, and press

"ENTER" to enter DOS prompt and DOS Editor of your system. By DOS Editor, the function allow you to modify or update DDC data eg. manufacturing week, serial number etc according to the rear cover type label of the set.

The production serial number of type label consist of:

- TY - origin of production centre
- 00 - technical service change code
- 95 - production year
- 12 - production week
- 123456 - 6 digits (max) serial number

Once the modification of DDC text file is completed under DOS Editor, Quit to DOS prompt and return to main menu by typing "EXIT" and press "ENTER". After text file is modified according above description, you can repeat the process of step 1 to step 3 to re-program DDC data again.

Step 5 - Select item "0", under the main menu, and press

"ENTER" to quit DDC program and return to DOS prompt.

3. Remark 1 :

During the re-programming, it is recommended to follow step 1, step 2, and step 3.

Due to different format requirements by customer, If read DDC data from monitor by step 3 , product ID and serial number will show 3 formats, <decimal>, <hexa-decimal>, and <ASCII>, the correct format can be obtained by running step 1 again (the correct format can be detected and identified automatically by step 1 from original text file).

THE CONTROL SOFTWARE FOR MONITORS THROUGH USB

CustoMax for your monitor

version 3.0

The information in this document is subject to change without notice and does not represent a commitment on the part of the developer.

The software may be used or copied only in accordance with the terms of the agreement.

In no event will the developer of this product be liable for direct, indirect, special, incidental or consequential damages arising out of the use or inability to use this product or documentation, even if advised of the possibility of such damages.

This document contains materials protected by copyright. All rights are reserved. No part of this manual may be reproduced or transmitted in any form, by any means or for any purpose without expressing written consent.

PHILIPS and the PHILIPS logo are registered trademarks of PHILIPS Electronics N.V.

MS-DOS and Windows are registered trademarks of Microsoft Corporation.

IBM PC/XT/AT/386/486 are registered trademarks of International Business Machines Corporation.

TABLE OF CONTENTS

1. The content of the package
2. Installation
3. CustoMax, how it works
4. CustoMax quick overview
 - 4.1. Sound & Vision controls
 - 4.2. Screen geometry controls
 - 4.3. Colour quality controls
 - 4.4. Image quality controls
 - 4.5. Hardware & Software settings
 - 4.6. User guidance

1. THE CONTENT OF THE PACKAGE

In the package you should find

The USB module

The USB cable

The CD-ROM with the CustoMax software & USB device driver on it

The Directions for use

2. INSTALLATION

System requirements

Hardware : a PC which supports the USB function and has a USB outlet.

Software: Windows system which supports USB (Win 95 2.1 or Win 98).

Installation of USB module

1. Turn off the monitor and unplug the power cord.
2. Remove the cover of "USBAY" at the back of the monitor.
3. Insert USB module into the slot.
4. Fix the USB module to the monitor by screwing.
5. Plug-in the power cord and turn on the monitor.

To establish the USB connection

6. Insert CD-Rom
7. The two ends of USB cable attached are different. Plug-in the square end into the "upstream" outlet of the USB module.
8. Plug-in the other end into the USB outlet of the PC.
9. Windows recognises two new pieces of hardware
 - Philips USB hub
 - USB Human Interface Device

This last item is presented through a wizard.

Follow the "next" steps on screen (choose the recommended options) until installation has been finished

Usages Tips: Check device manager tab in system manager properties.


Human Interface devices

- Philips CustoMax (USB monitor control)


Universal serial bus controller

- Philips USB Hub


if

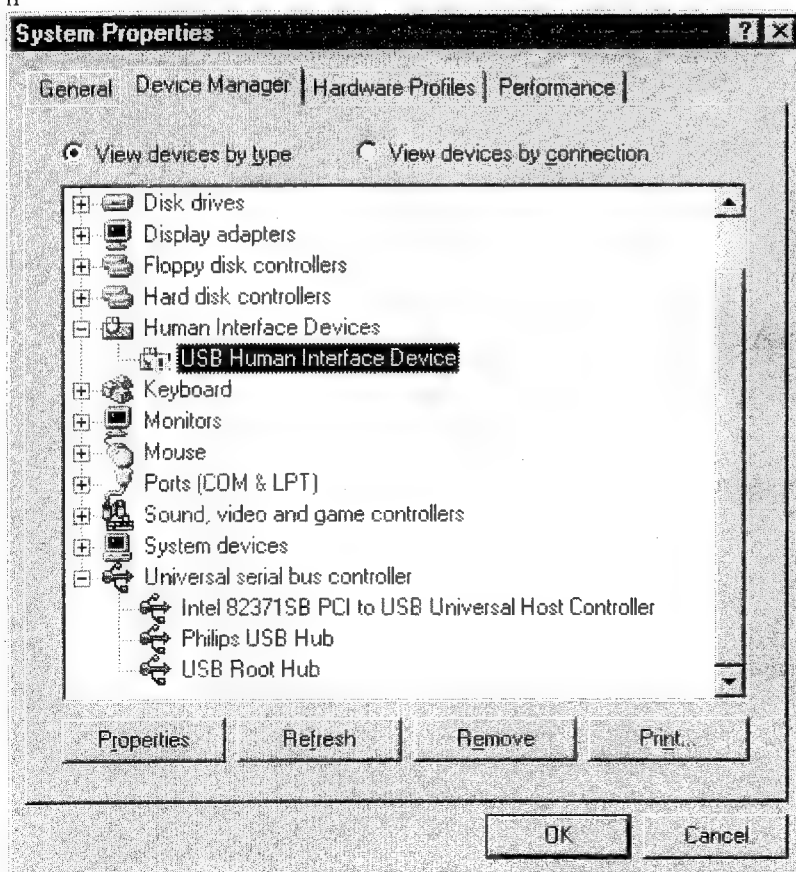


select properties

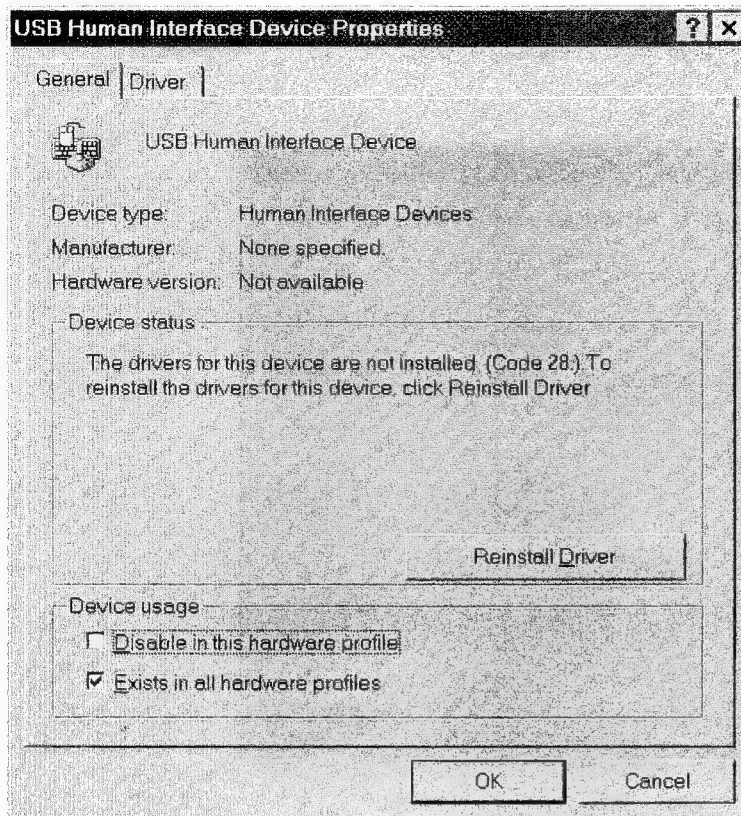


select driver

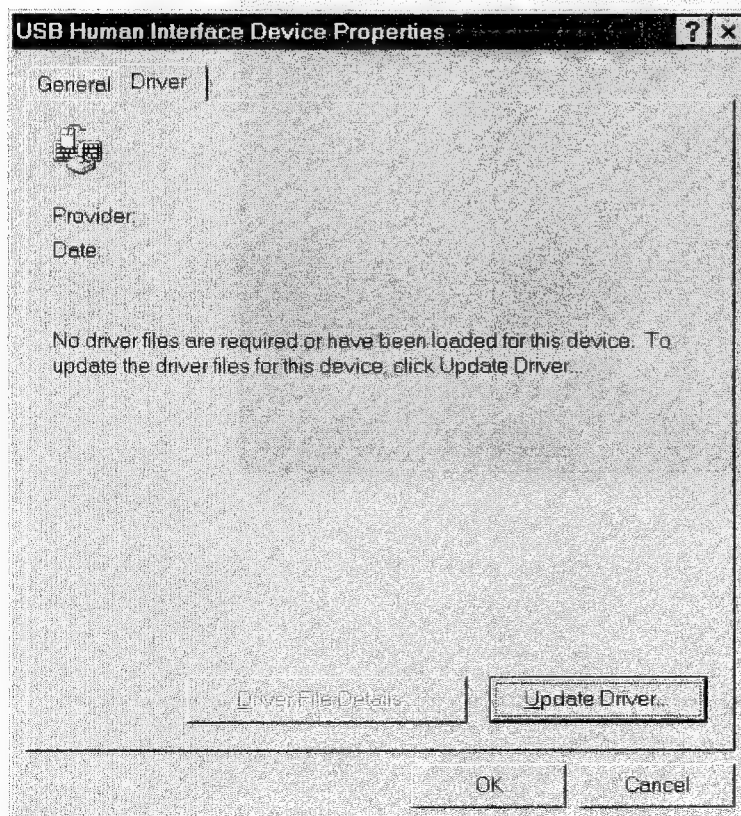


select Update Driver

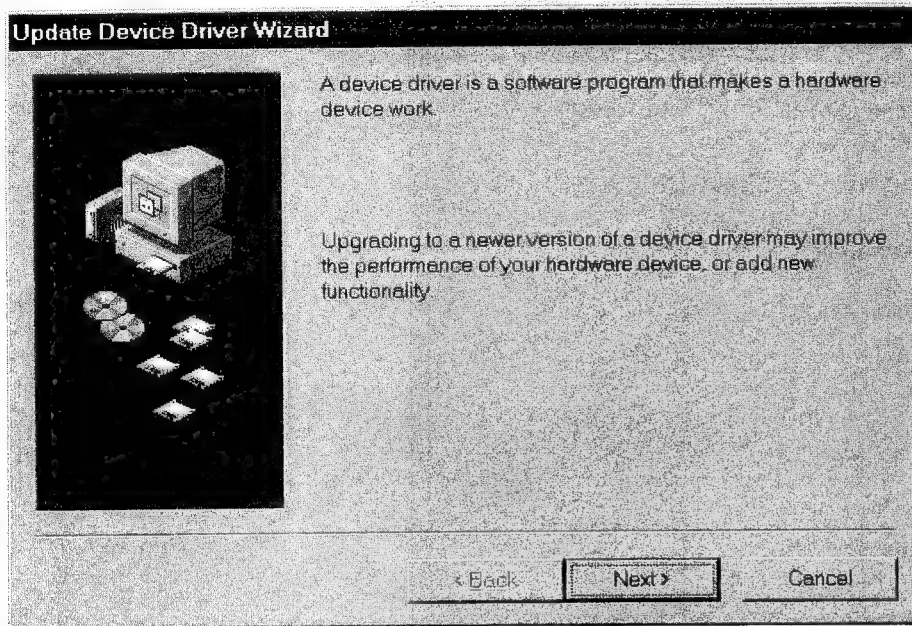


select next

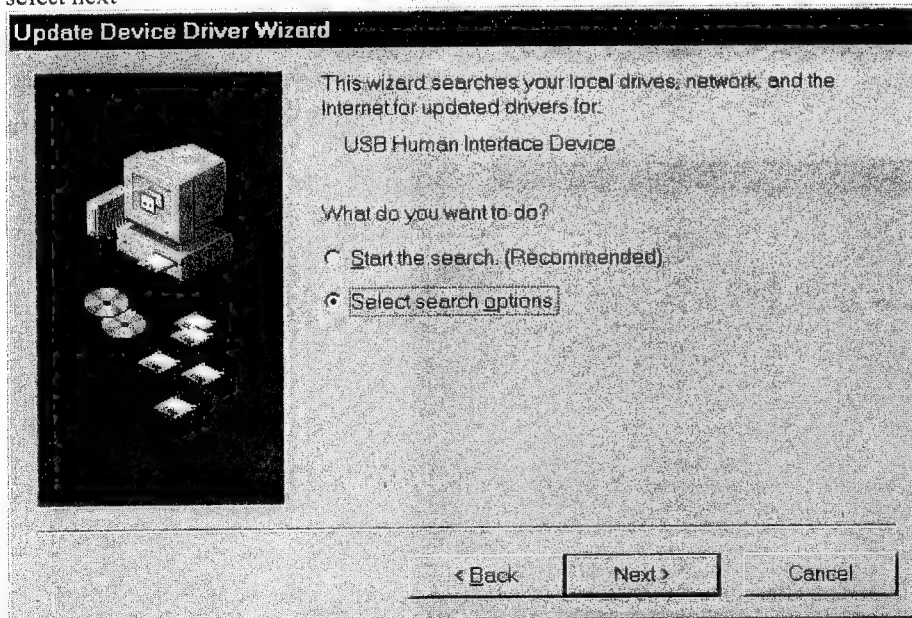

select next

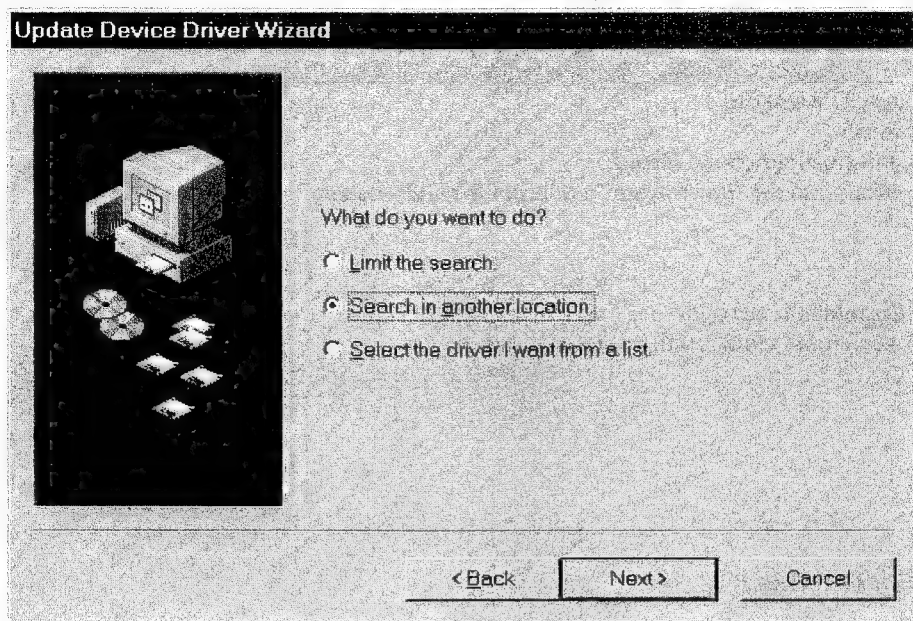

select next

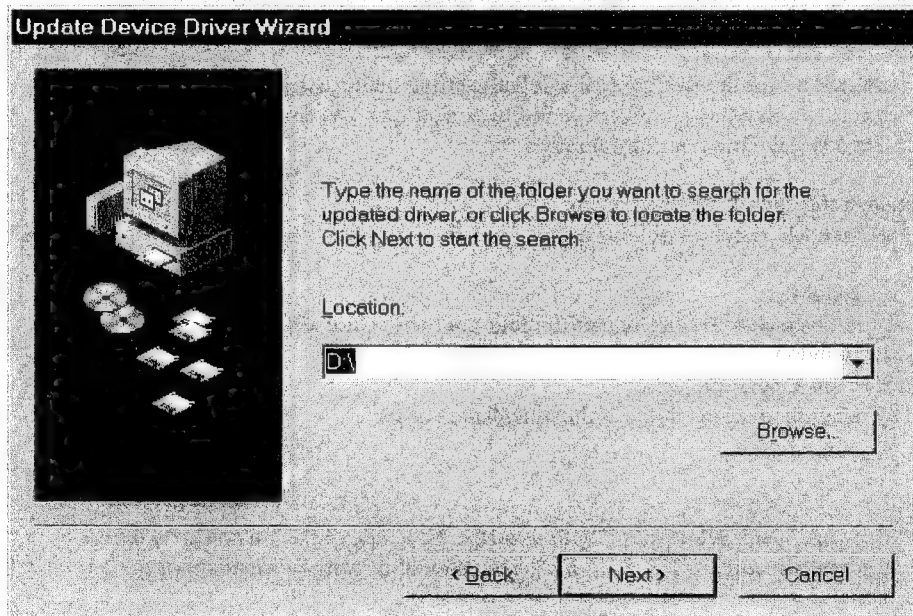

select next

then follow Wizard

Installation of CustMax

10. Double click on CD-Rom icon

11. Start the CustMax installation program: CustMax 3.exe

CustMax

Start CustMax using one of these four ways

1. Icon on the right-side of the taskbar
2. Tab in display properties
3. Start menu
4. ctrl-alt-c

There is no need to turn off the PC or monitor when establish USB connection.

Installation of CustoMax

1. Install the USB module and connect the USB cable between your monitor & PC.
 2. Put the CD-ROM in the CD-ROM drive.
 3. Click on the CD-ROM icon.
 4. Follow the installation instructions on the screen.
- Plug-in the desired peripherals into the "downstream" outlets of the USB module.

Usage tips

The shortcut to start-up CustoMax is ctrl + alt + c.
 If installed on a network server: the settings will be stored locally.

3. CUSTOMAX 3.0, HOW IT WORKS

CustoMax 3.0 for monitors is a software program for adjusting the audio and video, screen geometry, colour quality, image quality and hardware and software settings through USB. The start-up settings of CustoMax, Window Background and Language can be changed.

Note. When CustoMax is started up for the first time, the default setting being activated will be the 'Hardware & Software Settings'. Within the 'Hardware & Software Settings' you first will have to select the type of monitor you currently have in your configuration.

Default Enables you to change the default selected menu
 Usages tip: we recommend sound & vision as default menu.

Main procedures for using CustoMax:

1. To select a specific part of CustoMax, choose one of the four navigation buttons on the left side of the CustoMax window.
2. Select one of the buttons in the 'Operation' area.
3. Perform adjustments by using the buttons in the 'Adjustment' area of the CustoMax window.

Usage tips

To switch off, or on, the 'How to..' Help, select the '?' button, on the right side of the CustoMax window.
 To perform adjustments, the contrast and brightness of the screen should be fairly normal and user controllable.

*As soon as you finish the program, a DONE is automatically executed to store all settings. Also, before changing the main menu, a DONE is automatically executed.
 This minimizes the amount of times having to press DONE.*

4. CUSTOMAX, QUICK OVERVIEW

4.1. SOUND & VISION CONTROL

SOUND & VISION CONTROL

To adjust audio and video levels. The options to adjust are: Mute, Volume, Balance, Bass, Treble, Brightness, and Contrast.

MUTE

To switch off/on the sound.

THE CONTROL SOFTWARE FOR MONITORS THROUGH USB

VOLUME

To change the sound level.

BALANCE

To change the sound balance.

BASS

To change the bass level.

TREBLE

With the 'Treble' function you can change the treble level.

BRIGHTNESS

To change the brightness level.

CONTRAST

To change the contrast level.

CONTRAST PATTERN 1

To help you adjust the contrast level.

CONTRAST PATTERN 2

To help you adjust the contrast level.

ADJUSTMENT BUTTONS

To make adjustments to the audio and video levels.

DONE

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.

UNDO

To undo any changes and selections made in this particular part of CustoMax.

Usage Tips

- ù The Mute, Volume, Balance, Bass, Treble, Brightness, and Contrast buttons appear after Sound & Vision Control has been selected.
- ù With the left mouse button a selected contrast pattern can be toggled to the foreground or background.
- ù The Adjustments Buttons only appear after an audio or video button has been selected.
- ù The Done and Undo buttons appear after one of the five main navigation buttons on the left side of the CustoMax window has been selected.
- ù The Undo function will only be executed after an additional confirmation has been made in the pop-up window.

4.3. COLOUR QUALITY CONTROL

COLOUR QUALITY CONTROL

To adjust the colour temperature.

DEGAUSS

To demagnetise the monitor's screen surface.

FACTORY COLOUR PRESET

To reset the current user-defined colour will back to default. User preset 1 is reset to 9300 K, user preset 2 is reset to 6500 K, and user preset 3 is reset to 5500 K.

FACTORY PRESET 1

To set the colour temperature to 9300 K

FACTORY PRESET 2

To set the colour temperature to 6500 K

FACTORY PRESET 3

To set the colour temperature to 5500 K

USER DEFINABLE PRESETS 1

To change the colour temperature to a user-defined preset.

USER DEFINABLE PRESETS 2

To change the colour temperature to a user-defined preset.

USER DEFINABLE PRESETS 3

To change the colour temperature to a user-defined preset.

RED BACKGROUND COLOUR

To help you adjust the colour balance setting.

GREEN BACKGROUND COLOUR

To help you adjust the colour balance setting.

BLUE BACKGROUND COLOUR

To help you adjust the colour balance setting.

COMBINED BACKGROUND COLOUR

To help you adjust the colour balance setting.

WHITE BACKGROUND COLOUR

To help you adjust the colour balance setting.

COLOUR TRIANGLE

To increase or decrease the proportion of each of the colours Red, Green or Blue.

DONE

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.

UNDO

To undo any changes and selections made in this particular part of CustoMax.

Usage Tips

ù The Degauss function is available under Screen Geometry Control, Colour Quality Control and Image Quality Control.

ù The number of available presets depends on the type of monitor you have selected in the Hardware & Software Settings part of CustoMax.

ù The specific colour temperatures in the three Factory Presets cannot be changed.

ù Adjustments to the colour temperature settings can only be made after first selecting one of the three user presets.

ù To undo the reset to factory default, and to change back to the last defined user preset: Press Undo.

The Factory Colour Preset function will immediately be executed, but can be changed back to the last defined user preset by selecting Undo.

ù Move a Draggable Marker in the Colour Triangle, in the Adjustment area of the CustoMax window, to a new position on its axis. Alternatively, drag the central point of the triangle to a new position, or click directly on the new position in the triangle.

HARDWARE & SOFTWARE SETTINGS**HARDWARE & SOFTWARE SETTINGS**

To influence the behaviour of your monitor.

THE CONTROL SOFTWARE FOR MONITORS THROUGH USB

HARDWARE & SOFTWARE SETTINGS

To influence the behaviour of your monitor.

POWER SAVER

To reduce monitor power consumption

START-UP' function

To activate or to select the default Navigation setting at start-up. The options are: 'Sound & Vision', 'Geometry', 'Colour Quality', 'Image Quality', or 'Hard- & Software'.

CUSTOMAX WINDOW BACKGROUND

To select a different CustoMax window background. The options are 'Water', 'Fire', 'Air', 'Earth', 'Glas', 'Leave', 'Flowers', 'Monitor housing', 'PCB', 'Droodle' 'Solid Background 1', 'Solid Background 2'.

LANGUAGE

To change to another language. The options are: 'UK English', 'US English', 'Deutsch', 'Français', 'Italiano' and 'Español'.

MONITOR TYPE

To select the present type of monitor. The options are: '107', '109', and '201B'.

HARDWARE & SOFTWARE SETTINGS DISPLAY

Provides information on the current 'Hardware & Software Settings'

DONE

To save any changes and selections made before closing and returning to the display of the five main navigation and Help buttons.

UNDO

To undo any changes and selections made in this particular part of CustoMax.

Usage Tips

- ù The Power Saver function will be executed after a predetermined period of time, during which the monitor has not been used.
- ù The new Navigation default at Start-up will be executed after you have restarted CustoMax.
- ù The CustoMax Window Background will be changed immediately after a Selection has been made.
- ù The Language will be changed immediately after a Selection has been made.
- ù Options relating to the type of monitor selected will be changed immediately after a Selection has been made.
- ù The displayed information cannot be manipulated in the area of display.

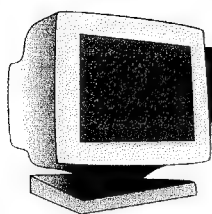


TABLE OF CONTENTS

GETTING STARTED

Introduction	1
Safety	1
Description of Controls	2-3
Setting Up Guide	Foldout

HOW TO USE THE ON SCREEN DISPLAY

MAIN CONTROLS WINDOW

Brightness	4
Contrast	4
Degauss	5
Volume	5

SCREEN SIZE & POSITION WINDOW

Full Size	6
Horizontal Position	6
Horizontal Size	7
Vertical Position	7
Vertical Size	7

COLOR TEMPERATURE WINDOW

9300 K CAD/CAM	8
6500 K DTP	8
5500 K Photo Retouch	8
User Presets	9

SPECIAL CONTROLS WINDOW

Language	10
Advanced Controls / Corner Correction	10
Advanced Controls / Vertical Linearity	11
Advanced Controls / Moire	11

Advanced Controls / Rotary Default	12
Advanced Controls / Power Saving	12
OSD Controls	13
Video Input	13
AUDIO CONTROLS WINDOW	
Mute	14
Bass	14
Treble	14
Balance	14
GEOMETRY CONTROLS WINDOW	
Pincushion	15
Balanced Pincushion	15
Trapezoid	15
Parallelogram	15
Rotation	15
EXIT & RESET	16


ADDITIONAL INFORMATION

BNC & USB Set Ups	17
Audio Hook Ups & Power Saving Feature	18
Pin Assignment	19
Specifications	19
Index	19
Glossary	19
Troubleshooting	20
Warranty	21

OTHER LANGUAGE VERSIONS

FRENCH (FRANCAIS)	22
SPANISH (ESPAÑOL)	44

INTRODUCTION AND SAFETY

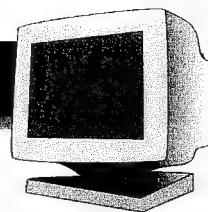

Introduction

The Philips Brilliance 109 color monitor displays sharp and brilliant images of text and graphics with a maximum resolution of 1600x1200 pixels. It is optimal for Windows, CAD / CAM / CAE, desktop publishing, spread sheets, multi-media, and any other application that demands a large screen size and high resolutions.

The monitor automatically scans horizontal frequencies from 30KHz to 95KHz, and vertical frequencies from 50Hz to 160Hz. With microprocessor-based digital-controlled circuitry and On-Screen Display (OSD) controls, the monitor can automatically adjust itself to the video card's scanning frequency and displays an image with the precise parameters you desire.

Features

- An anti-glare, anti-static, and anti-reflection high-contrast screen coating eliminates any bad effects caused by room light reflecting on and dust attracted to the screen's surface.
- With the Color Adjustment feature, you can easily choose different preset color temperatures or set your own customized color parameters.
- The Image Tilt Adjustment feature corrects a rotated image. This correction minimizes the distortions caused by elements such as the Earth's magnetic field.
- The full-size feature expands the image on the monitor to fill the screen when used in factory preset modes.

- USB Bay at back of monitor is prepared for the Universal Serial Bus hub. You can easily and flexibly connect USB-designed devices – such as a mouse or keyboard – to the monitor for true Plug-and-Play function. USB hub shipped separately.

- Green Design – including automatic power saving function (NUTEK) and low-emission compliance (TCO '95) – shows your commitment to the environment.

- DDC1/DDC2B allows communication between the monitor and the PC for optimal video configuration.

- The Power Factor Correction feature improves the power factor and results in higher power-consumption efficiency.

- Moire Cancellation eliminates diffraction, a fringe pattern in the picture.

Note: Your monitor operates according to the VESA DDC level 1/2B. Only computers that support the same guidelines and operate at the same or a higher level can make use of this feature. If your computer does not support the relevant guidelines, you can still use your monitor and computer. However, you may need to manually specify the appropriate resolution in the computer.

As an Energy Star Partner, Philips has determined that this product meets the Energy Star guidelines for energy efficiency.



Contact us at our web site: <http://www.monitors.be.philips.com>

Safety precautions and maintenance

- Unplug the monitor, if you are not going to use it for an extended period of time.
- Unplug the monitor, if you need to clean it with a slightly damp cloth. Wiping the screen with a dry cloth is okay when the power is off. However, never use alcohol or ammonia-based liquids.
- Consult a service technician if the monitor does not operate normally when following the instructions in this manual.
- The back cover should be removed only by qualified service personnel.
- Keep the monitor out of direct sunlight and away from stoves or any other heat source.
- The top of the monitor is not a shelf. Remove any object that could fall into the vents or prevent proper cooling of the monitor's electronics.

- Keep the monitor dry. To avoid electric shock, do not expose it to rain or excessive moisture.

- Keep the monitor away from magnetic objects, such as speakers, electric motors, transformers, etc.

- When positioning the monitor, make sure the power plug and outlet are easily accessible.


End-of-life disposal

Your new monitor contains materials that can be recycled and reused. Specialized companies can recycle your product to increase the amount of reusable materials and to minimize the amount to be disposed of.


Please find out about the local regulations on how to dispose of your old monitor.

ENERGY STAR is a U.S. registered mark.


IBM, IBM PC, and Power PC are registered trademarks of International Business Machines Corporation.
Apple, Macintosh, Quadra, Performa, and Centris are registered trademarks of Apple Computer, Inc.

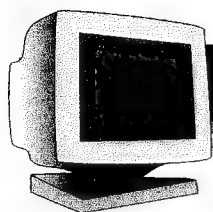


DESCRIPTION OF CONTROLS

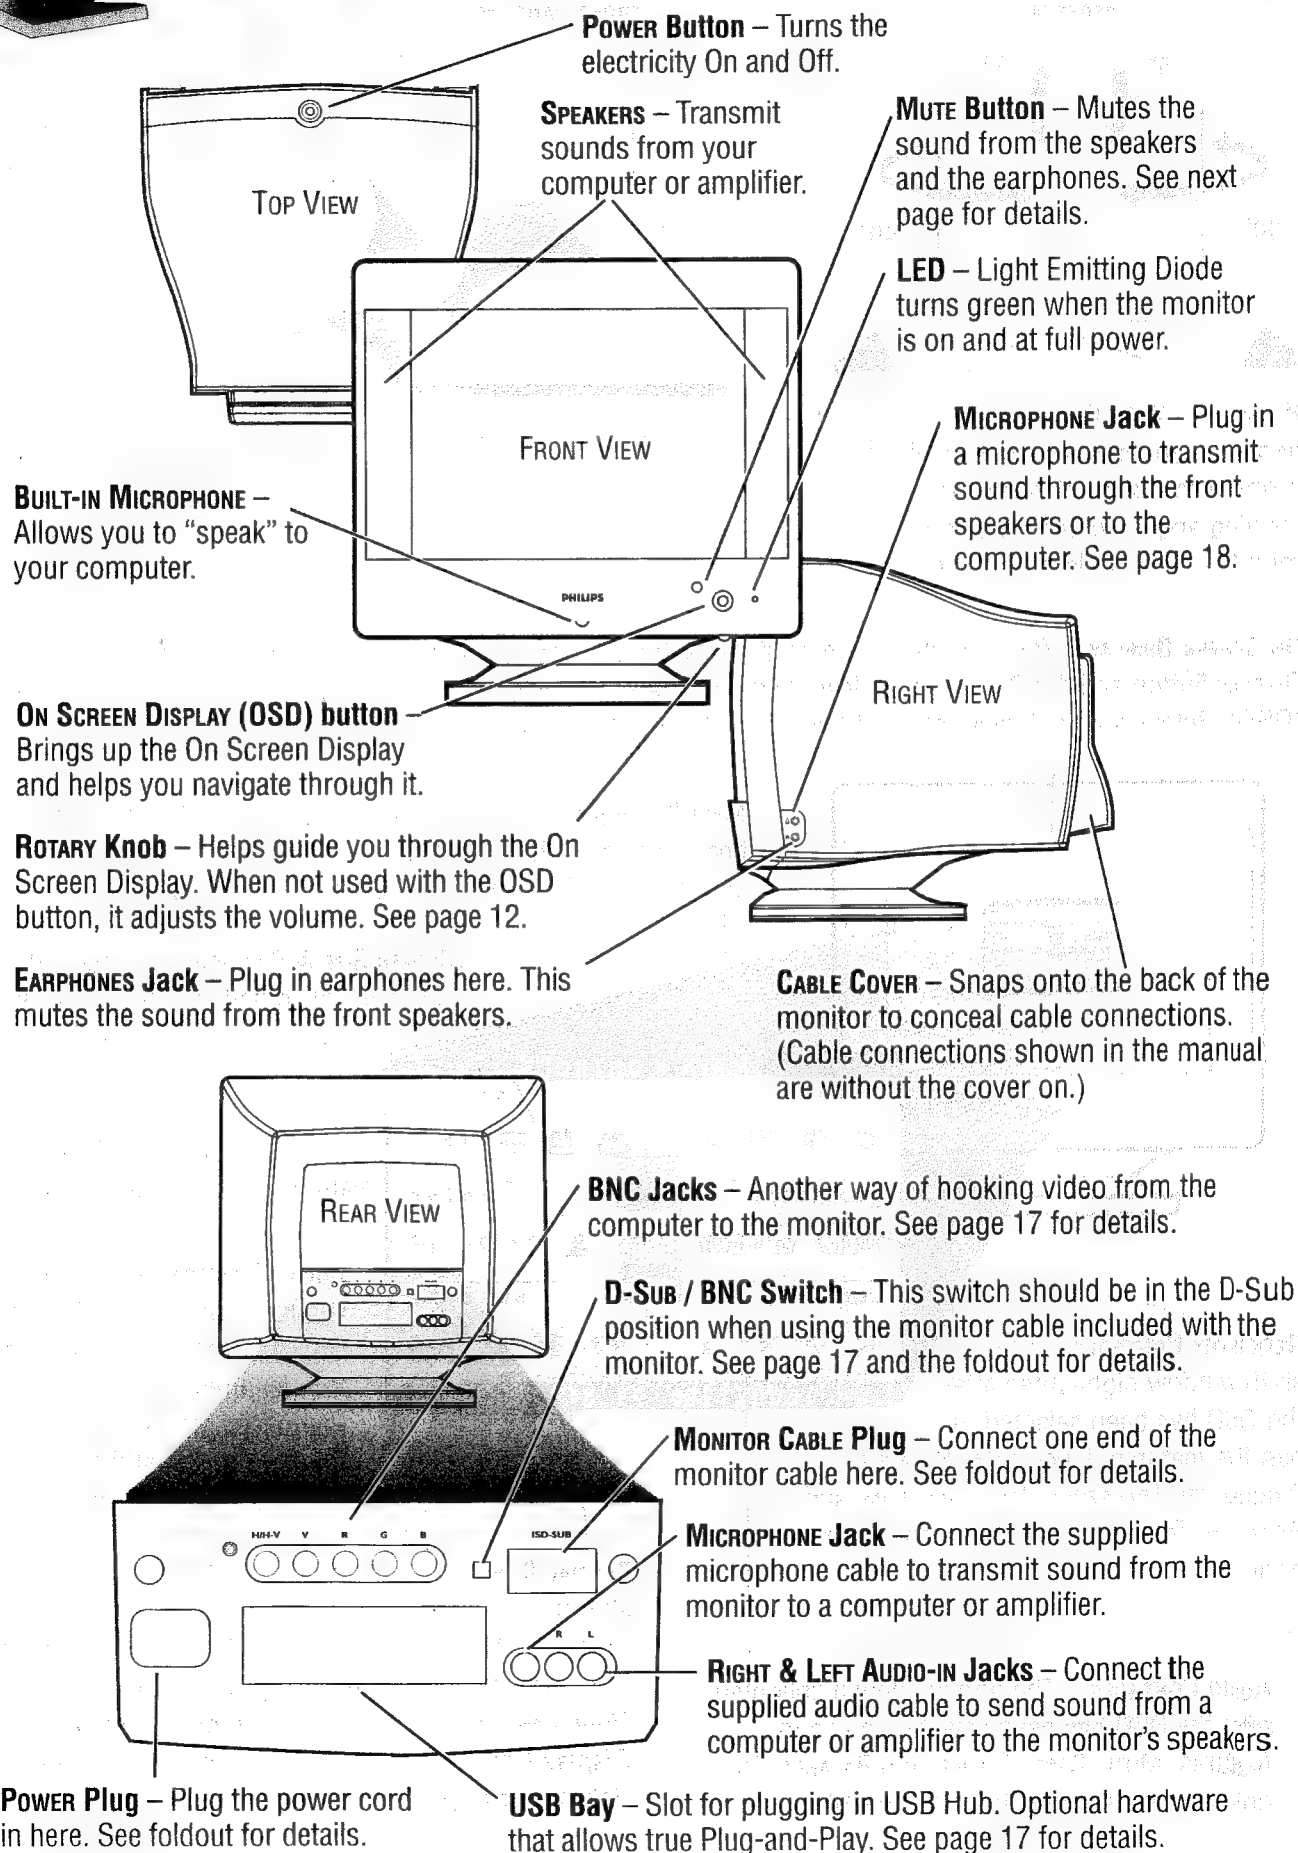

DESCRIPTION OF CONTROLS

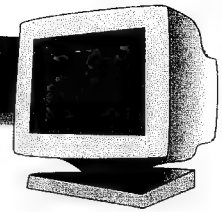


PEDESTAL

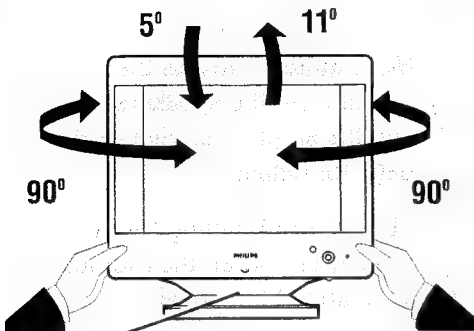


PEDESTAL – With the built-in pedestal, you can tilt and swivel the monitor to the most comfortable viewing angle. To best use your monitor, always place it at eye level.

FRONT-PANEL MUTE BUTTON

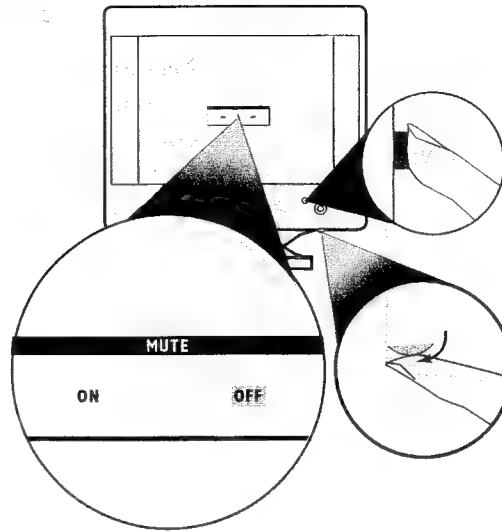

USING THE FRONT-PANEL MUTE BUTTON – To turn the mute On and Off, first press the MUTE button. Next, turn the ROTARY knob to highlight either On or Off. Then, press the MUTE button again. *For another way to mute the sound, see page 14.*

ON SCREEN DISPLAY – Your monitor is preset at the factory. However, you can adjust it using the ON SCREEN DISPLAY button and the ROTARY knob described on page 2. The way to do so is through the On Screen Display (OSD). Below is a brief description of the six On Screen Display windows.

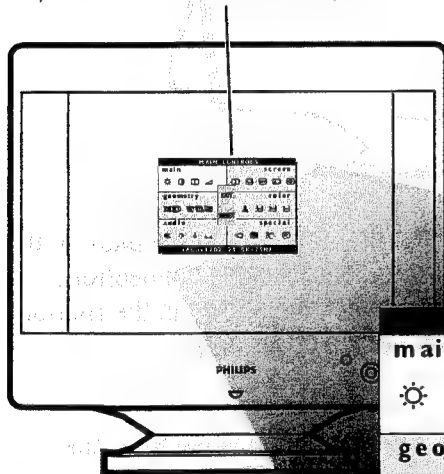

MAIN CONTROLS – The first window highlighted after the OSD has been selected. It has four features: BRIGHTNESS, CONTRAST, DEGAUSS, and VOLUME. To adjust these features, turn to pages 4 - 5.


SCREEN SIZE & POSITION – The second window highlighted after the OSD has been selected. It has five features: FULL SIZE, HORIZONTAL POSITION, HORIZONTAL SIZE, VERTICAL POSITION, and VERTICAL SIZE. To adjust these features, turn to pages 6 - 8.

COLOR TEMPERATURE – The third window highlighted after the OSD has been selected. It has four features: CAD/CAM, DTP, PHOTO RETOUCH, and USER PRESETS. To adjust these features, turn to pages 8 - 9.

GEOMETRY CONTROLS – The sixth window highlighted after the OSD has been selected. It has five features: PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, and ROTATION. To adjust these features, turn to page 15.

AUDIO CONTROLS – The fifth window highlighted after the OSD has been selected. It has four features: MUTE, BASS, TREBLE, and BALANCE. To adjust these features, turn to page 14.

SPECIAL CONTROLS – The fourth window highlighted after the OSD has been selected. It has four features: LANGUAGE, ADVANCED CONTROLS, OSD CONTROLS, and VIDEO INPUT. To adjust these features, turn to pages 10 - 13. *Note: LANGUAGE allows you to change the On Screen Display from English to French, Spanish, German, or Italian. See page 10 for details.*

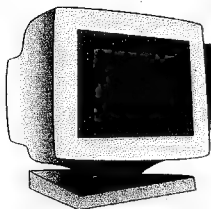


HOW TO USE THE ON SCREEN DISPLAY (OSD)

MAIN CONTROLS WINDOW


BRIGHTNESS

To adjust your screen's brightness, follow the steps below. Brightness is the overall intensity of the light coming from the screen. A 50% brightness level is recommended.

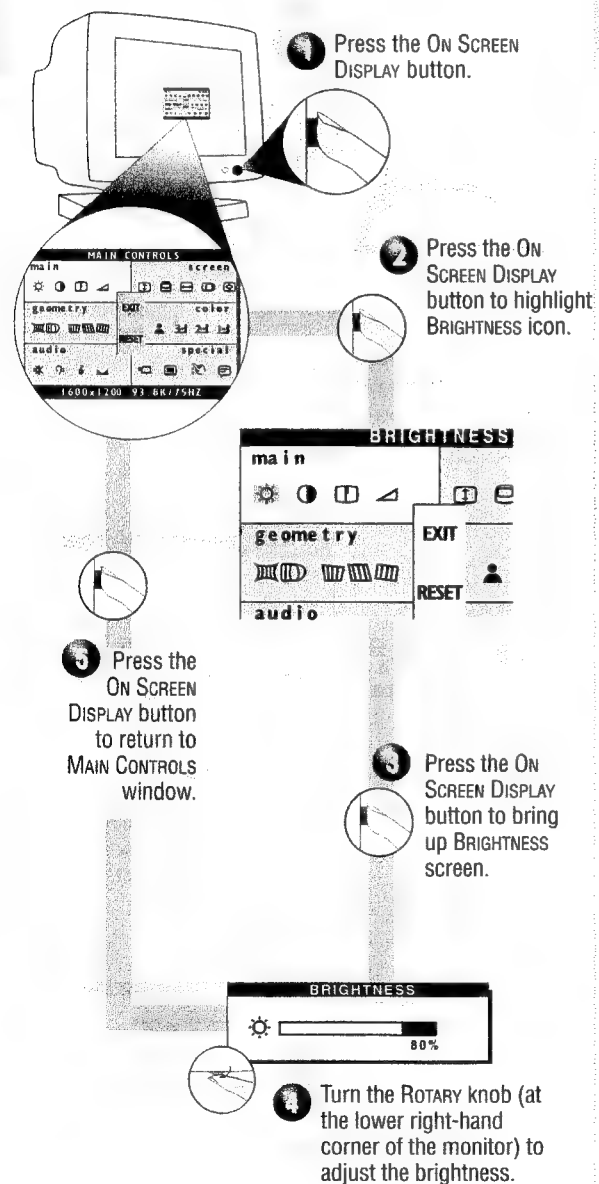

CONTRAST

To adjust your screen's contrast, follow the steps below. Contrast is the difference between the light and dark areas on the screen. A 100% contrast level is recommended.

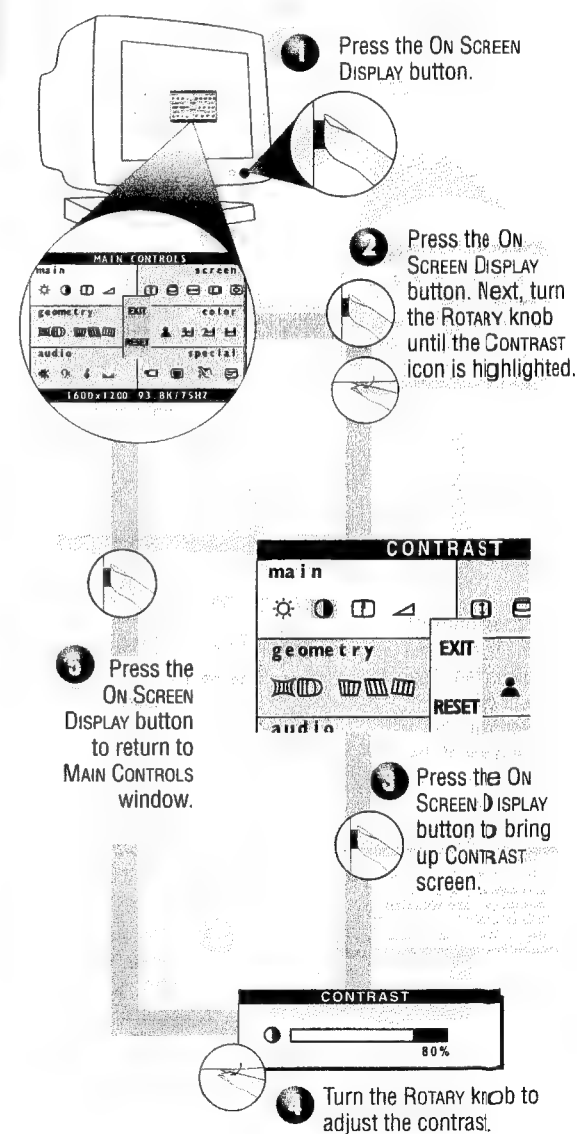

SMART HELP

After returning to MAIN CONTROLS ...


... to continue to CONTRAST, turn the ROTARY knob until CONTRAST icon is highlighted. Next, follow steps 3 - 5 under CONTRAST.
... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

SMART HELP

After returning to MAIN CONTROLS ...

... to continue to DEGAUSS, turn the ROTARY knob until DEGAUSS icon is highlighted. Next, follow steps 3 - 4 under DEGAUSS (on the next page).
... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

HOW TO USE THE ON SCREEN DISPLAY (OSD)

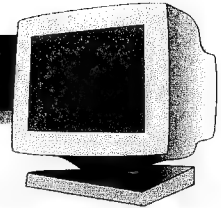

MAIN CONTROLS WINDOW

DEGAUSS

1 To degauss your screen, follow the steps below. Degaussing removes electromagnetic build up that may distort the color on your screen.

1 Press the On Screen Display button.

2 Press the On Screen Display button. Next, turn the Rotary knob until the DEGAUSS icon is highlighted.

For a moment, the screen will be distorted. Then it will return to normal. You will be back at the MAIN CONTROLS window.

3 Press the On Screen Display button to degauss your screen.

VOLUME

1 To adjust your monitor's volume, follow the steps below. The volume control adjusts the sound from the two front-mounted speakers or the earphones jack.

1 Press the On Screen Display button.

2 Press the On Screen Display button. Next, turn the Rotary knob until the VOLUME icon is highlighted.

3 Press the On Screen Display button to bring up VOLUME screen.

4 Press the On Screen Display button to return to MAIN CONTROLS window.

5 Turn the Rotary knob (at the lower right-hand corner of the monitor) to adjust the volume.

SMART HELP

After returning to MAIN CONTROLS...

... to continue to VOLUME, turn the ROTARY knob until VOLUME icon is highlighted. Next, follow steps 3 - 5 under VOLUME.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

SMART HELP

After returning to MAIN CONTROLS...

... to continue to the SCREEN SIZE & POSITION window, turn the ROTARY knob until EXIT is highlighted. Next, press the OSD button. Turn to the next page and follow steps 2 - 5 under Full Size.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

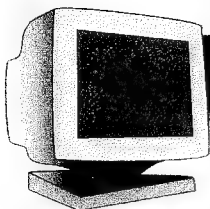


HOW TO USE THE ON SCREEN DISPLAY (OSD)


SCREEN SIZE & POSITION WINDOW

FULL SIZE


 Full Size allows you to adjust the image on your screen to its maximum height and width. If nothing happens when you use this feature, the image is already at full size. You can use Full Size to both enable and disable this feature. *Note: Full Size only works with the monitor's factory presets.*

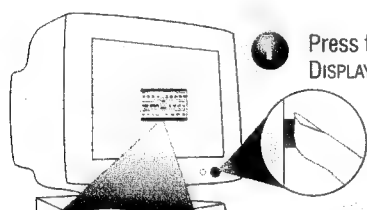

1 Press the On Screen Display button.

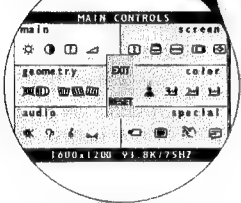


2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the On Screen Display button. The FULL SIZE icon is highlighted.

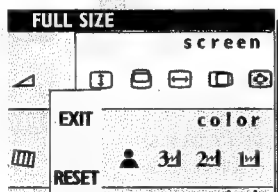

The image will automatically adjust to full size. You can now go on to your next adjustment.

3 Press the On Screen Display button.

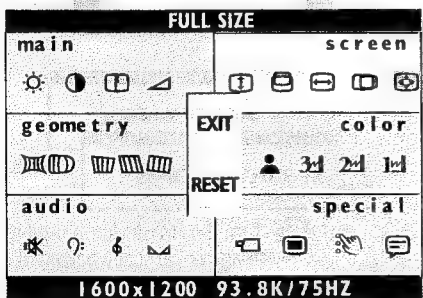


SMART HELP


After returning to SCREEN SIZE & POSITION ...

... to continue to HORIZONTAL POSITION, turn the ROTARY knob until HORIZONTAL POSITION is highlighted. Next, follow steps 3 - 5 under HORIZONTAL POSITION.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

HORIZONTAL POSITION


 Horizontal Position shifts the image on your screen either to the left or right. Use this feature if your image does not appear centered.

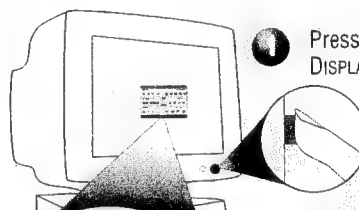

1 Press the On Screen Display button.

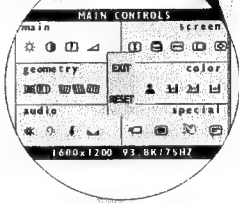

2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until HORIZONTAL POSITION is highlighted.

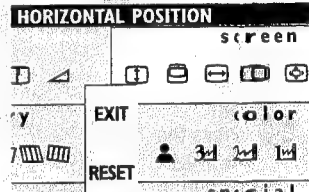

3 Press the On Screen Display button to return to SCREEN SIZE & POSITION.

3 Press the On Screen Display button to bring up HORIZONTAL Position screen.



4 Turn the ROTARY (the lower right-hand corner of the monitor) knob until the image is horizontally balanced.

SMART HELP


After returning to SCREEN SIZE & POSITION ...

... to continue to HORIZONTAL SIZE, turn the ROTARY knob until HORIZONTAL SIZE is highlighted. Next, follow steps 3 - 5 under HORIZONTAL SIZE (on the next page).

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)


HOW TO USE THE ON SCREEN DISPLAY (OSD)

SCREEN SIZE & POSITION WINDOW

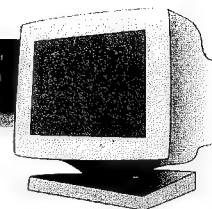


HORIZONTAL SIZE

Horizontal Size expands or contracts the image on your screen, pushing it out toward the left and right sides or pulling it in toward the center.

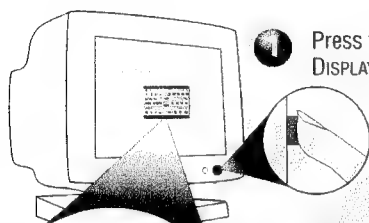


1 Press the ON SCREEN DISPLAY button.

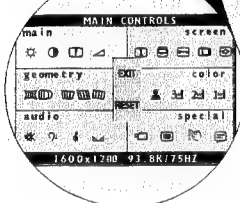

2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until HORIZONTAL Size is highlighted.



3 Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.

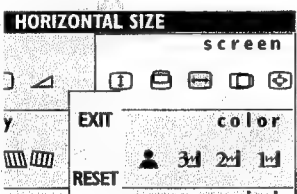


4 Press the ON SCREEN DISPLAY button to bring up HORIZONTAL Size screen.




5 Turn the ROTARY knob (at the lower right-hand corner of the monitor) until the image is the horizontal size you want.

VERTICAL POSITION VERTICAL SIZE

Vertical Position adjusts the image on your screen either up or down. Use this feature if your image does not appear centered. Vertical Size expands or contracts the image on your screen, pushing it out toward the top and bottom sides or pulling it in toward the center.

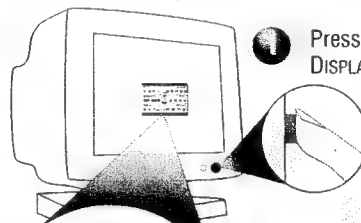


1 Press the ON SCREEN DISPLAY button.

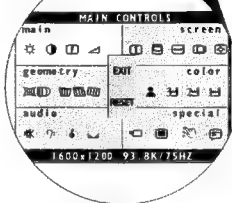


2 Turn the ROTARY knob until the SCREEN SIZE & POSITION window is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until VERTICAL POSITION or VERTICAL Size is highlighted.



3 Press the ON SCREEN DISPLAY button to return to SCREEN SIZE & POSITION.

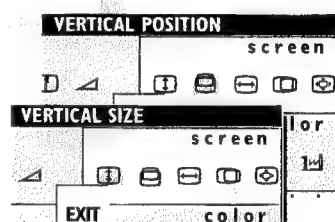

4 Press the ON SCREEN DISPLAY button to bring up VERTICAL POSITION or VERTICAL SIZE screen.

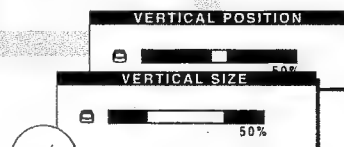

5 Turn the ROTARY knob until the image is vertically balanced or the vertical size you want.

SMART HELP

After returning to SCREEN SIZE & POSITION ...

... to continue to VERTICAL POSITION, turn the ROTARY knob until VERTICAL Position is highlighted. Next, follow steps 3 - 5 under VERTICAL POSITION.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

SMART HELP

After returning to SCREEN SIZE & POSITION ...

... to continue to GEOMETRY WINDOW, turn the ROTARY knob until Exit is highlighted. Next, press the OSD button. Then follow steps 2a - 2c under GEOMETRY WINDOW on the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

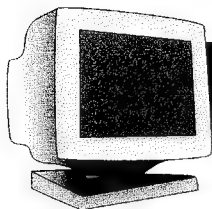


HOW TO USE THE ON SCREEN DISPLAY (OSD)

COLOR TEMPERATURE WINDOW

**9300 K CAD/CAM / 6500 K DTP
5500 K PHOTO RETOUCH**




Your monitor has three preset options you can choose from. One **1** for Computer Aided Design (CAD) work. Two **2** for Desktop Publishing (DTP). And three **3** for Photo Retouch. When you select an option, the computer automatically adjusts itself for that selection.

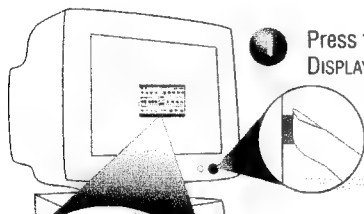

1 Press the On SCREEN DISPLAY button.




2 Turn the ROTARY knob until the COLOR window is highlighted. Then press the On SCREEN DISPLAY button.

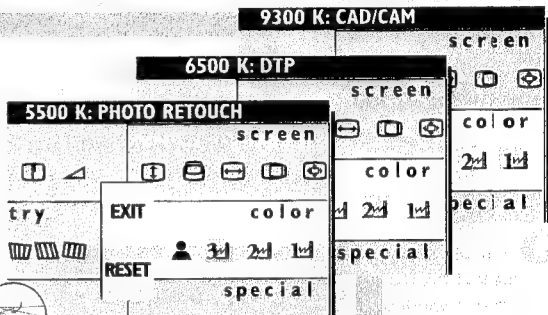

3 Turn the ROTARY knob until CAD/CAM, DTP, OR PHOTO RETOUCH is highlighted.

After each preset setting is saved, the on screen display automatically returns to the COLOR TEMPERATURE window. To save the next present setting, simply repeat the steps listed here.

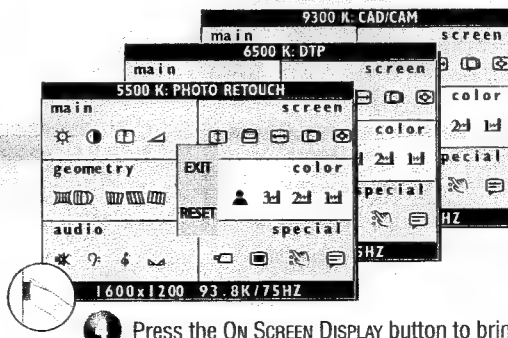

4 Press the On SCREEN DISPLAY button to bring up and save the preset settings for 9300 K CAD/CAM, 6500 K DTP, or 5500 K PHOTO RETOUCH.

SMART HELP


After returning to COLOR TEMPERATURE ...

... to continue to USER PRESETS, turn the ROTARY knob until USER PRESETS is highlighted. Next, follow steps 3 - 9 under USER PRESETS on the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)


HOW TO USE THE ON SCREEN DISPLAY (OSD)

COLOR TEMPERATURE WINDOW

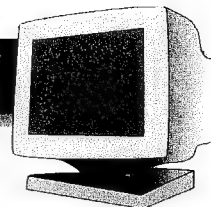


USER PRESETS

If you need to adjust any of the three preset options (CAD/CAM, DTP, or PHOTO RETOUCH), follow the steps below to modify the colors that appear on your screen. You can make individual adjustments to each of the preset options.

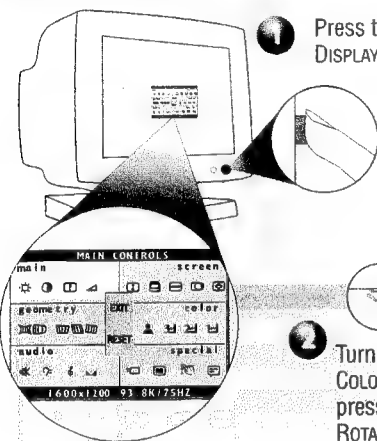

1 Press the On Screen Display button.


2 Turn the ROTARY knob until the COLOR window is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until User PRESETS icon is highlighted.

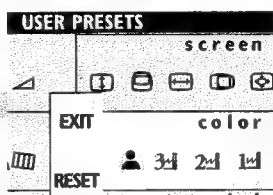

3 Press the On Screen Display button to bring up the User PRESETS window.




4 You will now be back at the User PRESETS window. See SMART HELP below for options.

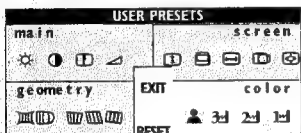


5 If necessary, turn the ROTARY knob until 1 of the User PRESETS is highlighted. Next, press the On Screen Display button.



6 To exit User PRESET 1, press the On Screen Display button. Next, turn the ROTARY knob until the EXIT box is highlighted. Then, press the On Screen Display button.



7 When done with green, press the On Screen Display button. BLUE will be highlighted.




8 When done with red, press the On Screen Display button. GREEN will be highlighted.



9 First, press the On Screen Display button. RED will be highlighted.



To adjust the blue, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the blue.



To adjust the green, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the green.



Next, to adjust the red, press the On Screen Display button again. Then, turn the ROTARY knob to increase or decrease the red.

SMART HELP

USER PRESETS


GO BACK

1 2

To exit User PRESETS (step 3 above), turn the ROTARY knob until the Go Back icon is highlighted. Go BACK appears by the icon when highlighted. Next, press the On Screen Display button. You will be back at the COLOR TEMPERATURE window.

After returning to COLOR TEMPERATURE

- ... to continue to USER PRESET 2 OR 3, repeat steps 3 through 8, selecting either User PRESET 2 or User PRESET 3.
- ... to continue to SPECIAL CONTROLS window, turn the ROTARY knob until Exit is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Now, follow steps 2 - 5 under SPECIAL CONTROLS on the next page.
- ... to exit the On Screen Display completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

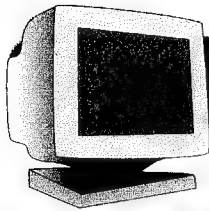

HOW TO USE THE ON SCREEN DISPLAY (OSD)

SPECIAL CONTROLS WINDOW

LANGUAGE

The ON SCREEN DISPLAY shows its settings in one of five languages. The default is English, but you can select French, Spanish, German, or Italian.

- Press the On Screen Display button.
- Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Then, press the On Screen Display button to highlight LANGUAGE icon.
- Press the On Screen Display button to confirm your selection and return to SPECIAL CONTROLS.
- Press the On Screen Display button to bring up LANGUAGE screen.
- Turn the ROTARY knob (at the lower right-hand corner of the monitor) until desired language is selected.

SMART HELP

After returning to SPECIAL CONTROLS ...

... to continue to **ADVANCED CONTROLS**, turn the ROTARY knob until **ADVANCED CONTROLS** icon is highlighted. Next, follow steps 3 - 6 under **ADVANCED CONTROLS**.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

ADVANCED CONTROLS CORNER CORRECTION

ADVANCED CONTROLS is a set of five adjustments. They include **CORNER CORRECTION**, **VERTICAL LINEARITY**, **MOIRE**, **ROTARY DEFAULT**, and **POWER SAVING**. **CORNER CORRECTION** "squares up" the corners of an image on the screen. To adjust your **CORNER CORRECTION**, follow the steps below.

- Press the On Screen Display button.
- Turn the ROTARY knob until **SPECIAL CONTROLS** is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the **ADVANCED CONTROLS** icon is highlighted.
- Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- Turn the ROTARY knob until desired corner correction is selected.
- Press the On Screen Display button to bring up **ADVANCED CONTROLS** screen.
- If necessary, turn the ROTARY knob until **CORNER CORRECTION** is highlighted. Then, press the On Screen Display button.


SMART HELP

After returning to ADVANCED CONTROLS ...

... to continue to **VERTICAL LINEARITY**, turn the ROTARY knob until **VERTICAL LINEARITY** icon is highlighted. Next, follow steps 4 - 6 under **VERTICAL LINEARITY** (on the next page).

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

HOW TO USE THE ON SCREEN DISPLAY (OSD)

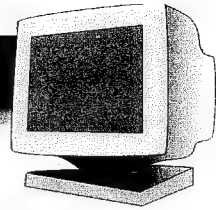

SPECIAL CONTROLS WINDOW

ADVANCED CONTROLS VERTICAL LINEARITY

ADVANCED CONTROLS is a set of five adjustments, including **VERTICAL LINEARITY**. Linearity is the degree with which the actual location of a pixel on the screen corresponds with its intended location. To adjust your **VERTICAL LINEARITY**, follow the steps below.

- 1 Press the **ON SCREEN DISPLAY** button.
- 2 Turn the **ROTARY** knob until **SPECIAL CONTROLS** is highlighted. Next, press the **ON SCREEN DISPLAY** button. Then, turn the **ROTARY** knob until the **ADVANCED CONTROLS** icon is highlighted.
- 3 Press the **ON SCREEN DISPLAY** button to add your adjustment and to bring up **ADVANCED CONTROLS** screen.
- 4 Press the **ON SCREEN DISPLAY** button to bring up **ADVANCED CONTROLS** screen.
- 5 Turn the **ROTARY** knob to adjust the vertical linearity.
- 6 Turn the **ROTARY** knob until **VERTICAL LINEARITY** is highlighted. Then, press the **ON SCREEN DISPLAY** button.

ADVANCED CONTROLS MOIRE

ADVANCED CONTROLS is a set of five adjustments, including **MOIRE**. **MOIRE** is a fringe pattern arising from the interference between two superimposed line patterns. To adjust your **MOIRE**, follow the steps below. *Note: Use only if necessary. By activating **MOIRE**, sharpness can be affected.*

- 1 Press the **ON SCREEN DISPLAY** button.
- 2 Turn the **ROTARY** knob until **SPECIAL CONTROLS** is highlighted. Next, press the **ON SCREEN DISPLAY** button. Then, turn the **ROTARY** knob until the **ADVANCED CONTROLS** icon is highlighted.
- 3 Press the **ON SCREEN DISPLAY** button to add your adjustment and to bring up **ADVANCED CONTROLS** screen. See **SMART HELP** to select **VERTICAL MOIRE** or turn **MOIRE** Off.
- 4 Turn the **ROTARY** knob to adjust the moire.
- 5 Press the **ON SCREEN DISPLAY** button to bring up **ADVANCED CONTROLS** screen.
- 6 Turn the **ROTARY** knob until **MOIRE** is highlighted. Then, press the **ON SCREEN DISPLAY** button.
- 7 Turn the **ROTARY** knob until **HORIZONTAL MOIRE** is highlighted. Then, press the **ON SCREEN DISPLAY** button.
- 8 Turn the **ROTARY** knob until **MOIRE** is highlighted. Then, press the **ON SCREEN DISPLAY** button.

SMART HELP

After returning to **ADVANCED CONTROLS**...

... to continue to **MOIRE**, turn the **ROTARY** knob until **MOIRE** icon is highlighted. Next, follow steps 4 - 7 under **MOIRE**.


... to exit completely, press the **OSD** button and hold for two seconds. (See page 16 for other exit options.)

SMART HELP

To select **VERTICAL MOIRE** or to turn **Moire** off, follow the steps above, selecting **VERTICAL MOIRE** or **Moire** off in step 5.

After returning to **ADVANCED CONTROLS**...

... to continue to **ROTARY DEFAULT**, turn the **ROTARY** knob until **ROTARY DEFAULT** icon is highlighted. Next, follow steps 4 - 6 under **ROTARY DEFAULT**. ... to exit completely, press the **OSD** button and hold for two seconds. (See page 16 for other exit options.)

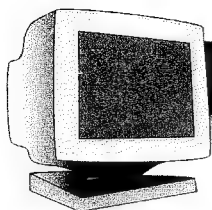


HOW TO USE THE ON SCREEN DISPLAY (OSD)

SPECIAL CONTROLS WINDOW

ADVANCED CONTROLS ROTARY DEFAULT

ROTARY DEFAULT allows you to pick the feature your ROTARY knob will default to when not used in adjusting your ON SCREEN DISPLAY. The normal default is volume. To select your ROTARY DEFAULT, follow the steps below.

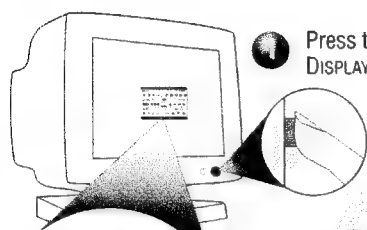


1 Press the ON SCREEN DISPLAY button.




2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the ADVANCED CONTROLS icon is highlighted.

3 Press the ON SCREEN DISPLAY button to add your adjustment and return to ADVANCED CONTROLS.

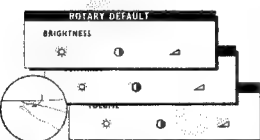

4 Turn the ROTARY knob to select BRIGHTNESS, CONTRAST, or VOLUME.

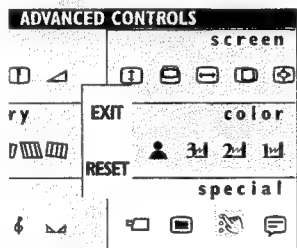

5 Press the ON SCREEN DISPLAY button to bring up ADVANCED CONTROLS screen.



6 Turn the ROTARY knob until ROTARY DEFAULT is highlighted. Then, press the ON SCREEN DISPLAY button.

SMART HELP


After returning to ADVANCED CONTROLS ...

... to continue to POWER SAVING, turn the ROTARY knob until POWER SAVING is highlighted. Next, follow steps 3 - 6 under POWER SAVING.


... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

ADVANCED CONTROLS POWER SAVING

POWER SAVING helps save energy when the monitor is on but not being used. After a preset time, the monitor will go blank if not being used. To select POWER SAVING, follow the steps below.

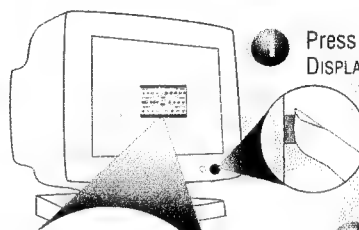


1 Press the ON SCREEN DISPLAY button.

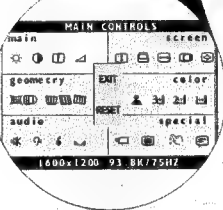


2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob until the ADVANCED CONTROLS icon is highlighted.

3 Press the ON SCREEN DISPLAY button to add your adjustment and return to ADVANCED CONTROLS.

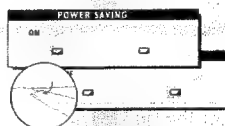

4 Turn the ROTARY knob to select POWER SAVING On or Off.

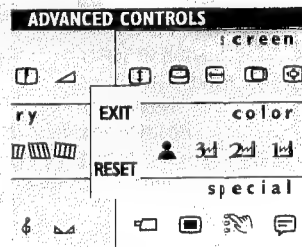

5 Press the ON SCREEN DISPLAY button to bring up ADVANCED CONTROLS screen.



6 Turn the ROTARY knob until POWER SAVING is highlighted. Then, press the ON SCREEN DISPLAY button.

SMART HELP


After returning to ADVANCED CONTROLS ...

... to continue to OSD CONTROLS, turn the ROTARY knob until Go Back is highlighted. Next, press the ON SCREEN DISPLAY button. Then, turn the ROTARY knob to OSD CONTROLS and go to the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

HOW TO USE THE ON SCREEN DISPLAY (OSD)

SPECIAL CONTROLS WINDOW

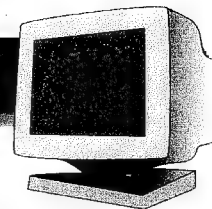

OSD CONTROLS

WITH OSD CONTROLS, you can set the time for the On Screen Display to time out, and change the vertical and horizontal position of the OSD on the monitor screen.

- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the OSD CONTROLS icon is highlighted.
- 3 Turn the ROTARY knob to select either VERTICAL or HORIZONTAL Position and repeat steps 3 - 6.
- 4 Press the On Screen Display button to add your change and return to OSD CONTROLS.
- 5 Press the On Screen Display button to bring up OSD CONTROLS screen.
- 6 Press the On Screen Display button to bring up TIMER screen.
- 7 Turn the ROTARY knob to select 05, 10, 25 seconds, or OFF.

SMART HELP

After returning to SPECIAL CONTROLS ...

... to continue to OSD CONTROLS, turn the ROTARY knob until OSD CONTROLS icon is highlighted. Then, follow steps 3 - 6 under OSD CONTROLS.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

VIDEO INPUT

VIDEO INPUT helps determine what you see on the screen. It is set at 0.7V(olts), but if the video input signal is different than the output signal, you may want to change it to 1.0V.


- 1 Press the On Screen Display button.
- 2 Turn the ROTARY knob until SPECIAL CONTROLS is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until the VIDEO INPUT icon is highlighted.
- 3 Press the On Screen Display button to save your selection and return to SPECIAL CONTROLS.
- 4 Press the On Screen Display button. The VIDEO INPUT screen appears.
- 5 Turn the ROTARY knob to select either 0.7V or 1.0V.

SMART HELP

After returning to OSD CONTROLS ...

to continue to AUDIO CONTROLS, turn the ROTARY knob until GO BACK is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob to AUDIO CONTROLS window and go to the next page.

... to exit completely, press the OSD button and hold for two seconds. (See page 16 for other exit options.)

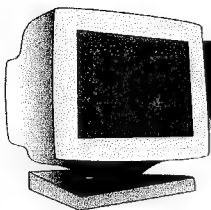


HOW TO USE THE ON SCREEN DISPLAY (OSD)

AUDIO CONTROLS WINDOW

MUTE, BASS, TREBLE, BALANCE




Follow the steps below to modify the sound that comes from your speakers. You can make individual adjustments to each of the preset options (MUTE, BASS, TREBLE, or BALANCE).

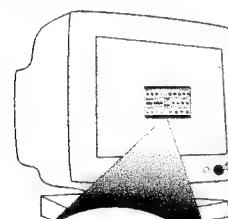

1 Press the On SCREEN DISPLAY button.



2a Turn the ROTARY knob until the AUDIO CONTROLS window is highlighted. Next, press the On SCREEN DISPLAY button. Then, if necessary, turn the ROTARY knob until MUTE icon is highlighted. If you have sound, MUTE OFF appears at the top of the on screen display.

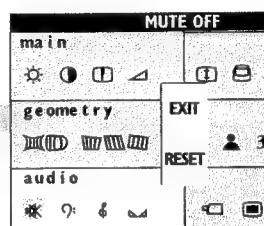

2b Press the On SCREEN DISPLAY button to mute the sound from your speakers and to return to AUDIO CONTROLS window. MUTE ON appears at the top of the on screen display.

MUTE ON

3c When done, press the On SCREEN DISPLAY button to save the change and return the screen to AUDIO CONTROLS.



3b Turn the ROTARY knob to adjust the balance.



3a To select BALANCE, turn the ROTARY knob until BALANCE icon is highlighted. Then, press the On SCREEN DISPLAY button.

4c When done, press the On SCREEN DISPLAY button to save the change and return the screen to AUDIO CONTROLS.



4b Turn the ROTARY knob to adjust the treble.

4a To select TREBLE, turn the ROTARY knob until TREBLE icon is highlighted. Next, press the On SCREEN DISPLAY button.

3c When done, press the On SCREEN DISPLAY button to save the change and return the screen to AUDIO CONTROLS.



3b Turn the ROTARY knob to adjust the bass.

3a To select BASS, turn the ROTARY knob until BASS icon is highlighted. Next, press the On SCREEN DISPLAY button.

SMART HELP

To exit AUDIO CONTROLS ...

... but continue on to GEOMETRY CONTROLS, turn the ROTARY knob until EXIT is highlighted. Next, press the On SCREEN DISPLAY button. Then go to step 2a on page 15.


... completely, press the On SCREEN DISPLAY button and hold for two seconds. The On Screen Display will disappear. All change will be saved.

To cancel Mute, repeat step 2b, or press the Mute button on the front of the monitor.

To make changes to one item, follow the steps for that item. Then follow the instructions To exit AUDIO CONTROLS

HOW TO USE THE ON SCREEN DISPLAY (OSD)


GEOMETRY CONTROLS WINDOW

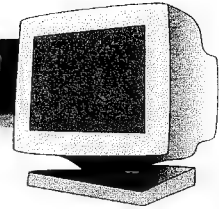


PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, ROTATION




Follow the steps below to adjust any of the five preset options (PINCUSHION, BALANCED PINCUSHION, TRAPEZOID, PARALLELOGRAM, or ROTATION). You can make individual adjustments to each of the preset options. *Note: use these features only when the picture is not square.*

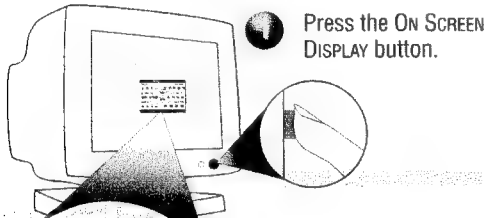


1 Press the On Screen Display button.

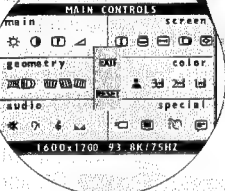

2a Turn the ROTARY knob until the GEOMETRY CONTROLS window is highlighted. Next, press the On Screen Display button. Then, if necessary, turn the ROTARY knob until PINCUSHION icon is highlighted.

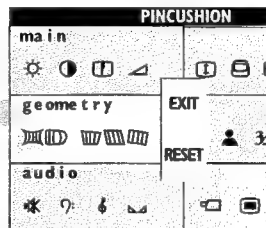

2b Press the On Screen Display button. Then, turn the ROTARY knob to adjust the pincushion.

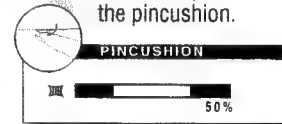

2c When done, press the On Screen Display button to save the change and return to GEOMETRY CONTROLS window.


3a To select BALANCED PINCUSHION, turn the ROTARY knob until BALANCED PINCUSHION is highlighted. Next, press the On Screen Display button.

3b To select PARALLELOGRAM or ROTATION, turn the ROTARY knob until PARALLELOGRAM or ROTATION icon is highlighted.

3c Next, press the On Screen Display button. Then follow steps 4b and 4c to make the appropriate changes.



4c When done, press the On Screen Display button. This will save the change and return the screen to GEOMETRY CONTROLS window.



4b Turn the ROTARY knob to adjust the trapezoid.

4a To select TRAPEZOID, turn the ROTARY knob until TRAPEZOID icon is highlighted. Next, press the On Screen Display button.

5c When done, press the On Screen Display button. This will save the change and return the screen to GEOMETRY CONTROLS.



5b Turn the ROTARY knob (on the lower right-hand corner of the monitor) to adjust the balanced pincushion.

SMART HELP


To exit GEOMETRY CONTROLS . . .

. . . but continue to another window, turn the ROTARY knob until EXIT is highlighted. Next, press the On Screen Display button. Then, turn the ROTARY knob until that window is highlighted. Now, press the On Screen Display button and follow the instructions for that window.

. . . completely, press the On Screen Display button and hold for two seconds. The On Screen Display will disappear. All changes will be saved.

To make changes to one item, follow the steps for that item. Then, follow "To exit GEOMETRY CONTROLS . . ."

To return to factory presets, see "To Reset an Individual Window" on page 16.

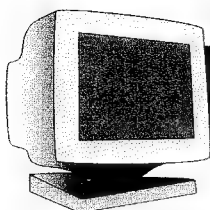


HOW TO USE THE ON SCREEN DISPLAY (OSD)

EXIT AND RESET


EXIT & RESET FROM A WINDOW

Choosing EXIT allows you to go to another window. Choosing RESET returns all the settings in that window to factory presets.


TO EXIT AN INDIVIDUAL WINDOW

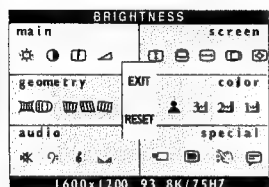

- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

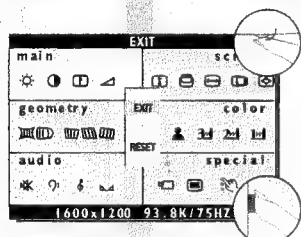

- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button.

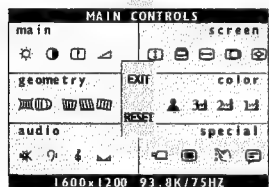


- 3 An entire window is now highlighted. Turn the ROTARY knob to another window and begin adjustments, or turn the knob until EXIT is highlighted as shown in EXIT FROM OSD (at right).


TO RESET AN INDIVIDUAL WINDOW



- 1 Make sure you are at a window. For example, MAIN CONTROLS. An icon will be highlighted. For example, BRIGHTNESS.

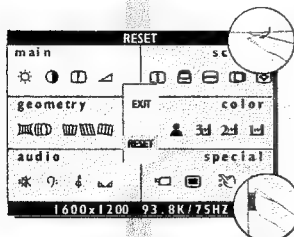

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

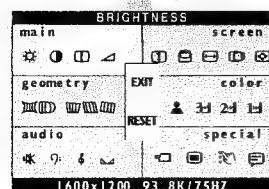


- 3 The first icon in the reset window is now highlighted. Turn the ROTARY knob to select another icon and begin adjustments, or turn the knob until EXIT is highlighted as shown above.


EXIT & RESET FROM THE ON SCREEN DISPLAY

Exiting from the On Screen Display removes the On Screen Display from the monitor screen. Resetting from the On Screen Display returns everything in all the windows to factory presets.

TO EXIT AN ENTIRE ON SCREEN DISPLAY

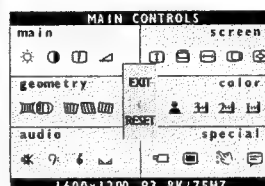


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

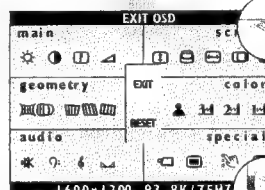


- 2 Turn the ROTARY knob until EXIT is highlighted. Next, press the ON SCREEN DISPLAY button. The On Screen Display will disappear.


RESET ENTIRE ON SCREEN DISPLAY

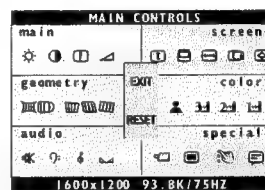


- 1 Make sure you have exited from all icons in a window. (See TO EXIT FROM AN INDIVIDUAL WINDOW.) For example, MAIN CONTROLS will be highlighted.

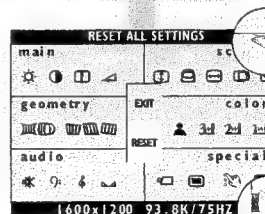

- 2 Turn the ROTARY knob until RESET is highlighted. Next, press the ON SCREEN DISPLAY button.

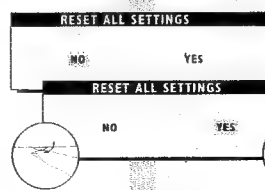


- 3 Turn the ROTARY knob to select NO or YES. Then press the ON SCREEN DISPLAY button.

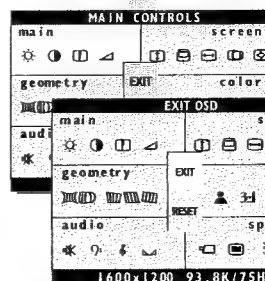

- 4 If No is selected, the On Screen Display appears and MAIN CONTROLS is highlighted. If Yes is selected, the EXIT OSD screen appears.

ADDITIONAL HOOK UP OPTIONS

BNC AND USB SET UPS

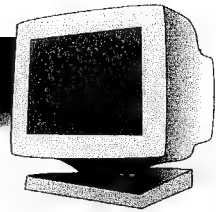

BNC CONNECTIONS

BNC is another way to connect the monitor to the computer. This connection requires an optional BNC cable. It can be connected to either a Macintosh- or IBM-compatible computer. For those who work with graphics or designs, this option may be better.

Note: Be sure to flip the D-Sub/BNC switch to BNC when using this connection.


For an IBM-compatible computer:

1. Turn off the computer.
2. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
3. Connect the power cable.
4. Turn on the monitor. Then turn on the computer.
5. If you have Windows '95, follow the "If you have Windows '95" steps on the Setting Up foldout sheet.

For a Macintosh-type computer:

1. Connect the Mac adapter to one end of the monitor cable.
2. Turn off the computer.
3. Connect the (optional) BNC monitor cable and set D-Sub/BNC switch to BNC.
4. Connect the power cable.
5. Turn on the monitor. Then turn on the computer.

D-Sub/BNC Switch

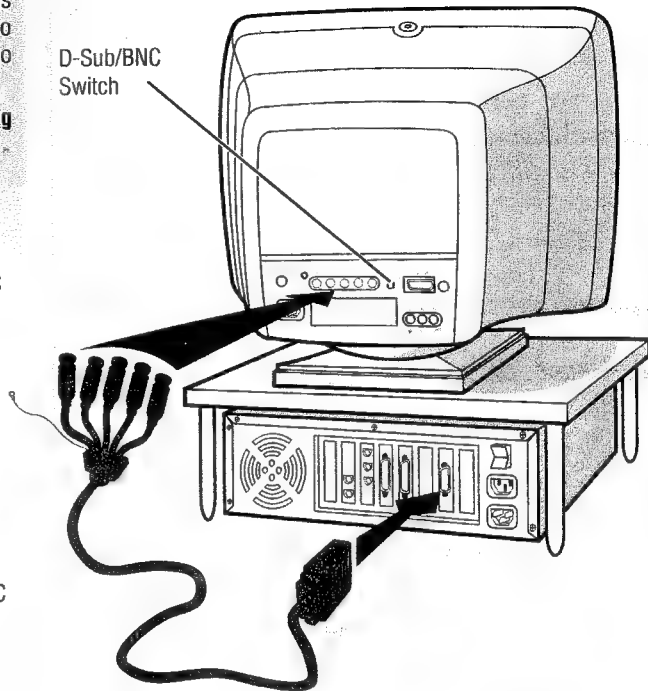

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.


USB CONNECTIONS

USB (Universal Serial Bus) is an innovation in connecting your IBM-compatible computer to your monitor. By using the USB, you will be able to connect your keyboard, mouse, printer, and other peripherals to your monitor instead of having to connect them to your computer. This will give you greater flexibility in setting up your system. Plus, you will have true plug-and-play capability. While the software is still being developed, Philips has included the hardware so you will be ready to take advantage of this next generation in computer development.


For an IBM-compatible Computer:

1. Turn off the computer.
2. Connect the (optional) USB Hub and cable to the computer and to the monitor. (Computer must have USB port.)
3. Connect the power cable.
4. Turn on the monitor. Then turn on the computer.
5. With the installation of the correct software, you will be able to connect specially-made peripherals to the monitor.

Note: USB Hub and cables sold separately. USB Bay exists in back of monitor.

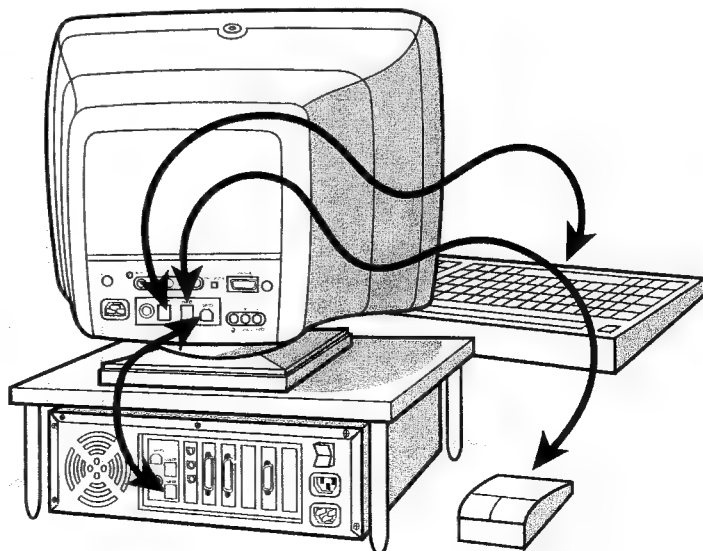

Refer to the "Setting Up your Philips monitor" foldout for a more detailed guide to setting up your monitor.

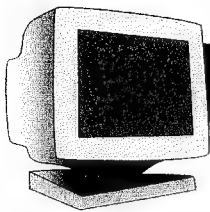

ADDITIONAL INFORMATION


AUDIO HOOK UPS AND POWER SAVING FEATURE

MICROPHONE AND EARPHONES JACKS

In addition to built-in speakers and microphone, you can connect this monitor to optional earphones and a microphone. The jacks are on the right side of the monitor.

To use the microphone with your computer or an amplifier, make the connections shown below.

Note: When the earphones are plugged in, there will be no sound from the built-in speakers.

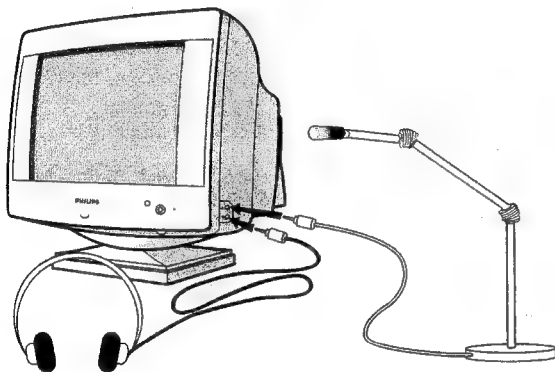


MICROPHONE AND AUDIO-IN JACKS

A microphone jack is on the back of the monitor. Use it and the supplied cable to connect your monitor to your computer or an amplifier (if either has the right type of jack).

On the back of this monitor there is also one set of left and right audio-in jacks. Use them and the supplied cable to connect your monitor to your computer or an amplifier (if either has the right type of jacks).

See page 2 for more detailed illustrations of the jacks' locations.

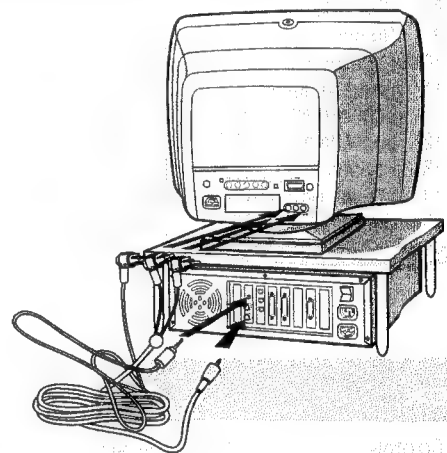

Refer to the owner's manuals included with your earphones and microphone for a detailed guide to setting up these items.

AUTOMATIC POWER SAVINGS & PRESET RESOLUTION MODES

If you have VESA's DPMS compliance display card or software installed in your PC, the monitor can automatically reduce its power consumption when not in use. If input from a keyboard, mouse, or other device is detected, the monitor automatically "wakes up." The table at left shows the power consumption and signalling of this automatic power-saving feature. To turn this feature on and off, see page 12. The table at right shows the 12 factory preset resolution modes. The maximum number of modes is 16. This leaves room for additions.

Power Management Definition						
VESA's mode	Video	H-sync	V-sync	Power used	Power saving(%)	LED color
ON	Active	Yes	Yes	<130W	0%	Green
Stand-by	Blanked	No	Yes	< 15W	87.5%	Yellow
Suspend	Blanked	Yes	No	< 15W	87.5%	Yellow
OFF	Blanked	No	No	< 5W	95.8%	Amber

This monitor is Energy Star compliant and power management compatible.




AS AN ENERGY STAR PARTNER, PHILIPS HAS DETERMINED THAT THIS PRODUCT MEETS THE ENERGY STAR GUIDELINES FOR ENERGY EFFICIENCY.

The proper operation of the function requires a computer with VESA DPMS power management capabilities. When used with a computer equipped with VESA DPMS, the monitor is Energy Star compliant.

Factory Preset Resolution Modes				
MODE	RESOLUTION	H. FREQ. (KHz)	V. FREQ. (Hz)	STANDARD
1	640 x 400	31.5	70	VGA
2	640 x 480	31.5	60	VGA
3	640 x 480	37.5	75	VESA/75
4	800 x 600	46.9	75	VESA/75
5	800 x 600	53.7	85	VESA/85
6	1024 x 768	60	75	VESA/75
7	1024 x 768	68.6	85	VESA/85
8	1152 x 870	69.0	75	MAC
9	1152 x 900	71.8	76	UN SPARC
10	1280 x 1024	80.0	75	VESA/75
11	1280 x 1024	91.0	85	VESA/85
12	1600 x 1200	93.8	75	VESA/75

ADDITIONAL INFORMATION


COMING TO TERMS WITH THIS BOOK

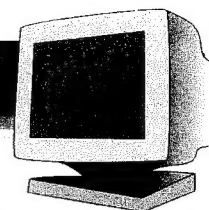

PIN ASSIGNMENT

The 15-pin D-sub connector (male) of the signal cable:

Pin No.	Assignment
1	Red video input
2	Green video input
3	Blue video input
4	Identical output - connected to pin 10
5	Self test
6	Red video ground
7	Green video ground
8	Blue video ground
9	No pin
10	Logic ground
11	Identical output - connected to pin 10
12	Serial data line (SDA)
13	H. Sync / H+V
14	V. Sync (VCLK for DDC)
15	Data clock line (SCL)



SPECIFICATIONS

GENERAL

CRT

Screen size	:19" (48.2 cm) flat & square
Viewable Image Size (VIS)	:17.9"
Focusing method	:Dynamic focus
Dot pitch	:0.22 mm (horizontal)
Phosphor	:P22 or equivalent, medium short persistence

Screen treatment	:Arasc
------------------	--------

Display area

Factory preset	:340 mm (H) x 255 mm (V)
Maximum usable	:364 mm (H) x 272.5 mm (V)

Scanning frequency

Horizontal (line)	:30-95kHz (AutoScan)
Vertical (frame)	:50-160 Hz (AutoScan)

Input power

:100-240 VAC, 50-60 Hz

Power consumption

:120 Watt normal, 130 Watt max.

Thermal dissipation

:341.3 BTU normal,
409.5 BTU maximum

Input signal

Video	:0.7 or 1.0 Vpp, 75 Ohm impedance
Sync	:Separate sync. TTL level Composite sync. TTL level

Pedestal

Tilt	:5° forward, 11° backward
Swivel	:90° left, 90° right

Physical

Unit dimension (WxHxD)	:485 x 490 x 515 mm (19.1" x 19.3" x 20.3")
Net weight	:24.5 kg (53.9 lbs.)

Operating conditions

Temperature	:0° C - 40° C
Humidity	:10% - 90%

Storage conditions

Temperature	:-40° C - 60° C
Humidity	:5% - 95%


INDEX

Audio Controls	3, 14	On Screen Display	2
Automatic Power Saving	18	OSD button	2
Balance	14	OSD Controls	13
Balanced Pincushion	15	Parallelogram	15
Bass	14	Pedestal	2
BNC jacks	2	Photo Retouch	8, 9
BNC set up	17	Pin Assignment	19
Brightness	4	Pincushion	15
Built-in microphone	2	Power button .Set Up Guide, 2	
Cable Cover	2	Power plug .Set Up Guide, 2	
CAD/CAM	8, 9	Power Saving	12
Color Temperature	3, 8-9	Reset	16
Contrast	4	Resolution Modes	18
Corner Correction	10	Right & Left Audio in jacks	2
Degauss	5	Rotary Default	12
Description of controls	2, 3	Rotary knob	2
D-Sub/BNC switch	2, 17	Rotation	15
DTP	8, 9	Safety precautions	1
Earphones jack	2, 17	Screen Size & Position	3, 6-8
End-of-life disposal	1	Speakers	2
Exit	16	Special Controls	3, 10-13
Features	1	Specifications	19
Full Size	6	Trapezoid	15
Geometry Controls	3, 15	Treble	14
Glossary	19	Troubleshooting	20, Set Up Guide
Hook Ups .Set Up Guide, 17		USB hub	2, 17
Horizontal Position	6	USB set up	17
Horizontal Size	7	User Presets	9
Language	10	Vertical Linearity	11
Main Controls	3, 4-5	Vertical Position	7
Maintenance	1	Vertical Size	7
Microphone jacks	2, 17	Video Input	13
Moire	11	Volume	5
Monitor cable plug	2	Warranty	21
Mute	14		
Mute button	2, 3		

GLOSSARY

Here are a few definitions that may help you.

Degauss	The process by which metal parts of the monitor are demagnetized in order to reduce screen distortion and color impurity.
D-Sub/ BNC	Two ways of connecting your monitor to your computer. Your monitor comes with a D-Sub cable. For work with a heavy emphasis on graphics, a BNC cable is recommended.
Geometry	A set of controls that allows you to adjust the alignment of the picture on the monitor screen. The goal is to "square up" the picture. This is done by adjusting such items as balanced pincushion, pincushion, parallelogram, rotation, and trapezoid.
Moire	A fringe pattern caused by the interference between two superimposed line patterns.
USB	Universal Serial Bus. A way to connect your computer, monitor, and peripherals for true Plug-and-Play functions.

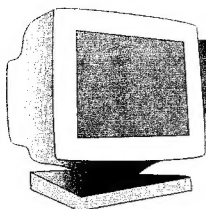

ADDITIONAL INFORMATION

WHAT TO DO IF SOMETHING ISN'T WORKING

TROUBLESHOOTING

Having trouble? Something not working? Before calling for help, try these suggestions.

HAVING THIS PROBLEM?

No Picture
(Power LED not lit)

CHECK THESE ITEMS

Make sure the Power cable is plugged in the wall and back of the monitor.
Power button on top of the monitor should be in the ON position.
Disconnect the monitor from the power outlet for about one minute.

No Picture
(Power LED is Amber
or Yellow in color)

Make sure the computer is turned on.
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.
Make sure the monitor cable is properly connected to your computer.
Check to see if the monitor cable has bent pins.
The Energy Saving Feature may be activated. See pages 12 and 18 for more detail.

No Picture
(Power LED is Green
in color)

Make the Brightness and Contrast controls are set correctly. See page 4 for details.
Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.
Make sure the monitor cable is properly connected to your computer.
Check to see if the monitor cable has bent pins.
Make sure the computer Power button is on.

Screen says



when you turn on
the monitor.

Make sure the D-Sub/BNC switch on the rear of the monitor is in the correct position. See pages 2 and 17.
Make sure the monitor cable is properly connected to your computer. See Setting Up foldout.
Check to see if the monitor cable has bent pins.
Make sure the computer is turned on

No Color

If you are using a non-VESA-DDC standard video card, consult your local Philips dealer or service organization to obtain an adapter.

Color appears blotchy

The picture may need degaussing. See page 5 for details.
Remove any nearby magnetic objects.
Face the monitor East for best picture quality.

Missing one or
more colors

Check user settings of Color Temperature. See pages 8 and 9 for details.
Make sure the monitor cable is properly connected to your computer.
Check to see if the monitor cable has bent pins.

Dim Picture

Adjust the Brightness and Contrast controls. See page 4 for details.
Check the Video Input selection and switch from 0.7 volts to 1.0 volts or 1.0 volts to 0.7 volts. See page 13.
Check your video card and the manual instructions for it. It may be a non-VESA-DDC Standard card.

Picture is too large
or too small

Adjust the Horizontal and/or Vertical Size. See pages 7 and 8 for details.

Edges of the picture
are not square

The geometry controls require adjusting. See page 15 for details.

Picture has a double
image

Eliminate the use of a video extension cable and/or video switch box.
Face the monitor East for best picture quality.

Picture is not sharp

Check to make sure Moire is switched off. See page 11.

No Audio

Make sure mute is not activated. See pages 2 and 14 for details.
Rotary Default may be set to Brightness or Contrast. See page 12 for details.
Make sure the Right & Left Audio in cable is securely plugged into the monitor and the audio source.
See pages 2 and 18 for details.

Unstable Picture

Increase your refresh rate. Consult your computer manual for details.

Windows '95 cannot
find your video card

Select "Super VGA" under STANDARD DISPLAY TYPES, or contact your video card manufacturer for the right drivers.

Setting Up your Philips monitor

Installation de votre moniteur Philips.

Configuración de su monitor Philips.

This foldout is designed to help you use your monitor as soon as possible. Refer to your owner's manual for detailed information. You may also contact us at our web site: <http://www.monitors.be.philips.com>


Ce dépliant est conçu pour vous aider à utiliser votre moniteur du plus vite possible. Consulter votre manuel d'utilisateur pour des informations détaillées. Vous pouvez aussi nous contacter sur notre site Web: <http://www.monitors.be.philips.com>

Esta hoja plegable está diseñada para ayudarle a usar su monitor tan pronto como sea posible. Consulte su manual si desea información detallada. También puede comunicarse con nosotros a través de nuestra página web: <http://www.monitors.be.philips.com>

To hook up your monitor to a Macintosh-type computer, follow the steps below. To hook up your monitor to an IBM-compatible computer, follow step 1, then turn over this foldout. In either case, before installing this monitor, please refer to the user's guide of your computer and video adapter to see if this equipment needs any additional setting.


Suivre les étapes suivantes pour connecter votre moniteur à un ordinateur du type Macintosh. Pour connecter votre moniteur à un ordinateur compatible IBM, suivre la première étape, puis tourner ce dépliant. En tout cas, avant l'installation de votre moniteur, veuillez vous référer au manuel d'utilisateur de votre ordinateur et carte vidéo pour voir si cet équipement a besoin d'installation supplémentaire.

Para conectar su monitor a un ordenador tipo Macintosh, siga los pasos que se presentan a continuación. Para conectar su monitor a un ordenador compatible con IBM, siga el paso 1, luego voltee esta página. En ambos casos, antes de instalar este monitor, consulte la guía del usuario de su ordenador y de su adaptador de vídeo, para

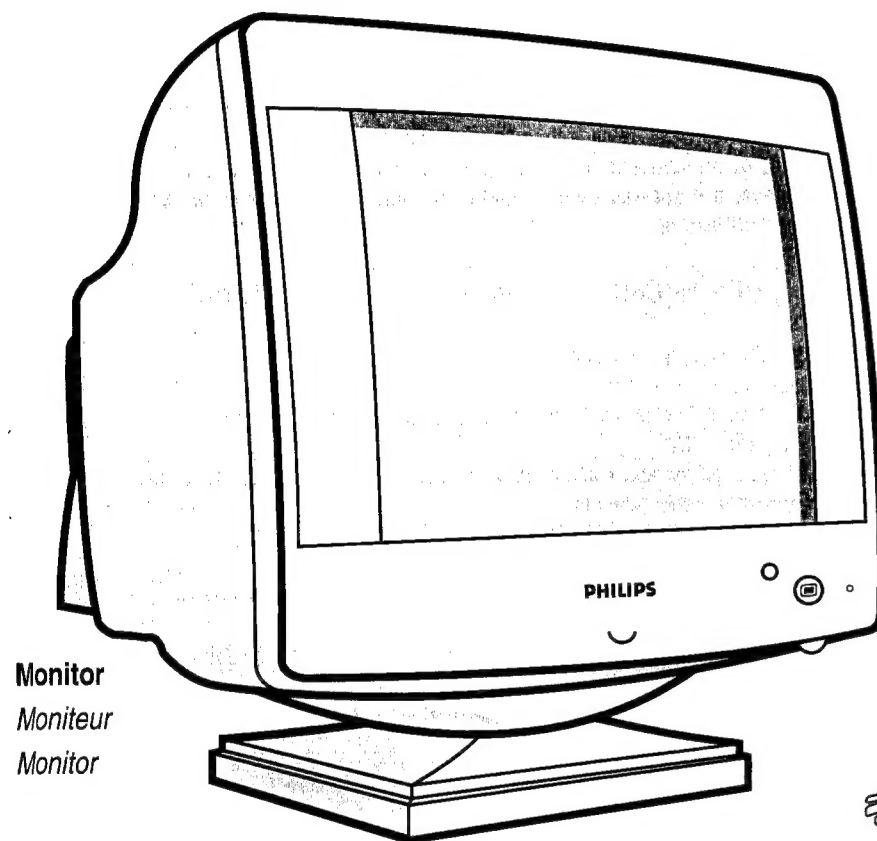


Monitor
Moniteur
Monitor


- 1** Unpack all the parts.
Déballer toutes les pièces.
Desembale todas las piezas.

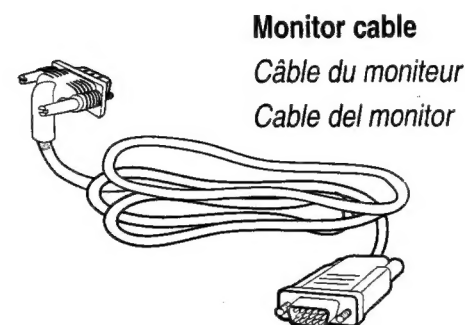

Monitor cable
Câble du moniteur
Cable del monitor




Macintosh adapter (optional)
Carte Macintosh (optionnelle)
Adaptador de Macintosh (opcional)

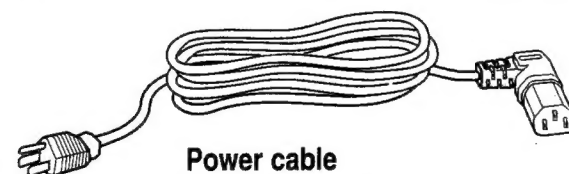


Power cable
(Appearance may vary.)
Câble de puissance (l'apparence varie)
Cable de energía (su aspecto puede variar)




Audio cable
Câble audio
Cable de audio

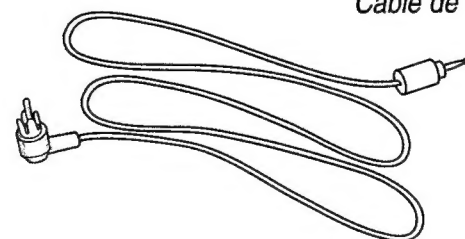

Microphone cable
Câble du microphone
Cable del micrófono

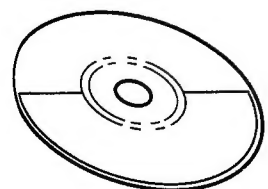


CD ROM or Floppy Disk
CD-ROM ou Floppy Disk
CD ROM or Floppy Disk

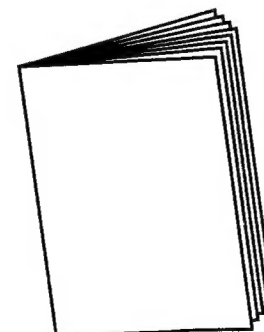

Owner's manual
Manuel d'utilisateur
Manual del propietario


- 2** Connect the special Mac adapter (May not be included.) to one end of the monitor cable.

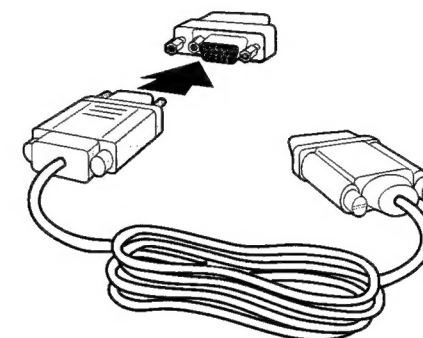

Connecter la carte spéciale Mac (pas toujours incluse) à une extrémité du câble du moniteur.

Conecte el adaptador especial de Mac (puede no estar incluido) a un extremo del cable del monitor.


- 3** Turn off the computer. Then connect the monitor cable.

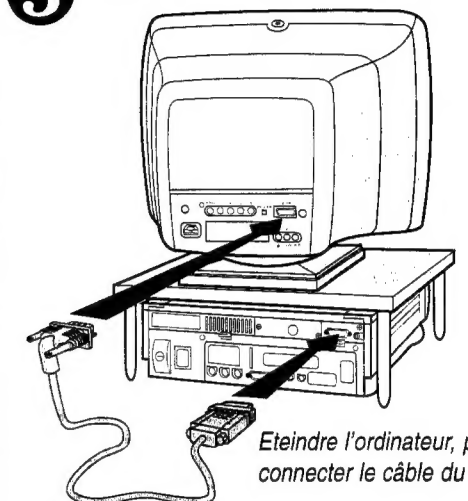

Eteindre l'ordinateur, puis connecter le câble du moniteur

Apague el ordenador. Luego conecte el cable del monitor.


- 4** Connect the power cable. Make sure the power plug and the wall socket are easily accessible.

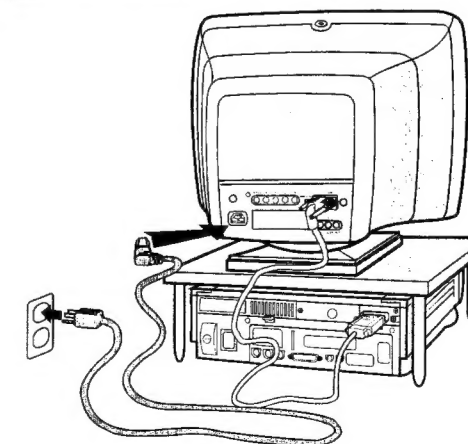

Connecter le câble de puissance. S'assurer que la fiche secteur et la prise murale soient facilement accessibles.

Conecte el cable de energía. Verifique que se pueda acceder fácilmente al tomacorriente y al enchufe de pared.

- 5** Turn on the monitor. Then turn on the computer.

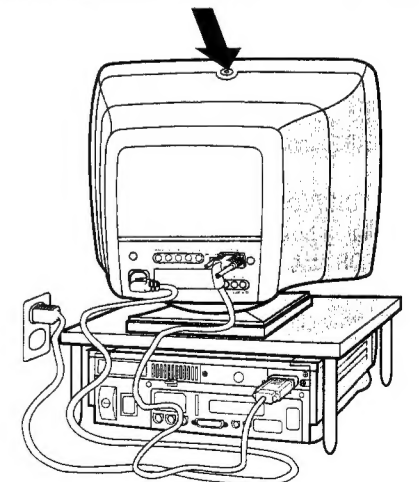

Allumer le moniteur, puis l'ordinateur.

Encienda el monitor. Luego encienda el ordenador.

Setting Up your Philips monitor

Installation de votre moniteur Philips.


Configuración de su monitor Philips.

IBM-compatible computer hookup continued from step 1 on other side.

Connecter l'ordinateur compatible IBM, suite de la première étape de l'autre côté.

Conexión del ordenador compatible con IBM (continuación del paso 1 del otro lado de la página).


2 Turn off the computer. Then connect the monitor cable.

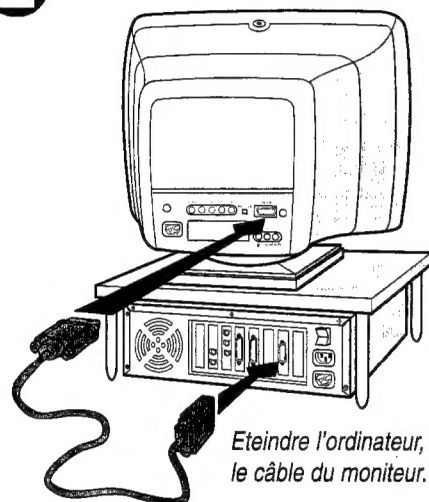

Eteindre l'ordinateur, puis connecter le câble du moniteur.

Apague el ordenador. Luego conecte el cable del monitor.


3 Connect the power cable. Make sure the power plug and the wall socket are easily accessible.

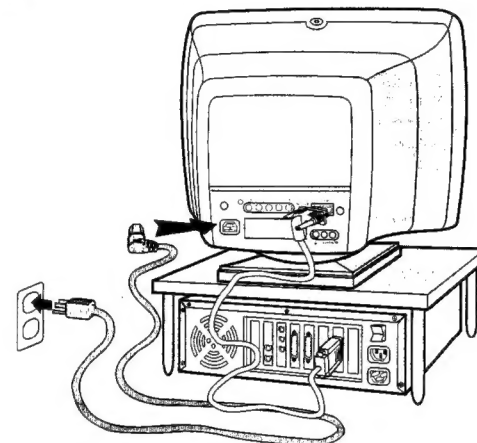

Connecter le câble de puissance. S'assurer que la fiche secteur et la prise murale soient facilement accessibles.

Conecte el cable de energía. Verifique que se pueda acceder fácilmente al tomacorriente y al enchufe de pared.

4 Turn on the monitor. Then turn on the computer.

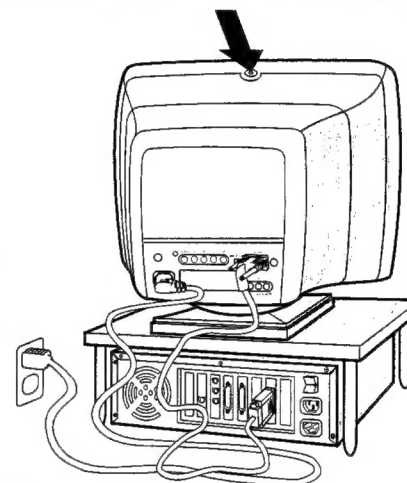

Allumer le moniteur, puis l'ordinateur.

Encienda el monitor. Luego encienda el ordenador.

WHAT TO DO IF YOUR MONITOR ISN'T WORKING

Make sure...

- ...the Power cable is plugged in the wall and the rear of the monitor.
- ...the Power button on top of the monitor should be in the ON position.
- ...the monitor cable is properly connected to the back of the monitor and the computer.
- ...to check to see if the monitor cable has bent pins.
- ...the D-Sub/BNC switch on the rear of the monitor is in the correct position.

See pages 2 and 17 of the owner's manual for details.

See page 20 of the owner's manual for troubleshooting tips.

For warranty questions, please see your owner's manual.

QUE FAIRE SI VOTRE MONITEUR NE MARCHE PAS

S'assurer...

- ...que le câble de puissance soit branché dans le mur et à l'arrière du moniteur.
- ...que le bouton Marche/Arrêt au dessus de votre moniteur soit sur MARCHE.
- ...que le câble du moniteur soit bien connecté à l'arrière du moniteur et de l'ordinateur.
- ...de vérifier que le câble du moniteur n'ait pas de fiches tordues.
- ...que l'interrupteur D-Sub/BNC à l'arrière du moniteur soit en position correcte.

Voir page 24 et 39 de votre manuel d'utilisateur pour plus de détails.

Voir page 42 du manuel d'utilisateur pour des conseils de dépannage.

Si vous avez des questions concernant la garantie, veuillez consulter votre manuel d'utilisateur.

¿QUÉ HACER SI SU MONITOR NO FUNCIONA?

Verifique...

- ...si el cable de energía está enchufado a la fuente de energía y a la parte posterior del monitor.
- ...si el botón de alimentación en la parte superior del monitor está en la posición ON.
- ...si el cable del monitor está debidamente conectado a la parte posterior del monitor y del ordenador.
- ...que las clavijas del cable del monitor no estén dobladas.
- ...que el interruptor D-Sub/BNC en la parte posterior del monitor esté en la posición correcta. Si desea más detalles, consulte las páginas 46 y 61 del manual del propietario.

En la página 64 del manual del propietario encontrará consejos sobre la localización de fallas.

Para consultas sobre la garantía, consulte el manual del propietario.

If you have Windows '95...

follow these steps to complete setting up your monitor.

- Start Windows '95 and install CD ROM supplied with this monitor.
- Click on the "START" icon. Next, click on the "SETTINGS" icon. Then click on "CONTROL PANEL."
- Double-click on "DISPLAY" icon. Next, click on "SETTINGS" tab. Then click on "ADVANCED PROPERTIES" dialog box.
- Click on "MONITOR" tab.
- 5a. If you have an old computer, click on "CHANGE" dialog box. Next, "SELECT DEVICE" screen appears. Now click on "HAVE DISK" dialog box. and select CD-ROM drive
Or
5b. If you have a new computer, "SELECT DEVICE" screen automatically appears. Click on "HAVE DISK" dialog box and select CD-ROM drive.
- Select "OK" in the "INSTALL FROM DISK" dialog box. If model name of the Philips monitor is correct, click "OK" tab in the "SELECT DEVICE" dialog box.
- Click "CLOSE" tab in the "ADVANCED PROPERTIES" dialog box. If your Windows '95 version is different or you need more detailed installation information, please refer to the Windows '95 user's manual. **For additional information on the monitor, please refer to the owner's manual.**

Si vous avez Windows '95...

suivez les étapes suivantes pour terminer l'installation de votre moniteur.

- Démarrer Windows 95 et installer le CD-ROM fournit avec votre moniteur.
- Cliquer sur l'icône "DÉMARRER", ensuite, cliquer sur l'icône "PARAMETRES", puis cliquer sur l'icône "Panneau de configuration".
- Cliquer deux fois sur l'icône "AFFICHER", ensuite cliquer sur l'onglet "PARAMETRES", puis cliquer sur la boîte de dialogue "PROPRIETES AVANCEES".
- Cliquer sur l'onglet "MONITEUR".
- 5a. Si vous avez un ancien ordinateur, cliquer sur la boîte de dialogue "CHANGER". ensuite l'écran "SELECTIONNER UNITE" apparaît. Maintenant cliquer sur la boîte de dialogue "DISQUETTE FOURNIE", et sélectionner le lecteur CD-ROM.
ou
5b. Si vous avez un ordinateur récent, l'écran "SELECTIONNER UNITE" apparaît automatiquement. Cliquer sur la boîte de dialogue "DISQUETTE FOURNIE" et sélectionner le lecteur CD-ROM.
- Sélectionner "OK" dans la boîte de dialogue "INSTALLER A PARTIR DE LA DISQUETTE". Si le nom du modèle de moniteur Philips est correct, cliquer sur l'onglet "OK" dans la boîte de dialogue "SELECTIONNER UNITE".
- Cliquer sur l'onglet "FERMER" dans la boîte de dialogue "PROPRIETES AVANCEES". Si votre version Windows 95 est différente ou si vous voulez des informations plus détaillées sur l'installation, veuillez vous référer au manuel d'utilisateur de Windows 95. **Pour des informations complémentaires sur le moniteur, veuillez vous référer au manuel d'utilisateur.**

Si tiene Windows '95...

siga estos pasos para finalizar la configuración de su monitor.

- Inicie Windows '95 e instale el CD ROM que se suministra con su monitor.
- Haga clic en el icono "INICIO". Luego haga clic en el icono "CONFIGURACIÓN". Luego haga clic en "PANEL DE CONTROL".
- Haga doble clic en el icono "PANTALLA". A continuación haga clic en la etiqueta "CONFIGURACIÓN" y luego en el cuadro de diálogo "PROPIEDADES AVANZADAS".
- Haga clic en la etiqueta "MONITOR".
- 5a. Si usted tiene un ordenador viejo, haga clic en el cuadro de diálogo "CAMBIAR". Luego aparece la pantalla "SELECCIÓN DE DISPOSITIVO". Ahora haga clic en el cuadro de diálogo "UTILIZAR DISCO" y seleccione la unidad CD-ROM.
O
5b. Si tiene un ordenador nuevo, aparece automáticamente la pantalla "SELECCIONAR DISPOSITIVO". Haga clic en el cuadro de diálogo "UTILIZAR DISCO" y seleccione la unidad CD-ROM.
- Seleccione "ACEPTAR" en el cuadro de diálogo "INSTALAR DESDE DISCO". Si el nombre del modelo del monitor Philips está correcto, haga clic en la etiqueta "ACEPTAR" del cuadro de diálogo "SELECCIÓN DE DISPOSITIVO".
- Haga clic en la etiqueta "CERRAR" del cuadro de diálogo "PROPIEDADES AVANZADAS". Si su versión de Windows '95 es diferente o necesita información más detallada acerca de la instalación, consulte el manual del usuario de Windows '95. **Si desea información adicional acerca del monitor, consulte el manual del propietario.**